




# 800

(Gas/LPG)

(S/N 004000- 008399)

## Sweeper Operator Manual

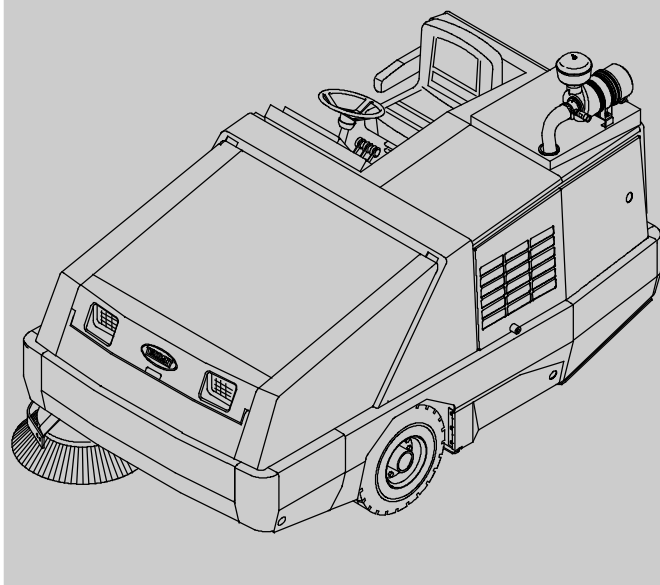

**TennantTrue® Parts**

### North America / International



For latest Parts manuals and other  
Operator language manuals, visit:

[www.tennantco.com/manuals](http://www.tennantco.com/manuals)

**330120**  
**Rev. 25 (5-2017)**



This manual is furnished with each new model. It provides necessary operation and maintenance instructions.



**Read this manual completely and understand the machine before operating or servicing it.**

This machine will provide excellent service. However, the best results will be obtained at minimum costs if:

- The machine is operated with reasonable care.
- The machine is maintained regularly - per the machine maintenance instructions provided.
- The machine is maintained with manufacturer supplied or equivalent parts.

#### PROTECT THE ENVIRONMENT



Please dispose of packaging materials, used components such as batteries and fluids in an environmentally safe way according to local waste disposal regulations.



Always remember to recycle.


#### MACHINE DATA

Please fill out at time of installation for future reference.

Model No. - \_\_\_\_\_

Serial No. - \_\_\_\_\_

Installation Date - \_\_\_\_\_

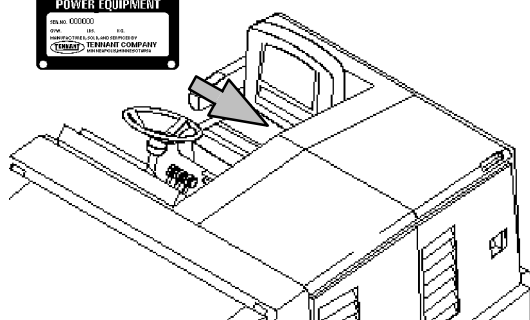

#### Tennant Company

PO Box 1452

Minneapolis, MN 55440

Phone: (800) 553- 8033

[www.tennantco.com](http://www.tennantco.com)



#### CALIFORNIA PROPOSITION 65 WARNING:

**Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.**

II Speed and Thermo Sentry are trademarks of the Tennant Company.

Specifications and parts are subject to change without notice.

Original instructions, Copyright © 1998- 2000, 2002- 2005, 2007- 2011, 2013- 2017 TENNANT Company, Printed in U.S.A.

**CONTENTS**

|                                   | Page |                                    | Page |
|-----------------------------------|------|------------------------------------|------|
| SAFETY PRECAUTIONS .....          | 3    | HOW THE MACHINE WORKS .....        | 35   |
| OPERATION .....                   | 7    | PRE-OPERATION CHECKLIST .....      | 35   |
| OPERATOR RESPONSIBILITY .....     | 7    | CHANGING AN LPG FUEL TANK .....    | 36   |
| MACHINE COMPONENTS .....          | 9    | STARTING THE MACHINE .....         | 37   |
| CONTROL PANEL SYMBOLS .....       | 10   | SWEEPING AND BRUSH INFORMATION     | 40   |
| CONTROLS AND INSTRUMENTS .....    | 12   | SWEEPING .....                     | 42   |
| OPERATION OF CONTROLS .....       | 14   | STOP SWEEPING .....                | 44   |
| DIRECTIONAL PEDAL .....           | 14   | EMPTYING THE HOPPER .....          | 45   |
| BRAKE PEDAL .....                 | 15   | STOP THE MACHINE .....             | 47   |
| PARKING BRAKE .....               | 15   | POST-OPERATION CHECKLIST .....     | 49   |
| SIDE BRUSH SWITCH .....           | 16   | ENGAGING HOPPER SUPPORT BAR ..     | 50   |
| SIDE BRUSH DOWN PRESSURE          |      | DISENGAGING HOPPER SUPPORT BAR     | 52   |
| KNOB .....                        | 16   | OPTIONS .....                      | 54   |
| HOPPER DOOR LEVER .....           | 17   | VACUUM WAND .....                  | 54   |
| HOPPER ROLLOUT LEVER .....        | 18   | REGENERATIVE FILTER SYSTEM         |      |
| HOPPER LIFT LEVER .....           | 19   | (RFS) .....                        | 58   |
| HORN BUTTON .....                 | 19   | MACHINE TROUBLESHOOTING .....      | 59   |
| CHARGING SYSTEM LIGHT .....       | 20   | MAINTENANCE .....                  | 60   |
| ENGINE OIL PRESSURE LIGHT .....   | 20   | MAINTENANCE CHART .....            | 61   |
| ENGINE WATER TEMPERATURE          |      | LUBRICATION .....                  | 63   |
| LIGHT .....                       | 20   | ENGINE .....                       | 63   |
| HOPPER TEMPERATURE LIGHT -        |      | REAR WHEEL SUPPORT .....           | 63   |
| THERMO SENTRY .....               | 20   | FRONT WHEEL BEARINGS .....         | 64   |
| MAIN BRUSH SHUT DOWN LIGHT ..     | 21   | SIDE BRUSH PIVOT PINS .....        | 64   |
| CLOGGED FILTER LIGHT .....        | 21   | MAIN BRUSH ADJUSTMENT .....        | 64   |
| HOPPER DOOR LIGHT (OPTION) ..     | 21   | HYDRAULICS .....                   | 65   |
| FUEL LEVEL GAUGE .....            | 21   | HYDRAULIC FLUID RESERVOIR ....     | 65   |
| HOURMETER .....                   | 22   | HYDRAULIC FLUID .....              | 66   |
| HAZARD LIGHT SWITCH (OPTION) ..   | 22   | HYDRAULIC HOSES .....              | 67   |
| OPERATING LIGHTS SWITCH .....     | 22   | PROPELLING MOTOR .....             | 67   |
| FILTER SHAKER SWITCH .....        | 23   | ENGINE .....                       | 67   |
| VACUUM FAN SWITCH .....           | 23   | COOLING SYSTEM .....               | 67   |
| ENGINE SPEED SWITCH (For machines |      | AIR FILTER INDICATOR .....         | 68   |
| below serial number 006000) ..... | 24   | AIR FILTER .....                   | 68   |
| IGNITION SWITCH .....             | 25   | FUEL FILTER (GASOLINE) .....       | 69   |
| CHECK ENGINE LIGHT .....          | 25   | FUEL FILTER (LPG) .....            | 69   |
| MAIN BRUSH SWITCH .....           | 26   | ELECTRONIC FUEL INJECTION (GM)     | 69   |
| STEERING WHEEL .....              | 27   | ELECTRONIC PRESSURE                |      |
| STEERING WHEEL TILT LEVER .....   | 27   | REGULATOR (LPG) (For machines      |      |
| CIRCUIT BREAKERS .....            | 28   | serial number 007000 and above) .  | 69   |
| FUSES .....                       | 29   | SPARK PLUGS .....                  | 70   |
| ENGINE CHOKE KNOB (FORD) .....    | 30   | CRANKCASE VENTILATION SYSTEM       | 70   |
| MAIN BRUSH DOWN PRESSURE          |      | INTAKE MANIFOLD (FORD) .....       | 70   |
| KNOB .....                        | 31   | TIMING BELT .....                  | 70   |
| LATCHES .....                     | 31   | BATTERY .....                      | 71   |
| OPERATOR SEAT .....               | 32   | BELTS AND CHAINS .....             | 71   |
| HOPPER SUPPORT BAR .....          | 32   | ENGINE BELT .....                  | 71   |
| WINDSHIELD WIPER SWITCH           |      | STATIC DRAG CHAIN .....            | 71   |
| (OPTION) .....                    | 33   | AIR CONDITIONING BELT (OPTION) .   | 72   |
| DOME LIGHT SWITCH (OPTION) ....   | 33   | AIR CONDITIONING FILTER (OPTION) . | 72   |
| HEATER KNOB (OPTION) .....        | 33   |                                    |      |
| FAN SPEED SWITCH (OPTION) .....   | 34   |                                    |      |
| AIR CONDITIONING SWITCH           |      |                                    |      |
| (OPTION) .....                    | 34   |                                    |      |
| AIR CONTROL VENTS (OPTION) ....   | 34   |                                    |      |

## CONTENTS

---

|                                | Page |
|--------------------------------|------|
| DEBRIS HOPPER .....            | 73   |
| HOPPER DUST FILTER .....       | 73   |
| TO REMOVE OR REPLACE           |      |
| HOPPER DUST FILTER .....       | 73   |
| THERMO SENTRY .....            | 75   |
| BRUSHES .....                  | 75   |
| MAIN BRUSH .....               | 75   |
| TO REPLACE MAIN BRUSH .....    | 75   |
| TO CHECK AND ADJUST MAIN       |      |
| BRUSH PATTERN .....            | 76   |
| SIDE BRUSH .....               | 79   |
| TO REPLACE SIDE BRUSH .....    | 79   |
| SKIRTS AND SEALS .....         | 80   |
| HOPPER LIP SKIRTS .....        | 80   |
| BRUSH COMPARTMENT SKIRTS ....  | 80   |
| REAR SKIRTS .....              | 81   |
| BRUSH DOOR SEALS .....         | 81   |
| HOPPER SEALS .....             | 81   |
| HOPPER DOOR SEALS .....        | 81   |
| HOPPER SIDE SKIRT .....        | 82   |
| HOPPER DUST SEAL .....         | 82   |
| HOPPER COVER SEAL .....        | 82   |
| HOPPER VACUUM FAN SEAL .....   | 82   |
| BRAKES AND TIRES .....         | 83   |
| SERVICE BRAKES .....           | 83   |
| PARKING BRAKE .....            | 83   |
| TIRES .....                    | 84   |
| FRONT WHEEL .....              | 84   |
| REAR WHEEL .....               | 84   |
| PUSHING, TOWING, AND           |      |
| TRANSPORTING THE MACHINE ....  | 85   |
| PUSHING OR TOWING THE          |      |
| MACHINE .....                  | 85   |
| TRANSPORTING THE MACHINE ....  | 86   |
| MACHINE JACKING .....          | 88   |
| STORING MACHINE .....          | 88   |
| SPECIFICATIONS .....           | 89   |
| GENERAL MACHINE PERFORMANCE .. | 89   |
| POWER TYPE .....               | 90   |
| STEERING .....                 | 91   |
| HYDRAULIC SYSTEM .....         | 91   |
| BRAKING SYSTEM .....           | 91   |
| TIRES .....                    | 91   |
| MACHINE DIMENSIONS .....       | 92   |
| INDEX .....                    | 93   |

## SAFETY PRECAUTIONS

The following precautions are used throughout this manual as indicated in their description:



**WARNING:** To warn of hazards or unsafe practices which could result in severe personal injury or death.



**CAUTION:** To warn of unsafe practices that could result in minor or moderate personal injury.

**FOR SAFETY:** To identify actions which must be followed for safe operation of equipment.

The machine is suited to sweep disposable debris. Do not use the machine other than described in this Operator Manual. The machine is not designed for use on public roads.

The following information signals potentially dangerous conditions to the operator or equipment:



**WARNING:** Engine emits toxic gases. Severe respiratory damage or asphyxiation can result. Provide adequate ventilation. Consult with your regulatory authorities for exposure limits. Keep engine properly tuned.



**WARNING:** Raised hopper may fall. Engage hopper support bar.



**WARNING:** Lift arm pinch point. Stay clear of hopper lift arms.



**WARNING:** Moving belt and fan. Keep away.



**CAUTION:** LPG engine will run for a few seconds after key is turned off. Apply parking brake before leaving machine.

**WARNING:** This machine contains chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.

#### FOR SAFETY:

1. Do not operate machine:
  - unless trained and authorized.
  - unless operator manual is read and understood.
  - under the influence of alcohol or drugs.

- while using a cell phone or other types of electronic devices.
- unless mentally and physically capable of following machine instructions.
- if it is not in proper operating condition.
- in flammable or explosive areas unless designed for use in those areas.
- in areas with possible falling objects unless equipped with overhead guard.

2. Before starting machine:
  - check for fuel, oil, and liquid leaks.
  - keep sparks and open flame away from refueling area.
  - make sure all safety devices are in place and operate properly.
  - check brakes and steering for proper operation.
3. When starting machine:
  - keep foot on brake and directional pedal in neutral.
4. When using machine:
  - Do not pick up burning or smoking debris, such as cigarettes, matches or hot ashes.
  - use brakes to stop machine.
  - go slow on inclines and slippery surfaces.
  - Do not sweep on ramp inclines that exceed 15% grade or transport (GVWR) on ramp inclines that exceed 15% grade.
  - use care when reversing machine.
  - move machine with care when hopper is raised.
  - make sure adequate clearance is available before raising hopper.
  - do not carry passengers on machine.
  - always follow safety and traffic rules.
  - report machine damage or faulty operation immediately.
5. Before leaving or servicing machine:
  - stop on level surface.
  - set parking brake.
  - turn off machine and remove key.

## **SAFETY PRECAUTIONS**

---


6. When servicing machine:
  - avoid moving parts. do not wear loose jackets, shirts, or sleeves.
  - block machine tires before jacking machine up.
  - jack machine up at designated locations only. Block machine up with jack stands.
  - use hoist or jack that will support the weight of the machine.
  - wear eye and ear protection when using pressurized air or water.
  - disconnect battery connections before working on machine.
  - avoid contact with battery acid.
  - avoid contact with hot engine coolant.
  - allow engine to cool.
  - keep flames and sparks away from fuel system service area. Keep area well ventilated.
  - use cardboard to locate leaking hydraulic fluid under pressure.
  - use tennant supplied or approved replacement parts.
7. When loading/unloading machine onto/off truck or trailer:
  - Turn off machine and remove key.
  - Use truck or trailer that will support the weight of the machine.
  - Do not load/unload on ramp inclines that exceed 27% grade.
  - Use winch. Do not drive the machine onto/off the truck or trailer unless the load height is 380 mm (15 in) or less from the ground.
  - Set parking brake after machine is loaded.
  - Block machine tires.
  - Tie machine down to truck or trailer.

The following safety labels are mounted on the machine in the locations indicated. If these or any label becomes damaged or illegible, install a new label in its place.


**EMISSIONS LABEL - LOCATED ON THE FRONT PANEL OF THE OPERATOR COMPARTMENT.**



**NOISE LABEL - LOCATED ON THE FRONT PANEL OF THE OPERATOR COMPARTMENT.**

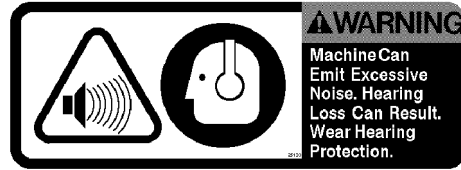

**FOR SAFETY LABEL - LOCATED ON THE FRONT PANEL OF THE OPERATOR COMPARTMENT.**

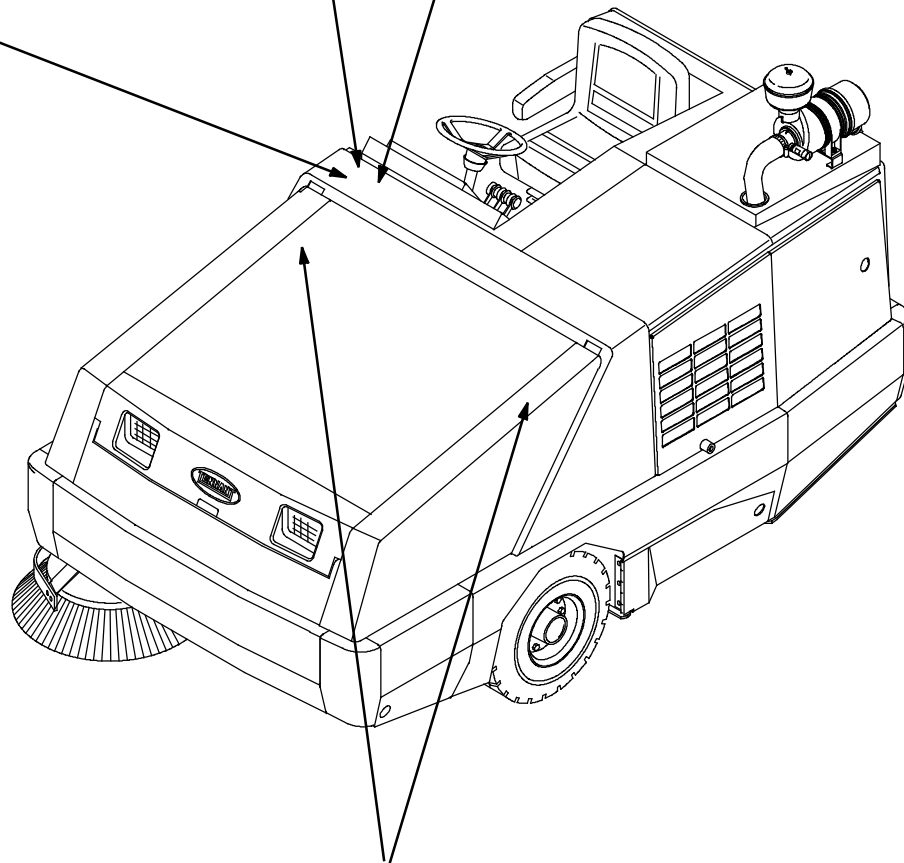


**HOPPER SUPPORT BAR LABEL - LOCATED ON THE HOPPER LIFT ARMS CROSS-TUBE AND ON BOTH HOPPER LIFT ARMS.**

## SAFETY PRECAUTIONS

LPG ENGINE LABEL - LOCATED  
NEXT TO KEYSWITCH



ENGINE FAN AND BELT LABEL - LOCATED  
ON THE RADIATOR SHROUD.

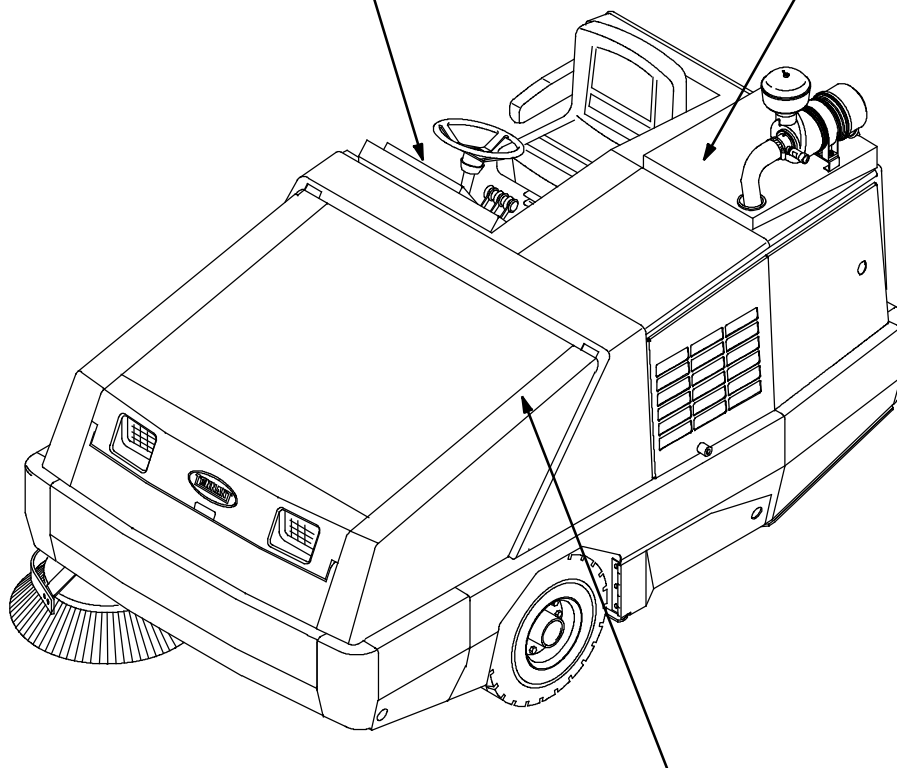

HOPPER LIFT ARMS LABEL - LOCATED ON  
BOTH HOPPER LIFT ARMS.


## OPERATION

### OPERATOR RESPONSIBILITY

- ☐ The operator's responsibility is to take care of the daily maintenance and checkups of the machine to keep it in good working condition. The operator must inform the service mechanic or supervisor when the required maintenance intervals occur as stated in the *MAINTENANCE* section of this manual.

- ☐ Read this manual carefully before operating this machine.


**FOR SAFETY: Do not operate machine, unless operation manual is read and understood.**

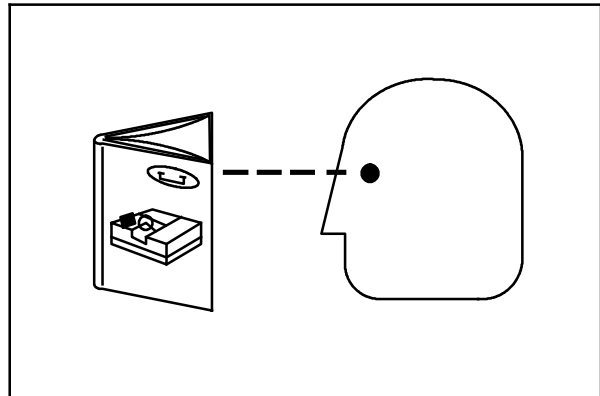

07324


- ☐ Check the machine for shipping damage. Check to make sure machine is complete per shipping instructions.

- ☐ Check the hydraulic fluid level in the hydraulic reservoir.

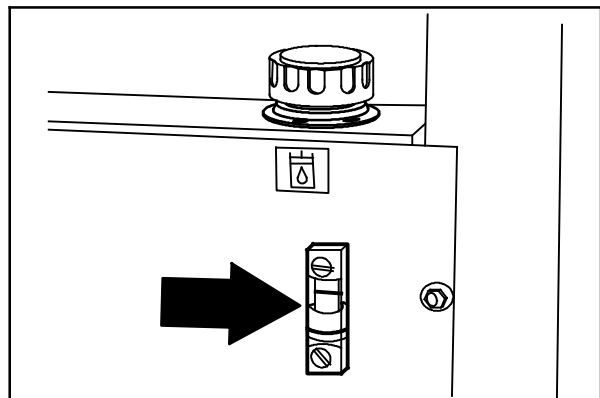

0843C


- ☐ Check the engine oil level.

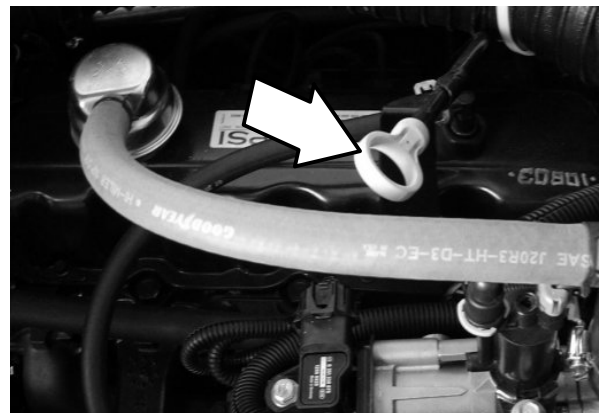

## OPERATION

- ☐ Check the radiator coolant level. The coolant level should be 25 to 50 mm (1 to 2 in) below the fill opening.

**FOR SAFETY: When servicing machine, avoid contact with hot engine coolant.**

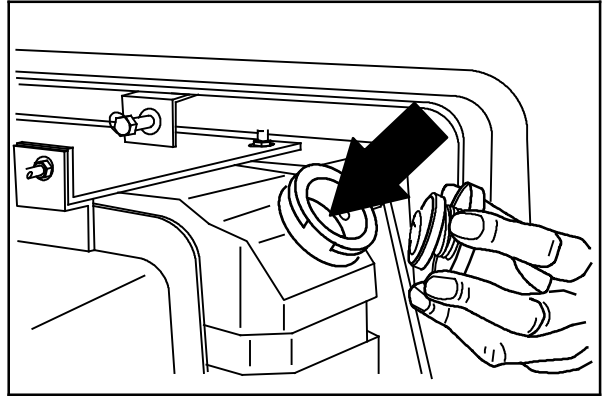


08432

- ☐ Gasoline powered machines: Fill the fuel tank.

*NOTE: Do not use leaded fuels. The use of leaded fuels will cause permanent damage to the system's oxygen sensor and the catalytic converter.*

**FOR SAFETY: When servicing machine, keep flames and sparks away from fuel system service area. Keep area well ventilated.**

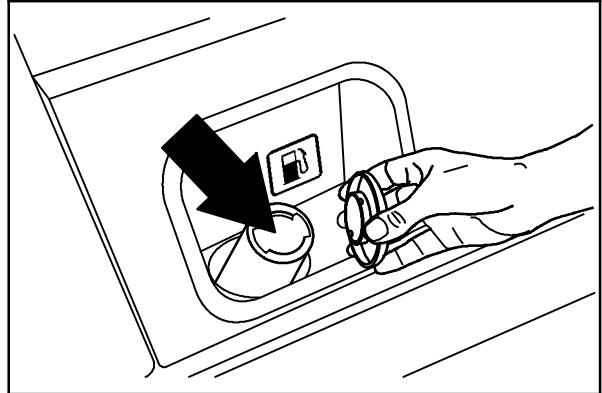


08433

- ☐ LPG powered machines: Install the LPG fuel tank on the machine. See *CHANGING AN LPG FUEL TANK*.

**FOR SAFETY: When servicing machine, keep flames and sparks away from fuel system service area. Keep area well ventilated.**

- ☐ After the first 50 hours of operation, follow the recommended procedures stated in the *MAINTENANCE CHART*.
- ☐ Keep your machine regularly maintained by following the maintenance information in this manual. We recommend taking advantage of a regularly scheduled service contract from your TENNANT representative.
- ☐ Order parts and supplies directly from your authorized TENNANT representative. Use the parts manual provided when ordering parts.

## MACHINE COMPONENTS

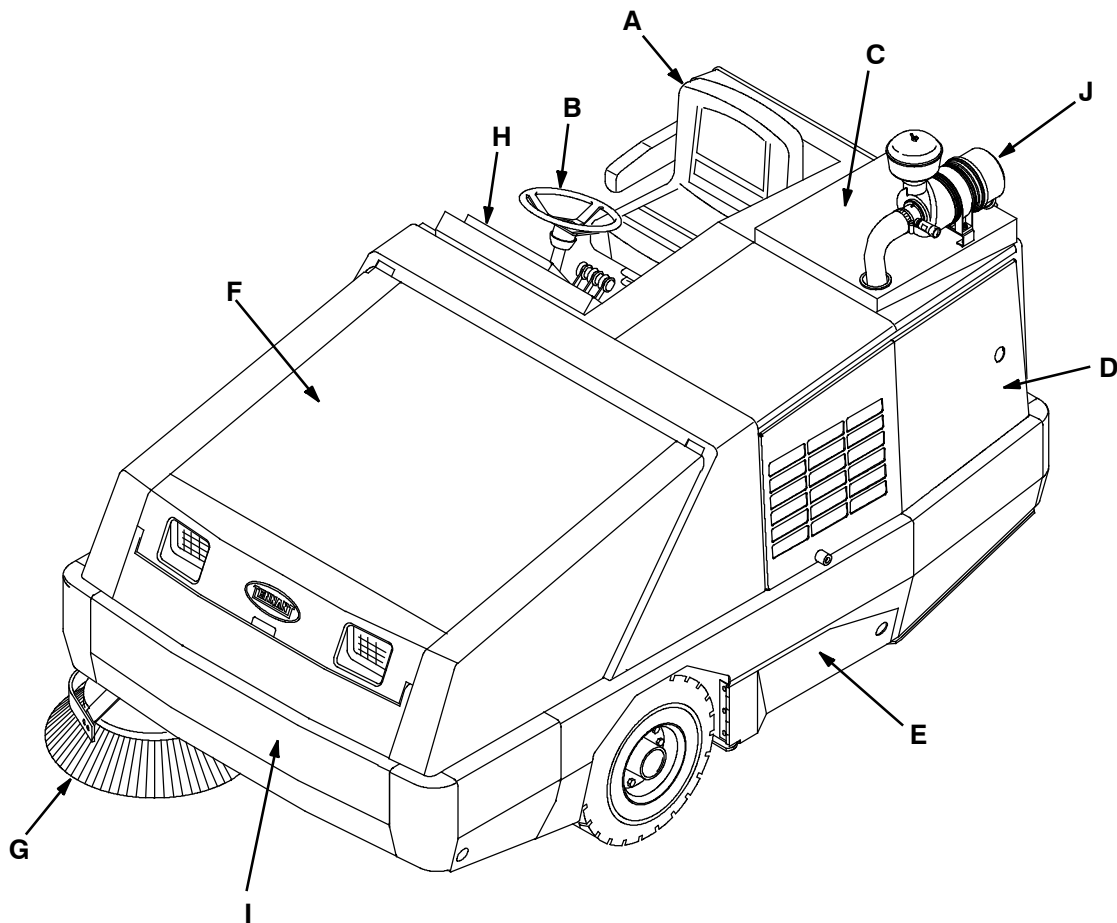

- A. Operator Seat
- B. Steering Wheel
- C. Engine Cover
- D. Engine Side Door
- E. Main Brush Access Door
- F. Hopper Cover
- G. Side Brush
- H. Instrument Panel
- I. Hopper Door
- J. Air Filter Assembly

07623

## CONTROL PANEL SYMBOLS

These symbols identify controls and displays on the machine:



Side Brush Down Pressure Light



Side Brush Down Pressure Heavy



Side Brush Down and On



Side Brush Up and Off



Hopper Door Close



Hopper Door Open



Hopper Roll In



Hopper Roll Out



Hopper Down



Hopper Up



Horn



Charging System



Engine Oil Pressure



Engine Water Temperature



Hopper Temperature - Thermo Sentry™



Main Brush Shut Down



Filter Clogged



Hopper Door Closed



Fuel



Hourmeter



Hazard Light



Operating Lights



Fan



Engine Speed



Steering Wheel Tilt



Main Brush Down and II Speed™



Main Brush Off



Main Brush Down and Normal Speed



Main Brush Down Pressure Light



Main Brush Down Pressure Heavy



Circuit Breaker 1



Circuit Breaker 2



Circuit Breaker 3



Circuit Breaker 4



Circuit Breaker 5



Unleaded fuel only



Circuit Breaker 6



Circuit Breaker 7



Circuit Breaker 8



Circuit Breaker 9



Parking Brake




Hydraulic Filter Clogged



Check Engine

## CONTROLS AND INSTRUMENTS

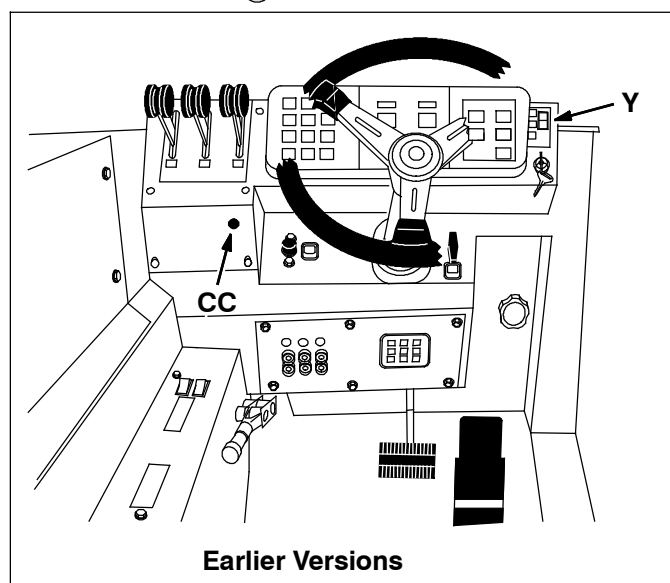


- A. Directional Pedal
- B. Brake Pedal
- C. Parking Brake Lever
- D. Side Brush Switch
- E. Side Brush Down Pressure Knob
- F. Hopper Door Lever
- G. Hopper Rollout Lever
- H. Hopper Lift Lever
- I. Horn Button
- J. Charging System Light
- K. Engine Oil Pressure Light
- L. Engine Water Temperature Light
- M. Hopper Temperature Light - Thermo Sentry™
- N. Main Brush Shut Down Light
- O. Clogged Filter Light
- P. Hopper Door Light (Option)
- Q. Fuel Level Gauge
- R. Hourmeter
- S. Hazard Light Switch (Option)
- T. Operating Light Switch
- U. Filter Shaker Switch
- V. Vacuum Fan Switch
- W. Engine Speed Switch
- X. Ignition Switch
- Y. Main Brush Switch
- Z. Steering Wheel
- AA. Steering Column Tilt Lever
- BB. Circuit Breakers
- CC. Engine Choke Knob (FORD)
- DD. Side Brush Switch, Left (Option)
- EE. Heater Cable (Option)
- FF. Clogged Hydraulic Filter Light
- GG. Check Engine Light

## OPERATION OF CONTROLS

### DIRECTIONAL PEDAL


The directional pedal controls direction of travel and the propelling speed of the machine. You change the speed of the machine with the pressure of your foot; the harder you press the faster the machine travels.

Forward: Press the top of the directional pedal with the toe of your foot.

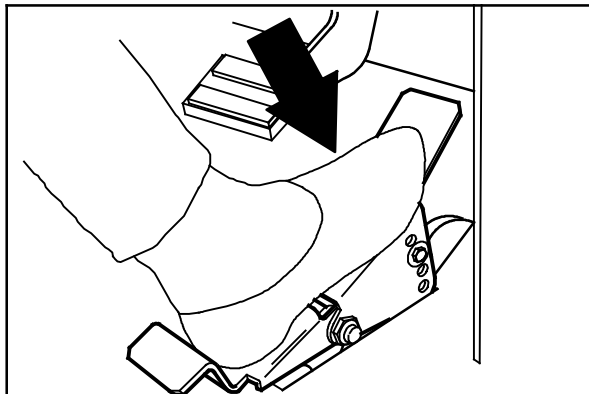


08467

Reverse: Press the bottom of the directional pedal with the heel of your foot.

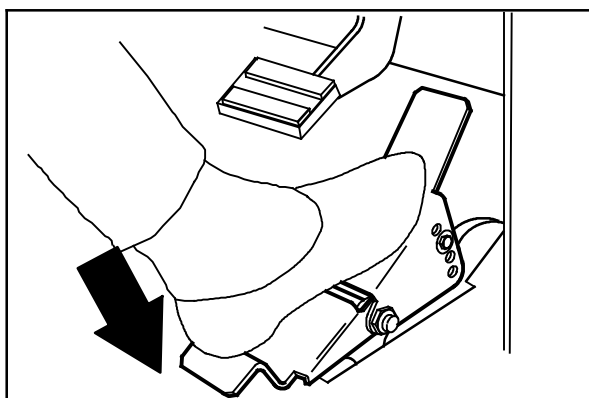


08468

Neutral: Take your foot off the directional pedal and it will return to the neutral position.

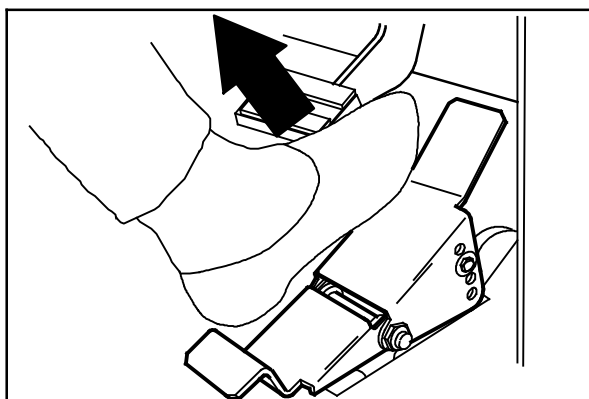

08469

The toe angle of the directional pedal is adjustable. Remove the clevis pin, move the top of the pedal to the angle needed, and put the clevis pin through the adjustment holes.

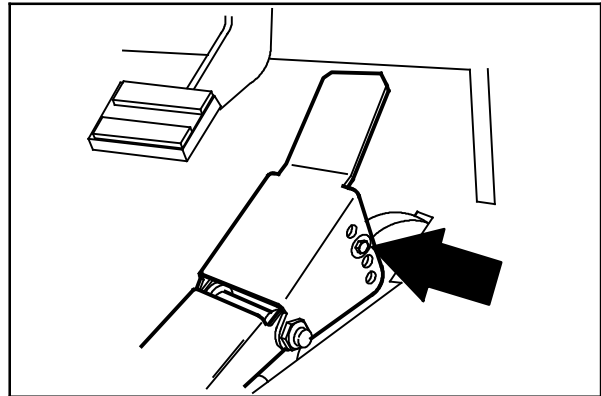


0847C

## BRAKE PEDAL

The brake pedal stops the machine.

Stop: Take your foot off the directional pedal and let it return to the neutral position. Step on the brake pedal.

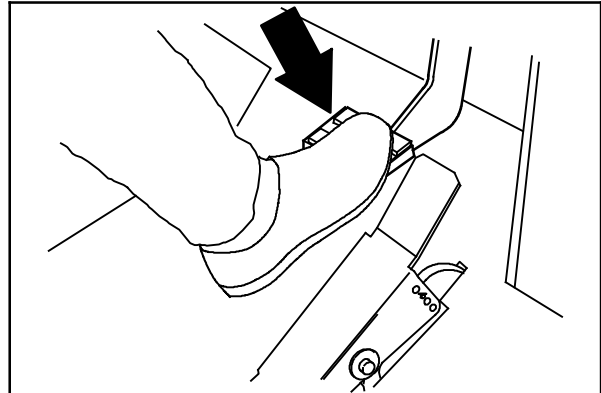

08471

## PARKING BRAKE

The parking brake lever sets and releases the front wheel brakes.

Set: Pull the parking brake lever up.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**



Release: Push the parking brake lever down.




## OPERATION

### SIDE BRUSH SWITCH

The right side brush switch controls the right side brush position and rotation. The optional left side brush switch controls the optional left side brush position and rotation.

**Down and On:** Press the top of the switch into the **On/Down** position.

**Up and Off:** Press the bottom of the switch into the **Off/Up** position.

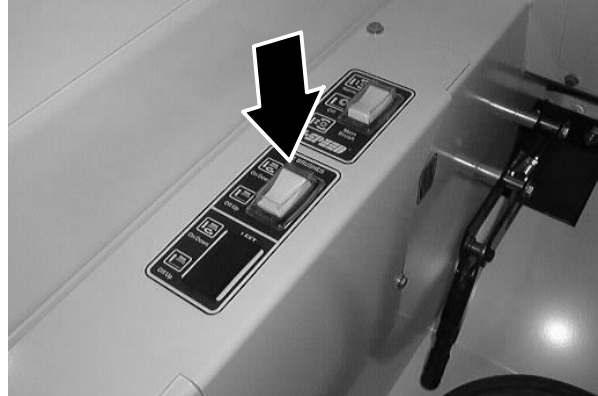


### SIDE BRUSH DOWN PRESSURE KNOB

The side brush down pressure knob changes the side brush contact with the sweeping surface.

**Increase Pressure:** Turn the side brush down pressure knob counter-clockwise.


**Decrease Pressure:** Turn the side brush down pressure knob clockwise.

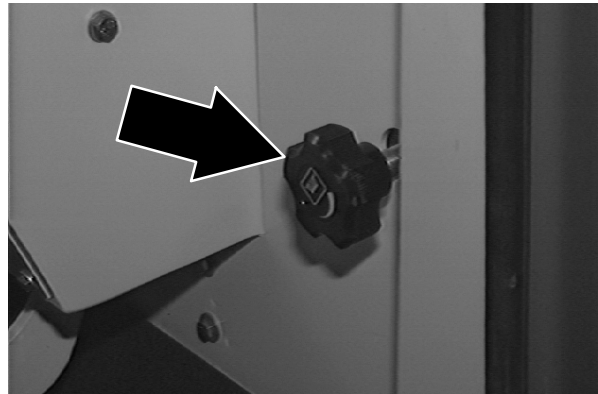

## HOPPER DOOR LEVER


The hopper door lever opens and closes the hopper door. Close the hopper door when emptying the hopper to control debris and dust.

Open: Pull and hold the hopper door lever in the **Open** position.

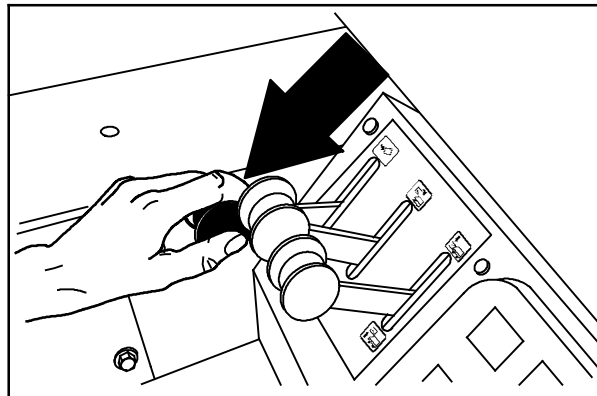


08474

Hold: Release the hopper door lever into the middle position.

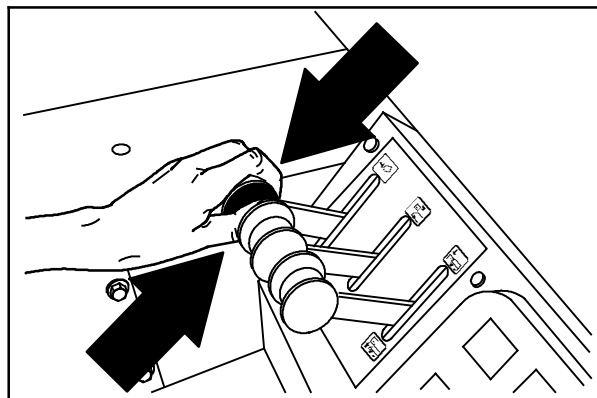

08475

Close: Push and hold the hopper door lever in the **Close** position.

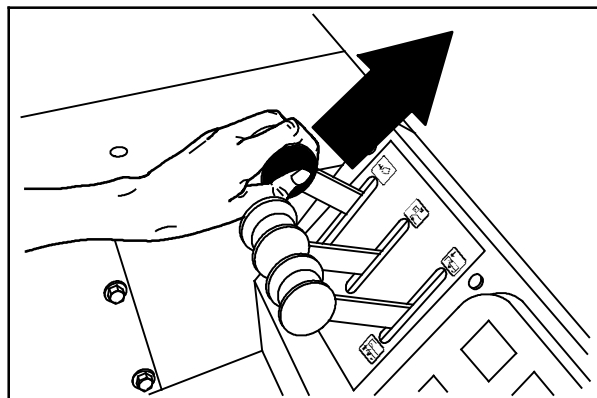


08476

## OPERATION

### HOPPER ROLLOUT LEVER


The hopper rollout lever moves the hopper in and out.

Out: Pull and hold the hopper rollout lever in the **Out** position.

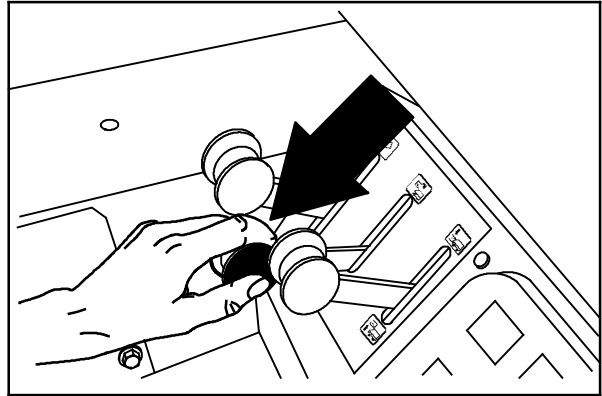


08477

Hold: Release the hopper rollout lever into the middle position.

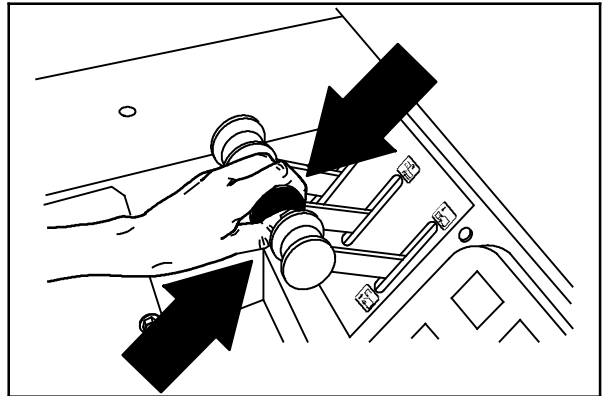

08478

In: Push and hold the hopper rollout lever in the **In** position.

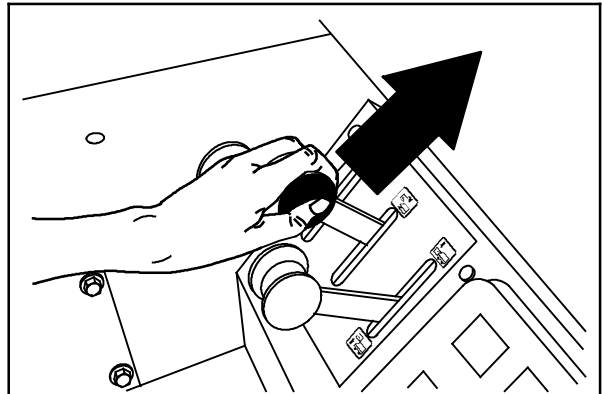


08479

## HOPPER LIFT LEVER

The hopper lift lever raises and lowers the hopper.


Raise: Pull and hold the hopper lift lever in the **Up** position.

 **WARNING: Raised hopper may fall.**  
**Engage hopper support bar.**

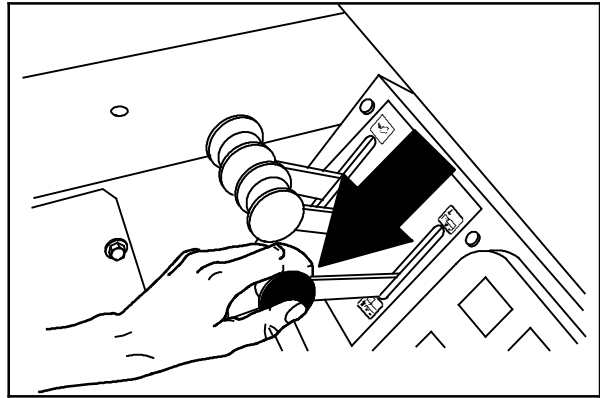


08480

Hold: Release the hopper lift lever up and into the middle position.

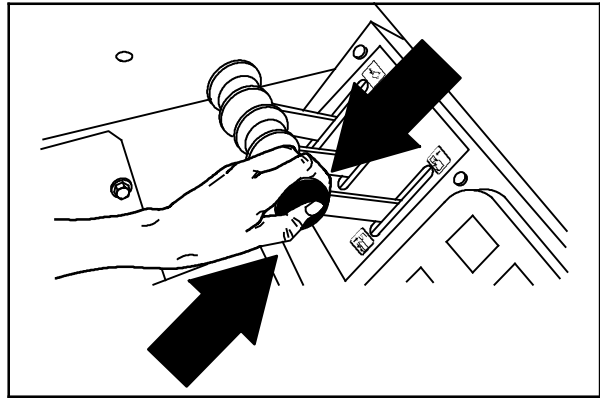

08481

Lower: Push and hold the hopper lift lever in the **Down** position.

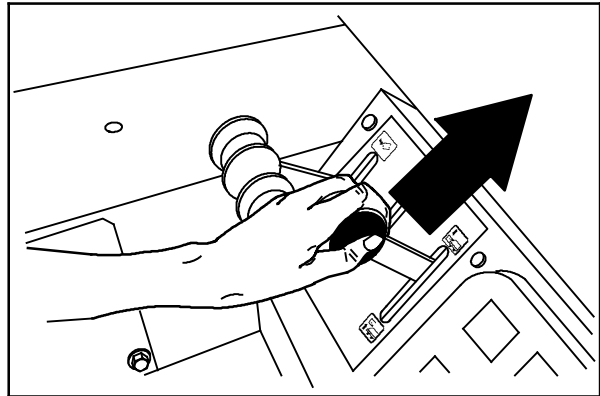


08482

## HORN BUTTON

The horn button operates the horn.

Sound: Press the button.

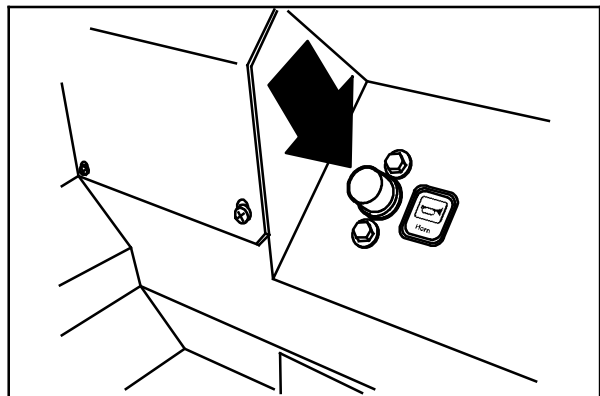


08435

## OPERATION

### CHARGING SYSTEM LIGHT


The charging system light comes on when the existing voltage potential of the battery is not within normal range (10 to 14 Volts). Stop operating the machine. Locate the problem and have it corrected.

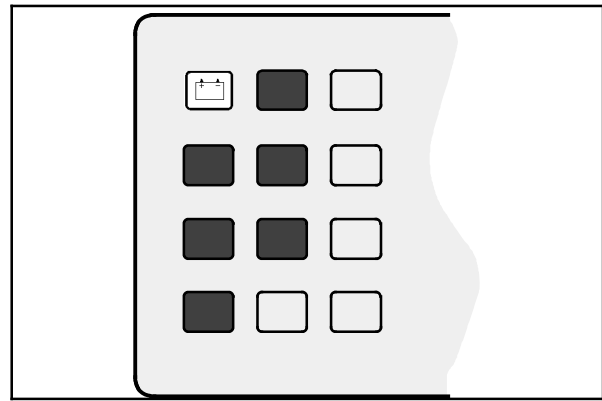

07757

### ENGINE OIL PRESSURE LIGHT


The engine oil pressure light comes on when the engine oil pressure falls below 40 kPa (5 psi). Ford engines, stop operating the machine if the oil pressure gets this low. GM engines will automatically stop if the oil pressure gets this low. The GM engine can be restarted and operated for 30 seconds after this happens. Locate the problem and have it corrected.

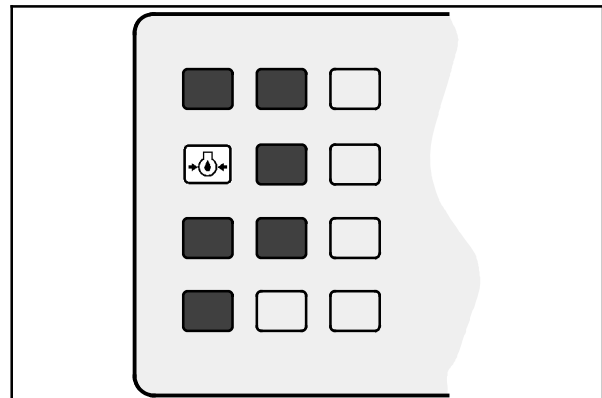

07756

### ENGINE WATER TEMPERATURE LIGHT

The engine water temperature light comes on when the temperature of the engine coolant is more than 107° C (225° F). Ford engines, stop operating the machine if the water temperature gets this high. GM engines will automatically stop when the temperature gets too high, then the light will come on. Locate the problem and have it corrected.

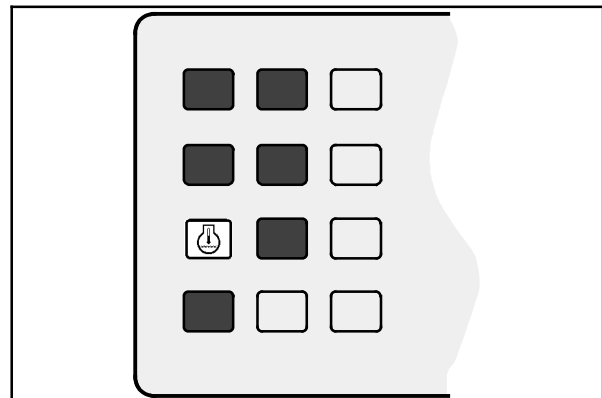


07756

### HOPPER TEMPERATURE LIGHT - THERMO SENTRY

The hopper temperature light comes on when there is too much heat in the hopper, possibly from a fire. The Thermo Sentry will stop the vacuum fan.


The Thermo Sentry has to be reset manually, see *THERMO SENTRY* in *MAINTENANCE*.

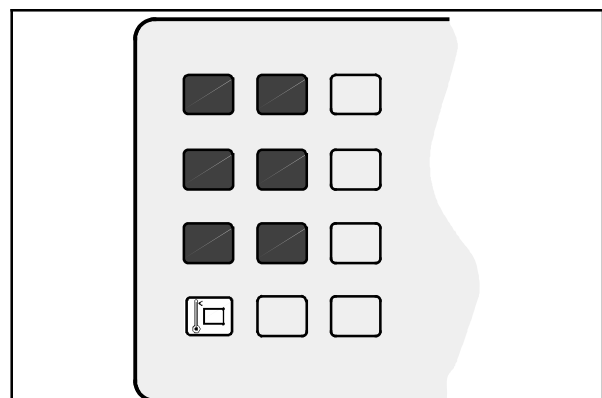

0776C

## MAIN BRUSH SHUT DOWN LIGHT

The main brush shut down light comes on when there is excessive down pressure for the main brush, or there is a problem with the main and side brush hydraulic motor circuit. The brush pressures can be reduced with the main brush and side brush pressure knobs.

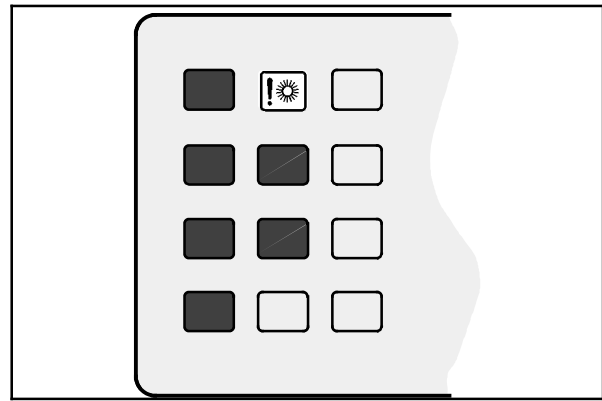


07761

## CLOGGED FILTER LIGHT

The clogged filter light comes on when the hopper dust filter is clogged. If the machine is equipped with a Regenerative Filter System (RFS) option, the light will remain on for a few seconds each time the RFS cycles.


To clean the filter, press the filter shaker switch. If the clogged filter light remains lit, manually clean the hopper dust filter. See *HOPPER DUST FILTER* in *MAINTENANCE*.

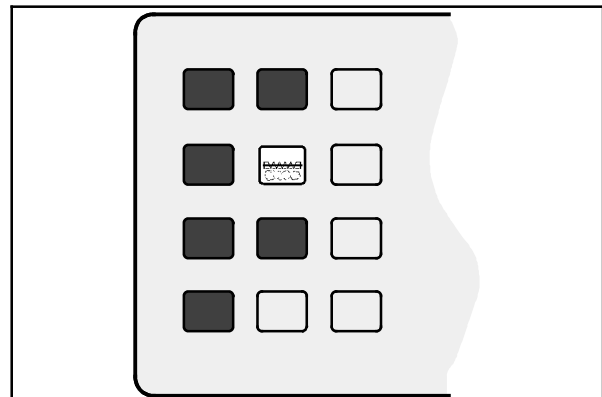

07762

## HOPPER DOOR LIGHT (OPTION)

The hopper door light comes on when the hopper door is open. Make sure the hopper door is closed and the hopper door light is off, before sweeping with the machine.

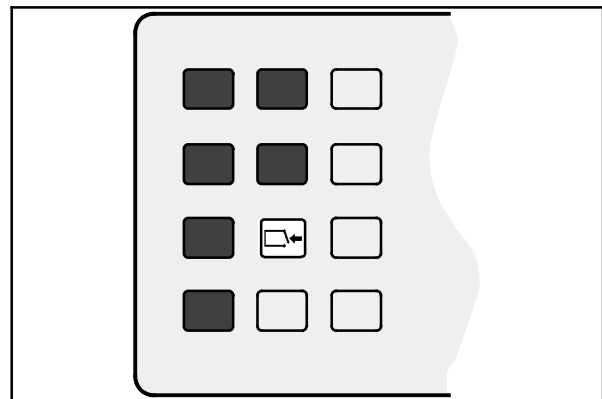

07763


## FUEL LEVEL GAUGE

The fuel level gauge indicates how much fuel is in the fuel tank with a segmented LED light.

Gasoline powered machine: When the tank is full, all ten of the segments are lit. As the fuel tank empties, the segments shut off. The fuel tank is empty when all ten of the segments have shut off.

**NOTE:** Do not use leaded fuels. The use of leaded fuels will cause permanent damage to the system's oxygen sensor and the catalytic converter.

LPG powered machine: When the tank is full, none of the segments are lit. The last two segments will flash when the tank is low on fuel or empty.

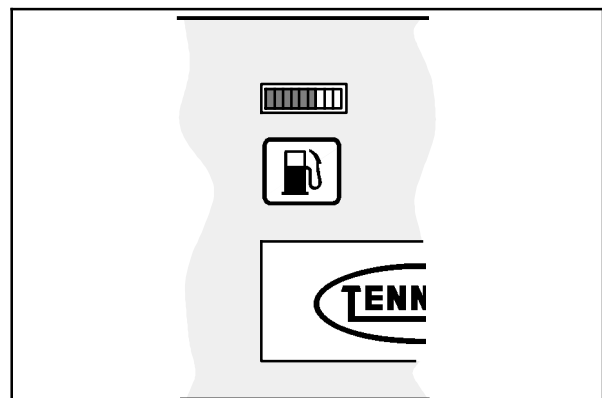


07764

## OPERATION

### HOURLMETER

The hourmeter records the number of hours the machine has been operated. Use this information to determine machine maintenance intervals.

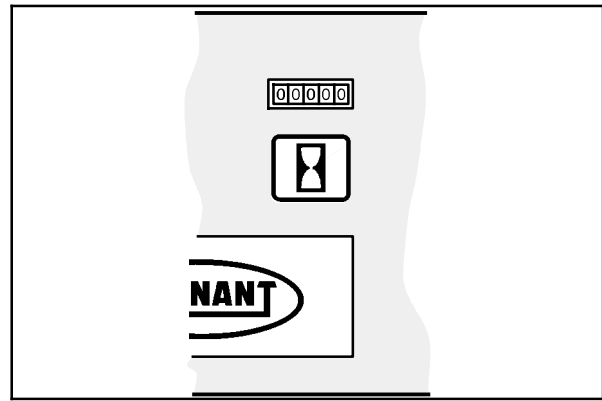


07765

### HAZARD LIGHT SWITCH (OPTION)

The hazard light switch powers on and off the hazard light.

**On:** Press the hazard light switch. The indicator light above the switch will come on.

**Off:** Press the hazard light switch. The indicator light above the switch will go off.

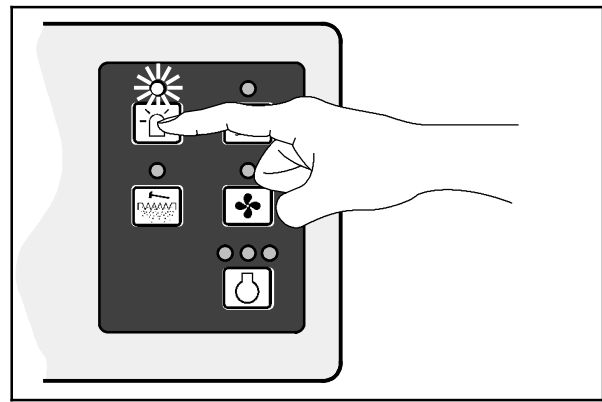


07765

### OPERATING LIGHTS SWITCH

The operating lights switch powers on and off the headlights and taillights.

**On:** Press the operating lights switch. The indicator light above the switch will come on.

**Off:** Press the operating lights switch. The indicator light above the switch will go off.

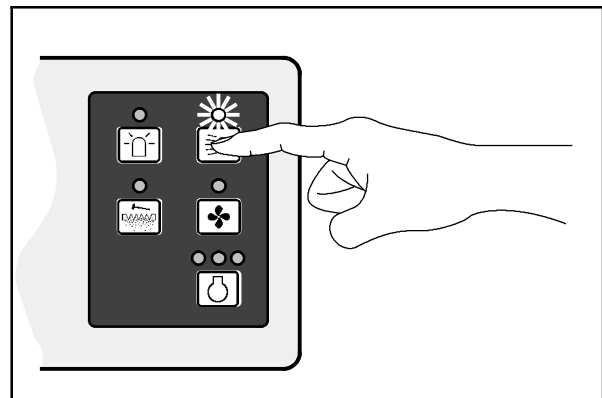

07765


## FILTER SHAKER SWITCH

The filter shaker switch starts the hopper dust filter shaker. The shaker automatically operates for 40 seconds.

**Start:** Press the filter shaker switch. The indicator light will remain on while the filter shaker is operating.

**Stop:** Press the filter shaker switch again ***IF*** wanting to stop the filter shaker during the 40 second shaking cycle.

**NOTE:** The vacuum fan shuts off while the filter shaker is operating.

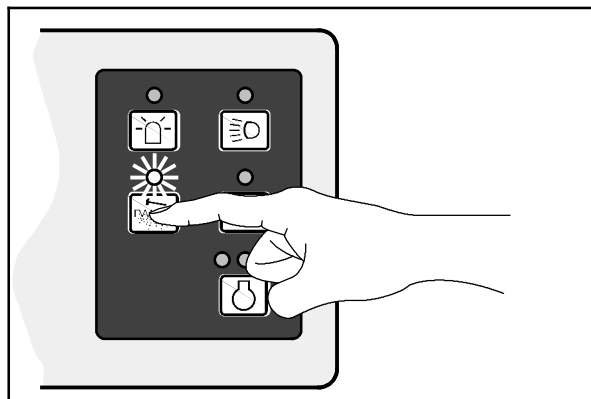


07767

## VACUUM FAN SWITCH

The vacuum fan switch starts and stops the vacuum fan.

**Start:** Press the vacuum fan switch. The indicator light above the switch will come on.

**Stop:** Press the vacuum fan switch. The indicator light above the switch will go off.

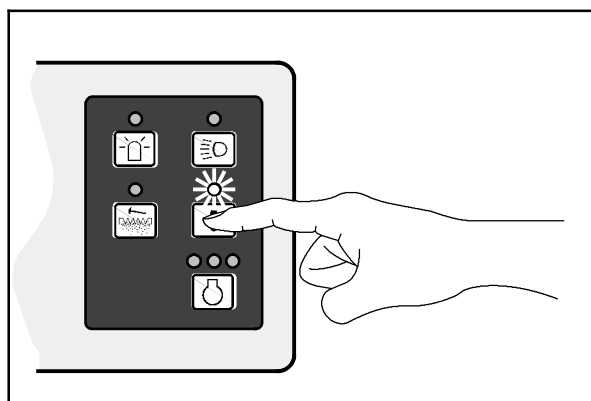


07766

## OPERATION

### ENGINE SPEED SWITCH (For machines below serial number 006000)


The engine speed switch controls engine governed speed. The three indicator lights above the switch show the engine speed; Start, Idle, or Fast.

**Start:** The engine will automatically start in the Start speed.

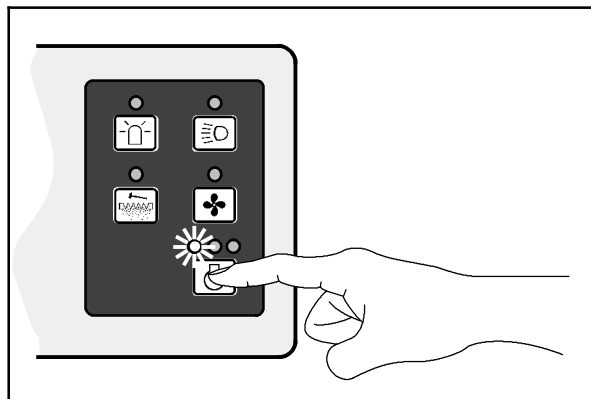


0777C

**Idle:** Press the engine speed switch until the second indicator light comes on. This speed is for idling.

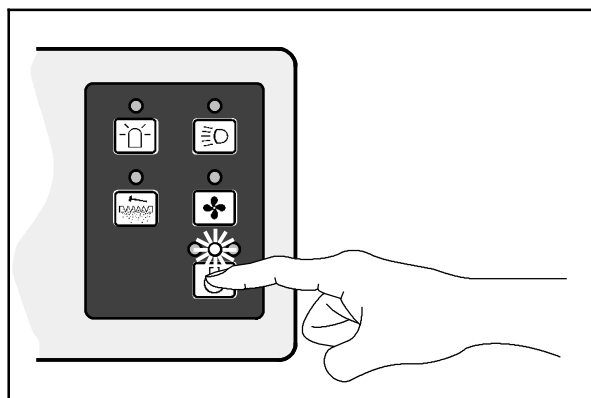

07771

**Fast:** Press the engine speed switch until the third indicator light comes on. This speed is for sweeping.

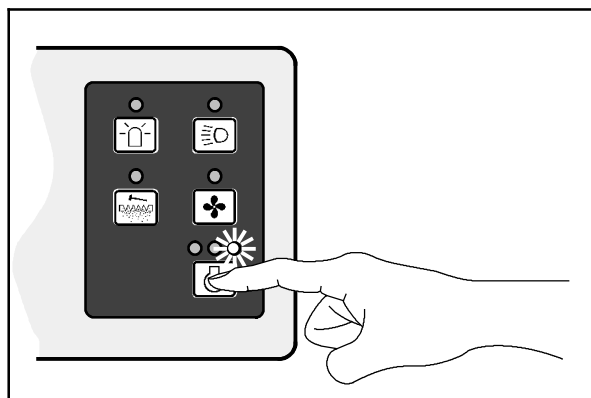

07772

## IGNITION SWITCH

The ignition switch starts and stops the engine with a key.

**Start:** Turn the key all the way clockwise. Release the key as soon as the engine starts.

**NOTE:** When restarting GM engines, you must wait 15-20 seconds before the starter motor will engage again.



**Stop:** Turn the key counter-clockwise.



**NOTE:** To protect the GM engine's emission components on the LPG powered machines serial number 006000 and above, the engine will continue to operate for a few seconds after the ignition switch is turned off.

**CAUTION:** LPG engine will run for a few seconds after key is turned off. Apply parking brake before leaving machine.



## CHECK ENGINE LIGHT

Machines serial number 006000 and above are equipped with a check engine light. The check engine light comes on if the engine control system detects a fault during machine operation.

If the check engine light comes on while operating the machine, contact a TENNANT service representative.




## OPERATION


### MAIN BRUSH SWITCH

The main brush switch controls the main brush position and rotation.


Main Brush Down and Normal Speed: Press the front **Normal** position of the switch.

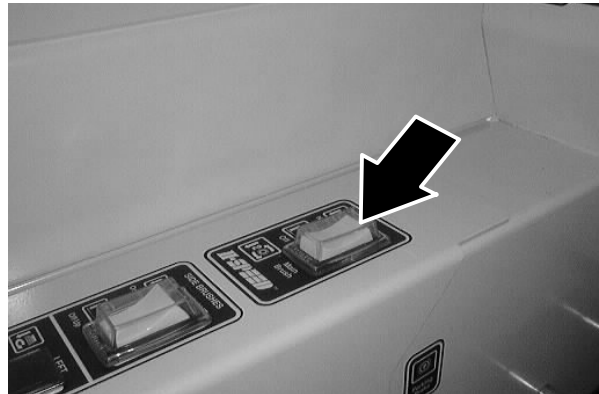

Main Brush Up and Off: Place the switch in the middle **Off** position.

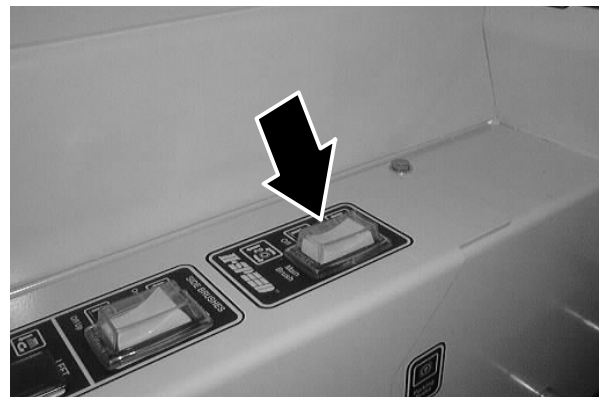


Main Brush Down and II Speed: Press the rear **II Speed** position of the switch.

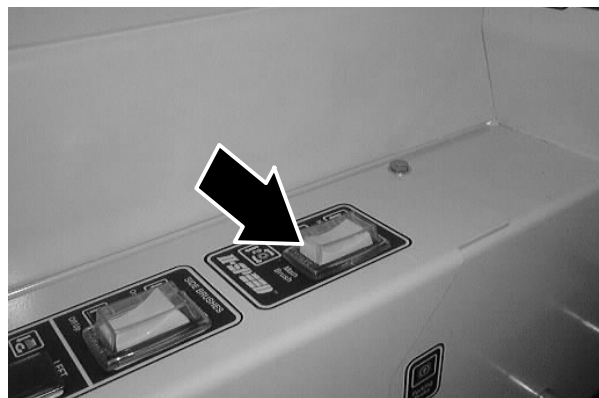

Main Brush Switch.

*NOTE: On earlier versions of the machine, the main brush switch was located by the ignition switch.*

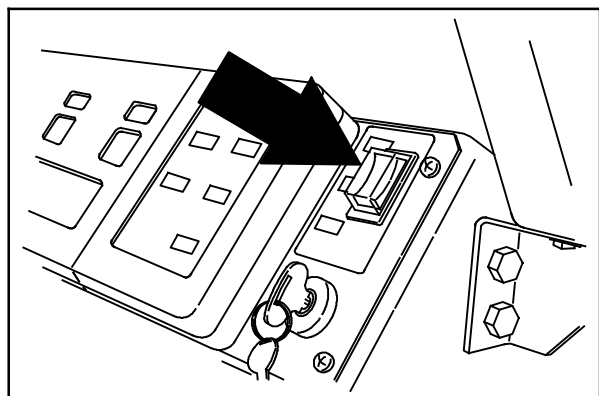


08464

**STEERING WHEEL**

The steering wheel controls the machine's direction. The machine is very responsive to the steering wheel movements.

Left: Turn the steering wheel to the left.

Right: Turn the steering wheel to the right.

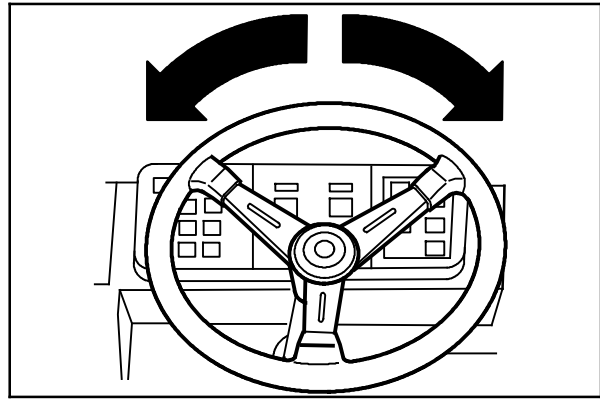


08484

**STEERING WHEEL TILT LEVER**

The steering wheel tilt lever controls the angle of the steering wheel.

Adjust: Pull out the tilt lever, move the wheel up or down, and release the tilt lever.

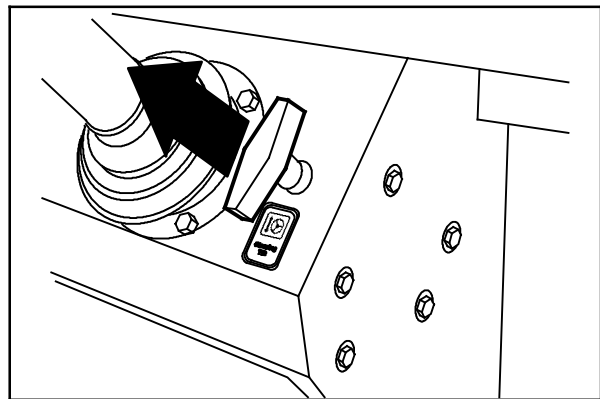

08436

## OPERATION


### CIRCUIT BREAKERS

The circuit breakers are resettable electrical circuit protection devices. Their design stops the flow of current in the event of a circuit overload. Once a circuit breaker is tripped, it must be reset manually. Press the reset button after the breaker has cooled down.

If the overload that caused the circuit breaker to trip is still there, the circuit breaker will continue to stop current flow until the problem is corrected.

All but two of the circuit breakers are located in the operator compartment. There are two 30 Amp circuit breakers located behind the circuit breaker panel that can be accessed by raising the hopper. The 30 Amp circuit breakers are self-resetting: they will reset themselves, after cooling down, after being tripped.

The chart lists the circuit breakers and the electrical components they protect.

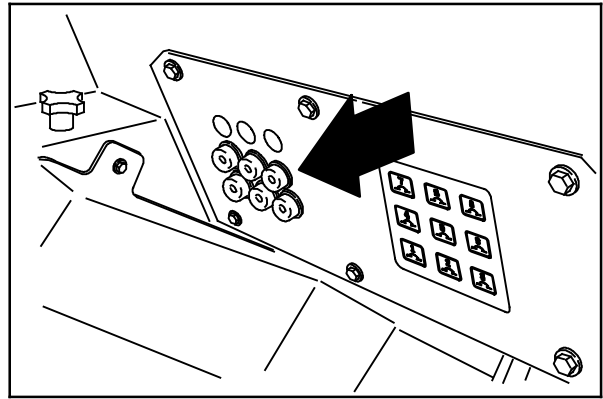

0844C

| Circuit Breaker | Rating | Circuit Protected      |
|-----------------|--------|------------------------|
| CB- 1           | 15 A   | Horn                   |
| CB- 2           | 15 A   | Filter shaker          |
| CB- 3           | 15 A   | Controls               |
| CB- 4           | 15 A   | Instrument panel       |
| CB- 5           | 15 A   | Hazard light           |
| CB- 6           | 2.5 A  | Brushes                |
| CB- 7           | 15 A   | Left side brush option |
| CB- 8           | 15 A   | Cab accessories        |
| CB- 9           | 15 A   | Accessories            |
| CB- 10          | 30 A   | AC compressor/blower   |
| CB- 11          | 30 A   | AC condenser/fans      |


## FUSES

The *fuses* are one-time protection devices designed to stop the flow of current in the event of a circuit overload.

**NOTE:** Always replace the fuse with a fuse of the same amperage.

The *engine harness fuses* are located near the engine under the engine cover. Access the fuses by opening the engine cover.

| Engine Harness Fuses |        |                      |
|----------------------|--------|----------------------|
| Fuse                 | Rating | Circuit Protected    |
| FU-1                 | 5 A    | Key switch           |
| FU-2                 | 20 A   | Main power           |
| FU-3                 | 15 A   | Auxiliary power      |
| FU-4                 | 15 A   | Fuel pump            |
|                      | 50 A   | Alternator (In-line) |

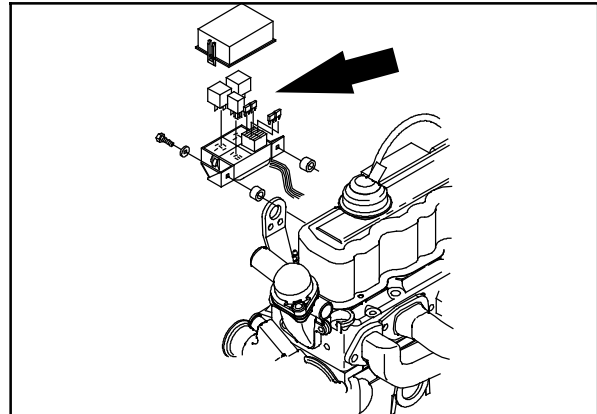


## OPERATION


### ENGINE CHOKE KNOB (FORD)

The engine choke knob controls the engine choke on gasoline powered machines.

On: For cold starting, pull the engine choke knob out.

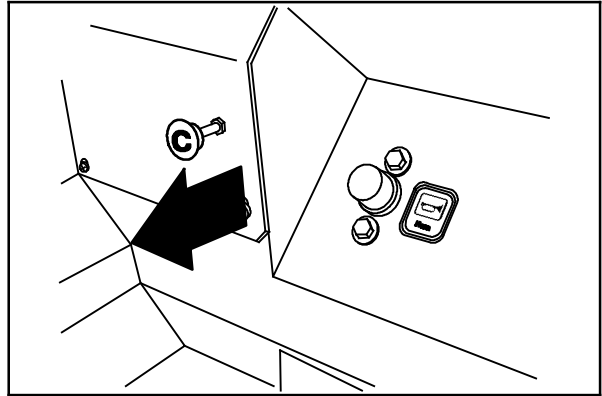


Off: Push the engine choke knob in.

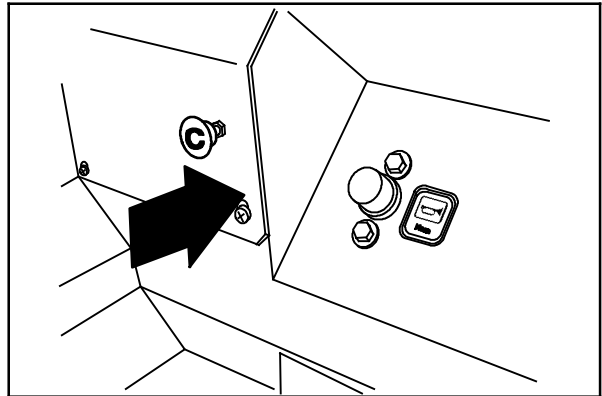

## MAIN BRUSH DOWN PRESSURE KNOB

The main brush down pressure knob changes the main brush contact with the sweeping surface.

Increase Pressure: Turn the main brush down pressure knob counter-clockwise.

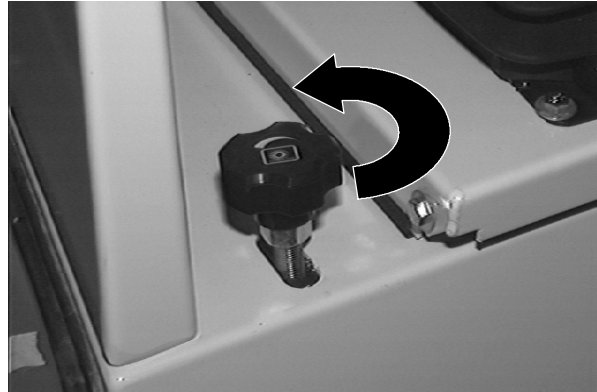

Decrease Pressure: Turn the main brush down pressure knob clockwise.



## LATCHES

The side doors, rear door, engine cover, and hopper cover are secured with latches.

Open the Main Brush Side Doors: Pull up on the door latch.


Open the Engine Side Door: Pull up on the door latch.

Open the Rear Door: Push the latch to the left.

Open the Engine Cover: Push in on the cover latch.

Open the Hopper Cover: Push the latch to the right.

Open Rear Bumper Door: Push the latch to the left.

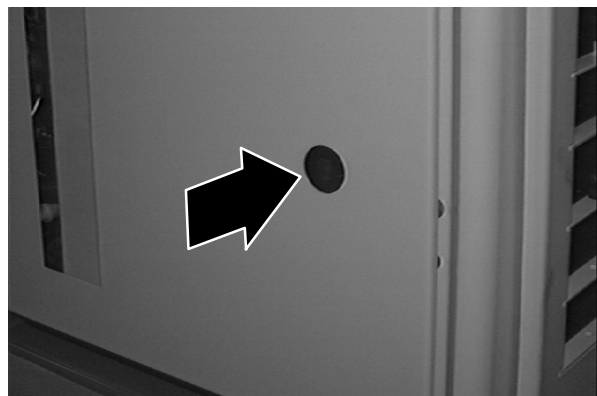


## OPERATION

### OPERATOR SEAT

The operator seat has two adjustments. The adjustments are for the front to rear seat position and ride stiffness.

The seat front-to-rear position is adjusted by the seat position lever.


Adjust: Push the lever forward, slide the seat backward or forward to the desired position and release the lever.

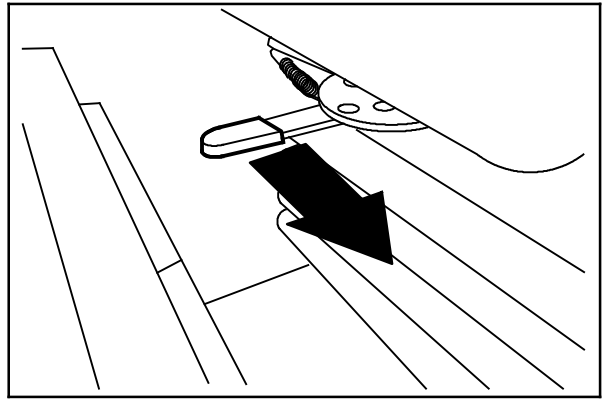

08443

The ride stiffness is adjusted with the stiffness knob.


Adjust: Turn the knob clockwise to increase the ride stiffness, and counter-clockwise to decrease the ride stiffness.

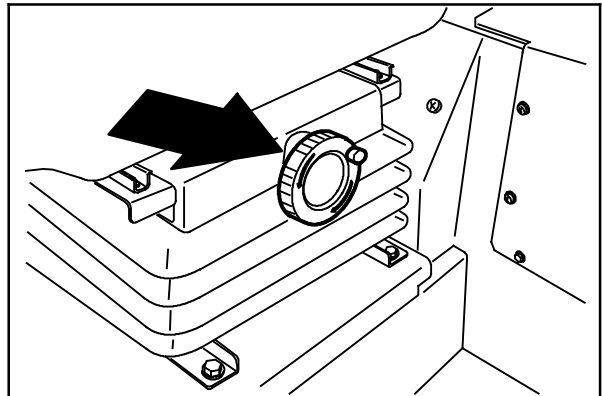

08444

Lift: Pull up on the seat mounting plate until the seat mount locks up.

Lower: Pull on the release lever and lower the seat mounting plate.

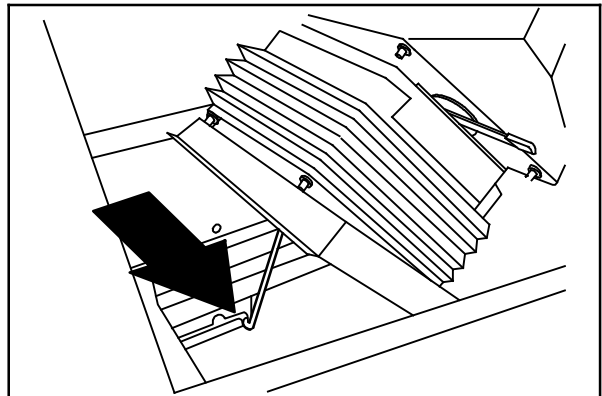


08445

### HOPPER SUPPORT BAR

The hopper support bar is located on the operator's side of the hopper. The hopper support bar holds the hopper in the raised position to allow work under the hopper. DO NOT rely on the machine hydraulic system to keep the hopper raised.

**WARNING:** Raised hopper may fall.  
Engage hopper support bar.

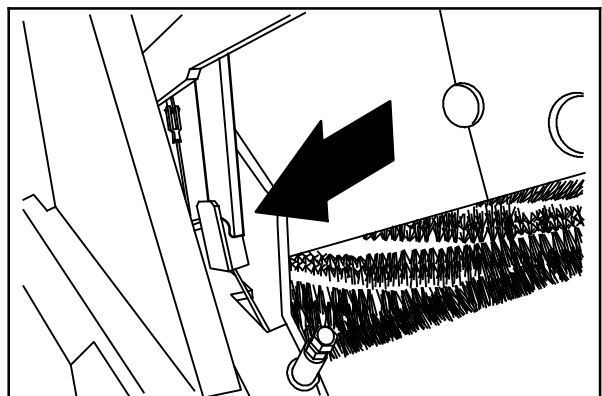


08446

### **WINDSHIELD WIPER SWITCH (OPTION)**

The windshield wiper switch operates the windshield wiper on the cab option.

On: Pull out on the switch.

Off: Push in on the switch.

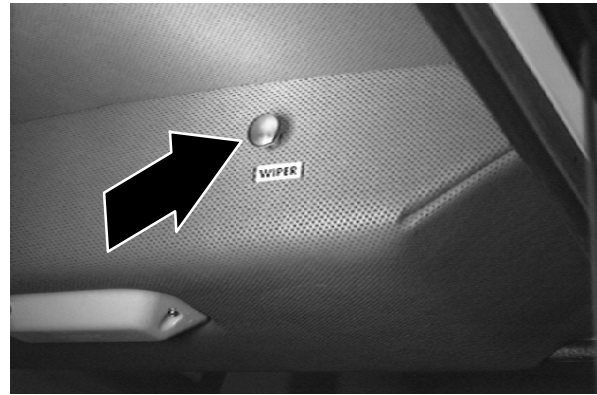

### **DOME LIGHT SWITCH (OPTION)**

The dome light switch controls the dome light on the cab option.

On: Press on the switch.

Off: Press on the switch again.




### **HEATER KNOB (OPTION)**

The heater knob controls the cab heater on the cab option. The heater knob is located above the parking brake lever.

On: Pull the knob out until the air temperature is at the desired comfort level. For maximum heat, pull the knob out all the way.

Off: Push the knob in all the way.

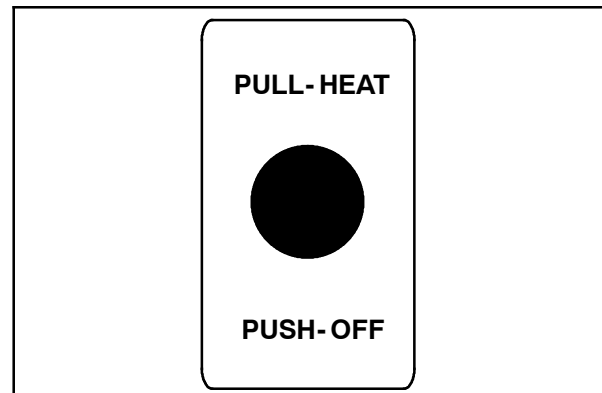

350831

## OPERATION

### FAN SPEED SWITCH (OPTION)


The fan speed switch controls the speed of the fan in the optional cab. The pressurizer can be set at three different speeds and into the **off** setting. The fan speed switch is located on the roof of the optional cab.

**High:** Turn the switch clockwise to the **high** setting.

**Medium:** Turn the switch clockwise to the **medium** setting.

**Low:** Turn the switch clockwise to the **low** setting.

**Off:** Turn the switch counter-clockwise to the **off** setting.

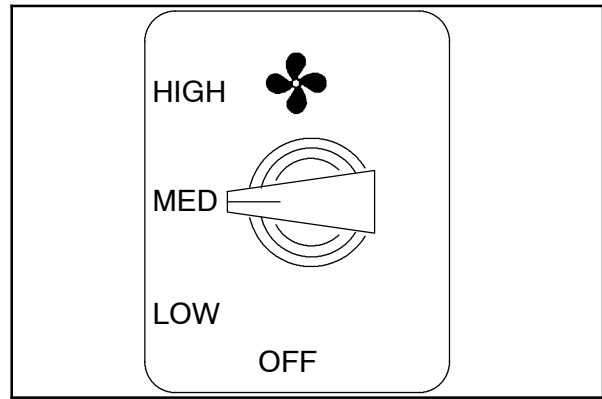


350832

### AIR CONDITIONING SWITCH (OPTION)

The air conditioning switch operates the cab's air conditioner in the optional cab. The air conditioning switch is located on the roof of the optional cab.

**On:** Turn the switch clockwise until the air temperature is at the desired comfort level. For maximum cooling, turn the switch clockwise all the way to the maximum position.


**Off:** Turn the switch counter-clockwise all the way to the **off** position.

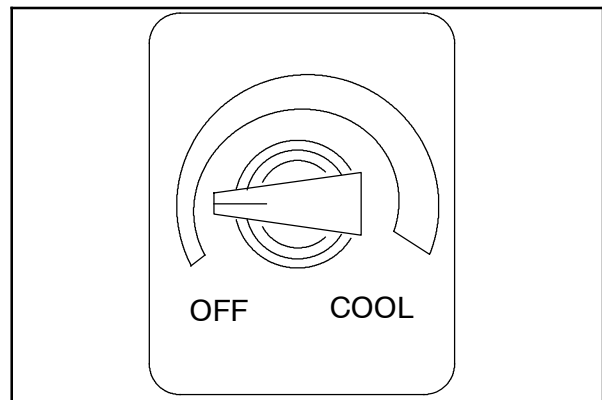

350833

### AIR CONTROL VENTS (OPTION)

The air control vents control the direction of the air flow in an optional cab. Turn the vents until they meet your desired comfort level. For defrosting, direct the air control vents onto the windows. This creates warm, dry air which works best for defrosting. If this causes the windows to fog, turn on the air conditioner for drier air.

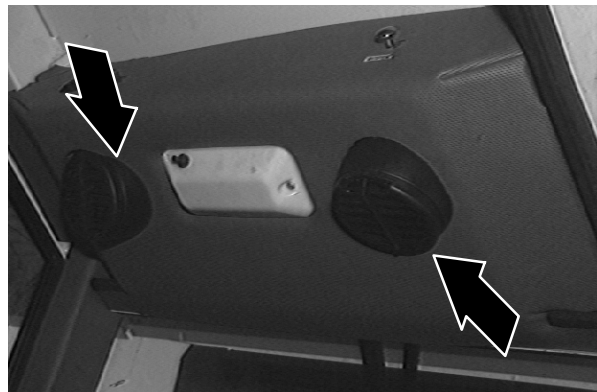

---


**HOW THE MACHINE WORKS**

---

The steering wheel controls the direction of machine travel. The directional pedal controls the speed and forward/reverse direction. The brake pedal slows and stops the machine.

The side brush sweeps debris into the path of the main brush. The main brush sweeps debris from the floor into the hopper. The vacuum system pulls dust and air through the hopper and the hopper dust filters.

When sweeping is finished, clean the hopper dust filter and empty the hopper.

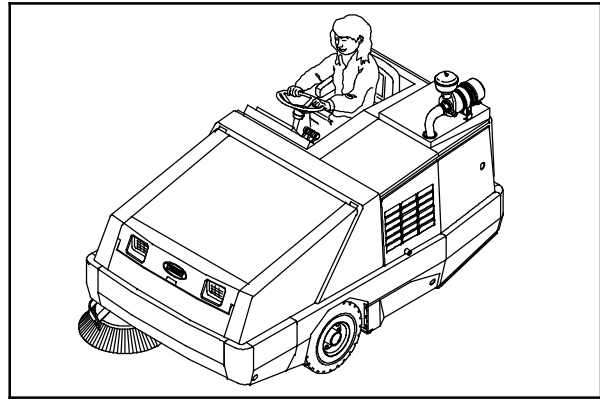

351081

---

**PRE-OPERATION CHECKLIST**

---


- ☐ Check the engine oil level.
- ☐ Check the engine coolant level.
- ☐ Check the windshield washer fluid level (when applicable).
- ☐ Check the radiator and hydraulic cooler fins for debris.
- ☐ Check the hydraulic fluid level
- ☐ Check the air filter indicator.
- ☐ Check the skirts and seals for damage and wear.
- ☐ Check the condition of the sweeping brushes. Remove any string, banding, plastic wrap, or other debris wrapped around them.
- ☐ Check the sweeping brush patterns for adjustment.
- ☐ Check the condition of the hopper dust filter and seals. Clean as required.
- ☐ Check the brakes and steering for proper operation.
- ☐ Check the fuel level
- ☐ Empty the debris hopper.
- ☐ Check the service records to determine maintenance requirements.

## OPERATION

### CHANGING AN LPG FUEL TANK

1. Park the machine in a designated safe area.
2. Close the tank service valve on the LPG tank located under the operator seat.
3. Operate the engine until it stops from lack of fuel, then set the machine parking brake.


**FOR SAFETY: When servicing machine, keep flames and sparks away from fuel system service area. Keep area well ventilated.**

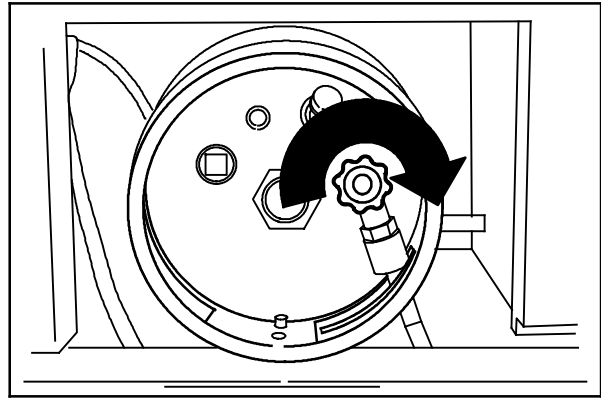

07810


4. Put on gloves and remove the quick-disconnect tank coupling.
5. Remove the empty LPG fuel tank from the machine and store the tank in a designated, safe area.

*NOTE: Make sure the LPG fuel tank matches the fuel system (liquid tank with liquid system).*

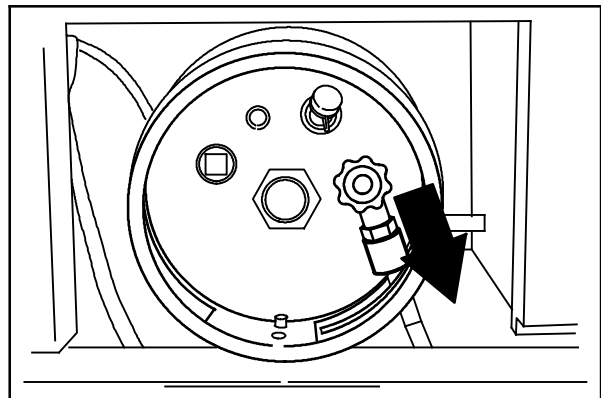


07811

6. Carefully put the filled LPG tank in the machine so that the tank centering pin enters the aligning hole in the tank collar.
7. Fasten the tank hold-down clamp to lock the tank in position.
8. Connect the LPG fuel line to the tank service coupling. Make sure the service coupling is clean and free of damage. Also make sure it matches the machine service coupling.

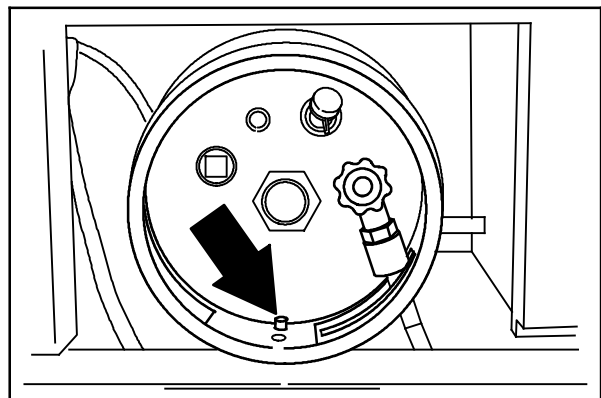


07812

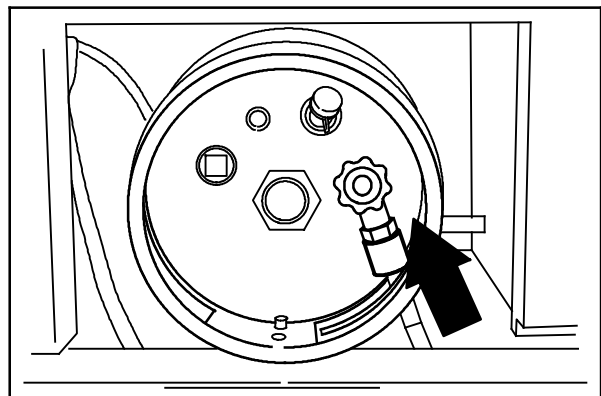

07813

9. Open the tank service valve slowly and check for leaks. Close the service valve immediately if an LPG leak is found, and tell the appropriate personnel.

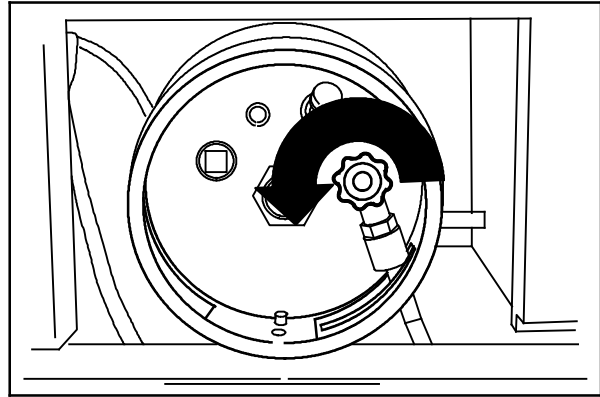


07814

## STARTING THE MACHINE

1. LPG powered machines: Open the liquid service valve slowly.


*NOTE: Opening the service valve too quickly may cause the service check valve to stop the flow of LPG fuel. If the check valve stops the fuel flow, close the service valve, wait a few seconds and open the valve slowly again.*

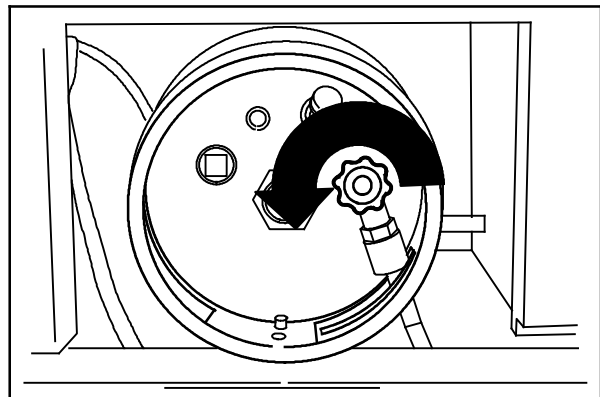

07814

2. You must be in the operator's seat with the directional pedal in neutral, and your foot on the brake pedal or with the parking brake set.

**FOR SAFETY: When starting machine, keep foot on brake and directional pedal in neutral.**

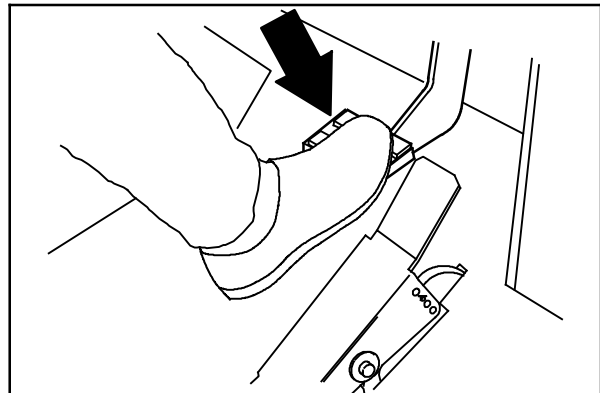


08471

## OPERATION


3. FORD Gasoline powered machines: Pull out the choke knob when the engine is cold. Push in the choke knob after the engine is running smoothly.

*NOTE: Machines with GM engines have an ECU (Electronic Control Unit) which does not require any cold starting procedures.*

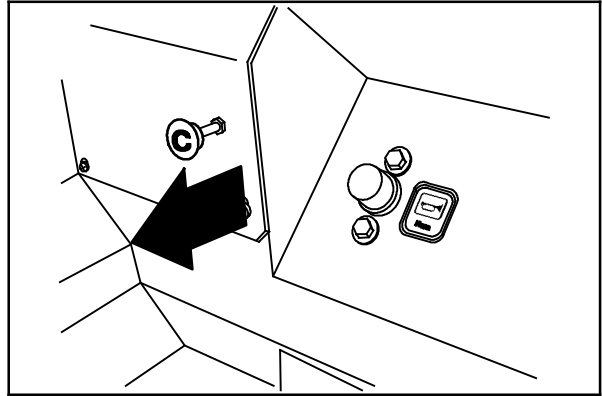


08596

FORD LPG powered machines for machines before serial number 004819: When the engine is cold and exposed to cold temperatures; open the engine cover, press the primer button on the LPG vaporizer, and close the engine cover.

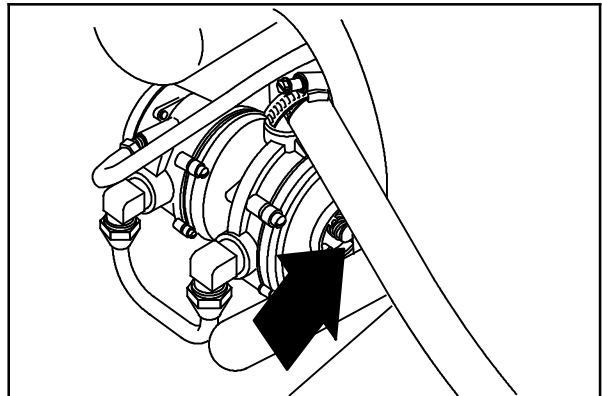

07815

FORD LPG powered machines for machines serial number 004819 to 004936: When the engine is cold and exposed to cold temperatures; open the engine cover, press the primer button on the LPG controller, and close the engine cover.

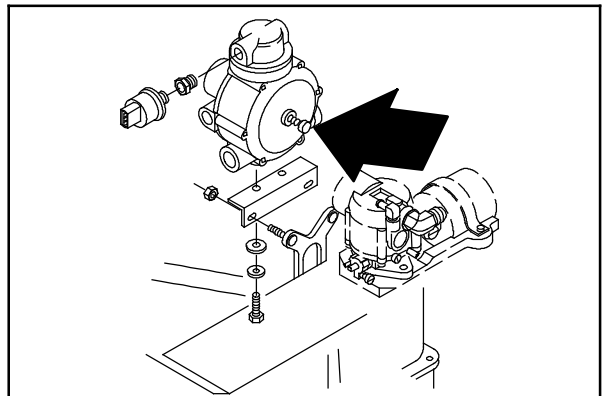

10616

4. Turn the ignition switch key clockwise until the engine starts.

*NOTE: When restarting GM engines, you must wait 15- 20 seconds before the starter motor will engage again.*

*NOTE: Do not operate the starter motor for more than 10 seconds at a time or after the engine has started. Allow the starter to cool between starting attempts or damage to the starter motor may occur.*




5. Allow the engine and hydraulic system to warm up for three to five minutes.

**! WARNING: Engine emits toxic gases. Severe respiratory damage or asphyxiation can result. Provide adequate ventilation. Consult with your regulatory authorities for exposure limits. Keep engine properly tuned.**

6. Release the machine parking brake.




7. Select the **Fast** engine speed with the engine speed switch.

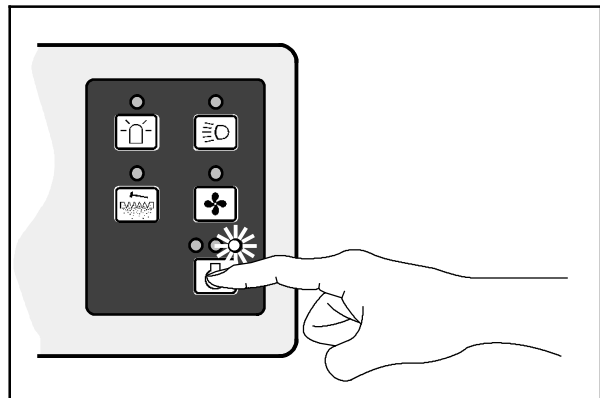

07772

8. Drive the machine to the area to be swept.

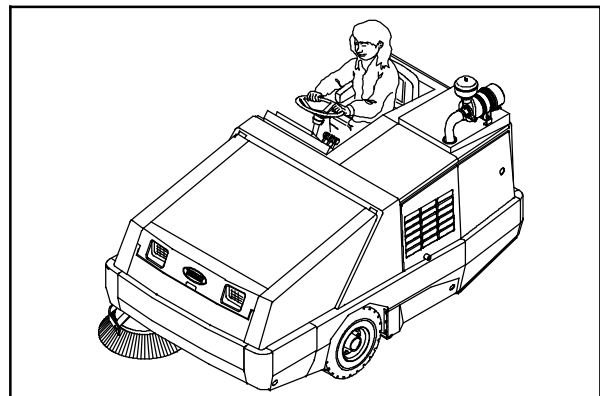

351081

### SWEEPING AND BRUSH INFORMATION

Pick up oversized debris before sweeping. Flatten or remove bulky cartons from aisles before sweeping. Pick up pieces of wire, twine, string, etc., which could become entangled in brush or plugs.

Plan the sweeping in advance. Try to arrange long runs with minimum stopping and starting. Sweep debris from very narrow aisles into main aisles ahead of time. Do an entire floor or section at one time. Sweep as straight a path as possible. Avoid bumping into posts or scraping the sides of the sweeper. Overlap the brush paths.

Avoid turning the steering wheel too sharply when the machine is in motion. The machine is very responsive to the movement of the steering wheel. Avoid sudden turns, except in emergencies.

Use main brush **II Speed** when picking up light litter. This will improve both litter pickup and hopper loading. Do not use the **II Speed** speed in dusty environments. The machine can dust and clog the hopper dust filter. Operate the main brush in the **Normal** position when picking up general debris.


For best results, use the correct brush type for your sweeping application. The following are recommendations for main and side brush applications.

***Polypropylene 8-double Row Main Brush*** -


Gives superior pickup of sand, gravel, and paper litter. Retains its stiffness when wet, and can be used indoor or out. Not recommended for high-temperature debris.

***Polypropylene and Wire 8-double Row Main Brush*** -

The wire bristles loosen slightly packed soilage and heavier debris. The polypropylene bristles sweep up the debris with excellent hopper loading.

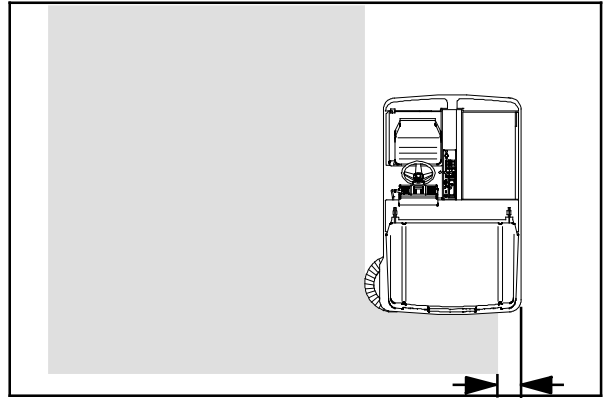

07817

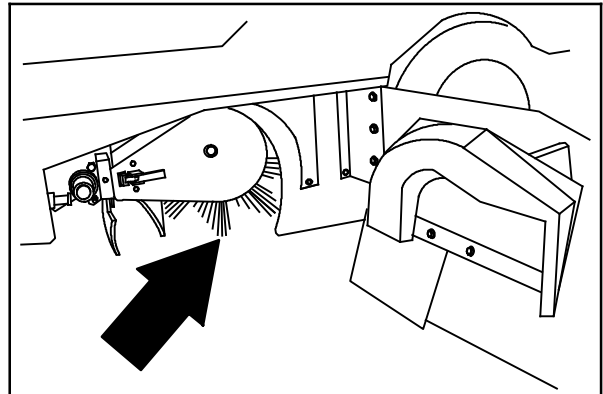

08587

**Crinkle Wire 8-double Row Main Brush** - The stiff wire bristles cut through compacted grime, hard to sweep dirt, and dirt mixed with oil, grease, or mud. This brush is recommended for foundry sweeping where heat may melt synthetic bristles. This brush has good hopper loading ability, but is not recommended for dusty applications.

**Nylon 24-row Main Brush** - Recommended for severe dust conditions on rough surfaces. This brush has excellent pickup and long life.


**Nylon Patrol Main Brush** - Designed for sweeping large indoor or outdoor areas at higher speed. The patrol pattern gives excellent loading of light bulky debris (leaves and paper), while the nylon bristle gives long life.

**Heavy Gauge Polypropylene 8-double Row Main Brush** - Designed for sweeping outdoor areas. The stiffer bristles allow excellent loading of heavier bulky debris (leaves and paper litter).

**Polypropylene Side Brush** - A good general purpose brush for sweeping of light to medium debris in both indoor and outdoor applications. This brush is recommended when bristles may get wet.

**Nylon Side Brush** - A longer life, general purpose brush that is recommended for rough surfaces.


**Flat Wire Side Brush** - Recommended for outside and curb-side sweeping where soilage is heavy or compacted. The stiff wire bristles dig out soilage. This brush is also recommended for foundry sweeping where heat may melt synthetic bristles.

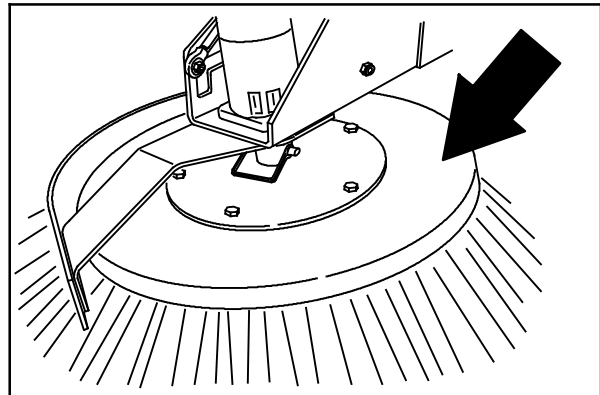

08586


## SWEEPING

1. Select **Fast** engine speed. (For machines below serial number 006000)

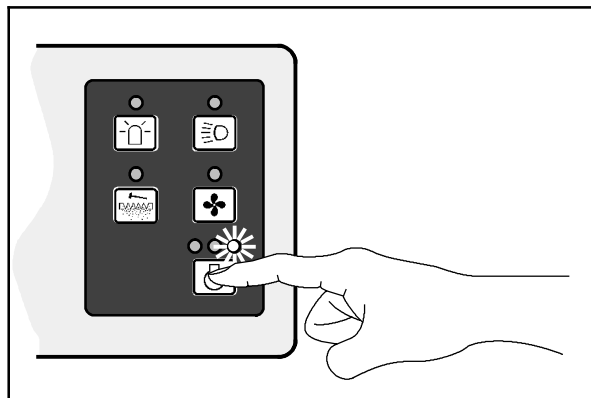


07772

2. The hopper door has to be closed during sweeping. If your machine has the hopper door light option, make sure the hopper door light is off. If the hopper door light is on, close the hopper door.

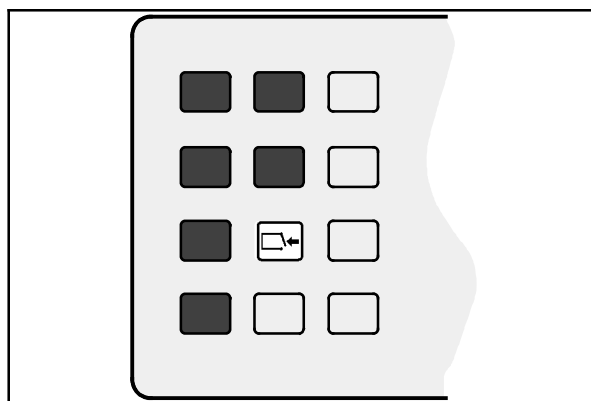


07763


3. Place the main brush switch in the **Normal** or **II Speed** position.

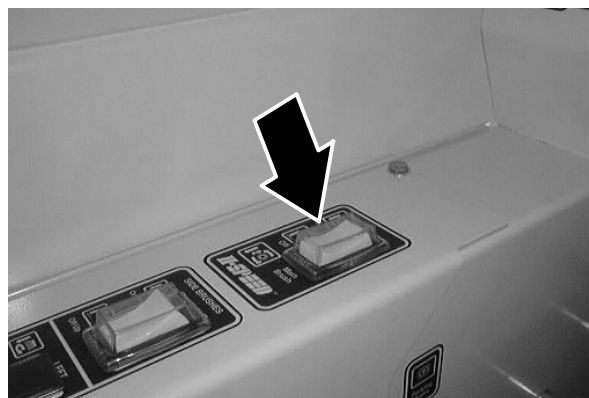

4. Push the top of the side brush switch into the **On/Down** position.

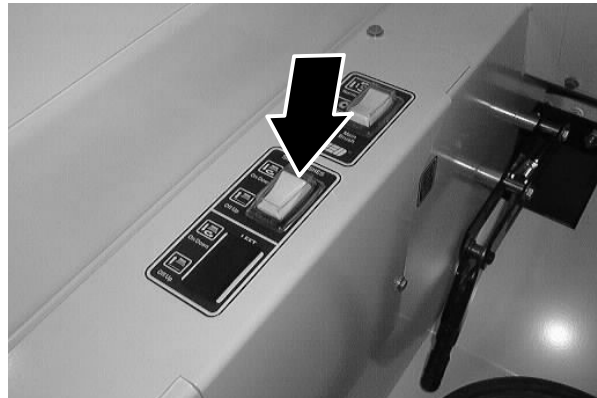


5. Press the vacuum fan switch to start the vacuum.
6. Sweep as needed.

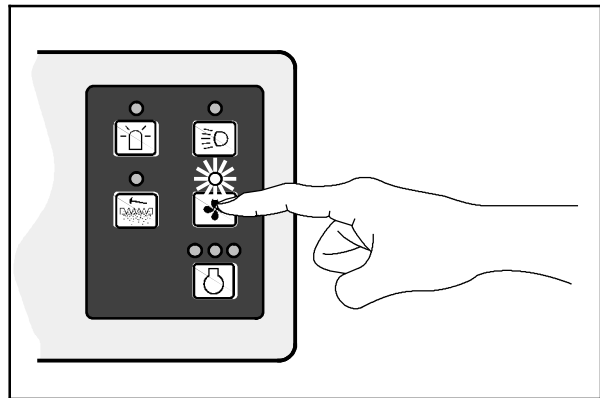


07766

### STOP SWEEPING


1. Push the bottom of the side brush switch into the **Off/Up** position.

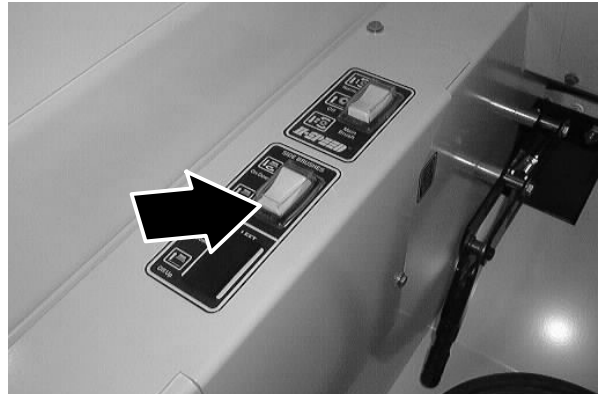

2. Place the main brush switch in the middle **Off** position.

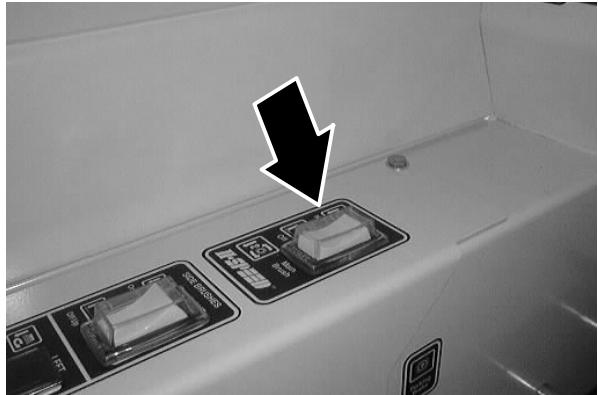


3. Press the filter shaker switch to shake the hopper dust filter.

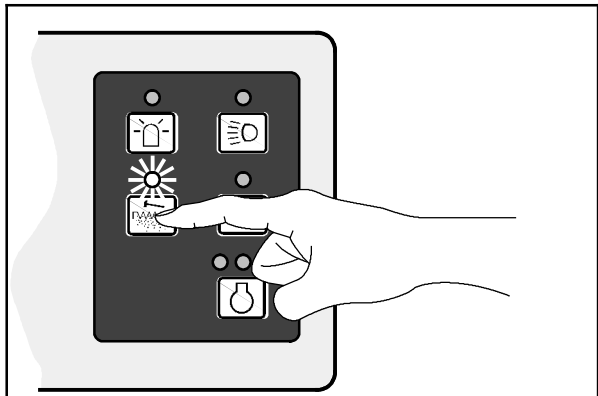

07767

## EMPTYING THE HOPPER

1. Slowly drive the machine to the debris site or debris container.

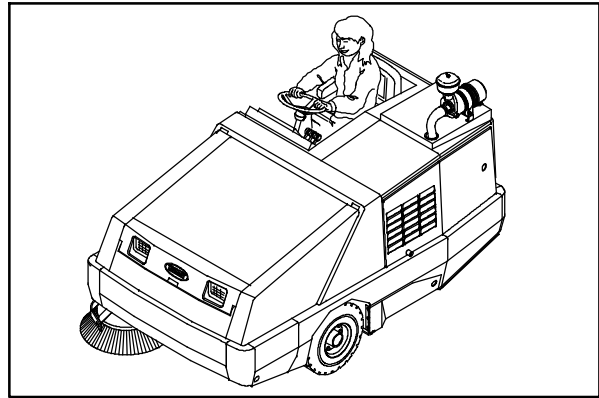


351081

2. Pull and hold the hopper lift lever in the **Up** position and raise the hopper to the desired height.

**FOR SAFETY: When using machine, make sure adequate clearance is available before raising hopper.**

*NOTE: Be aware that the minimum ceiling height needed to high dump the hopper is 3355 mm (11 ft).*

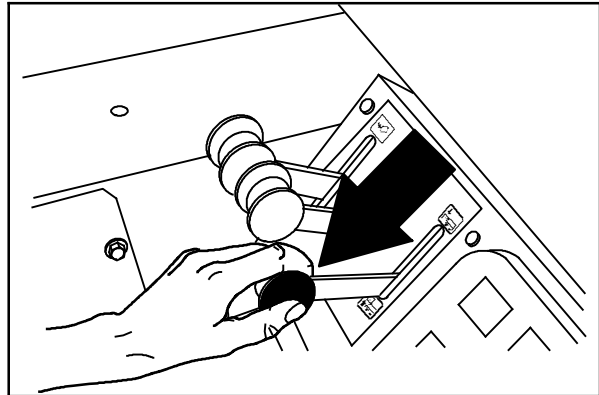


0848C

3. Release the hopper lift lever up and into the middle (Hold) position.


4. Drive the machine up to the debris container.

**FOR SAFETY: When using machine, move machine with care when hopper is raised.**

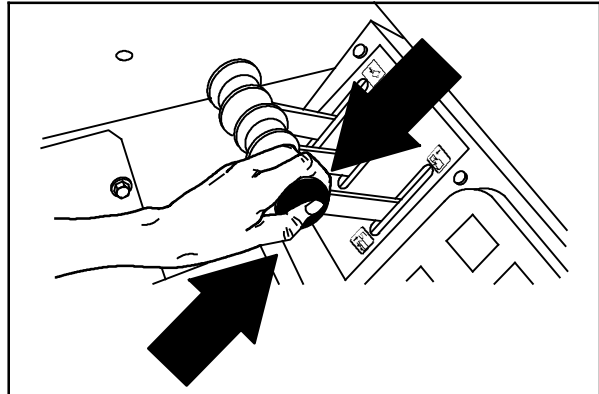

08481

5. Pull and hold the hopper rollout lever into the **Out** position.
6. Lower the hopper into the debris container to control dust.

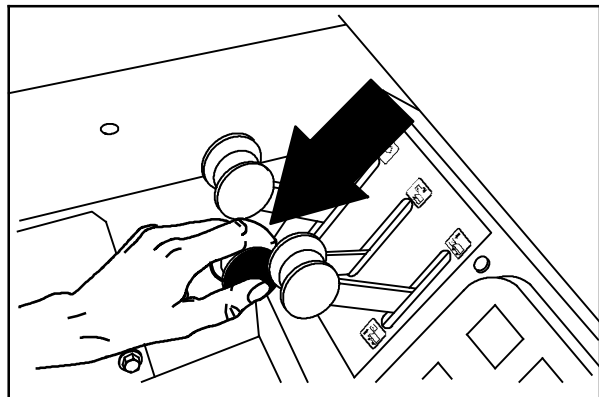


08477

## OPERATION


7. Pull and hold the hopper door lever into the **Open** position.
8. Raise the hopper enough and/or close the hopper door to clear the top of the debris container.
9. Slowly back the machine away from the debris site or debris container.

**FOR SAFETY: When using machine, move machine with care when hopper is raised.**

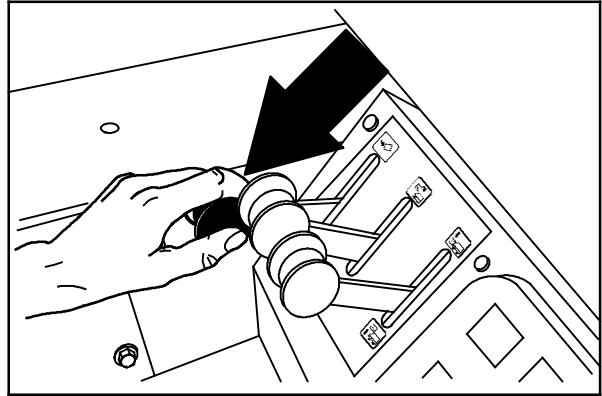


08474

10. Push and hold the hopper door lever into the **Close** position.

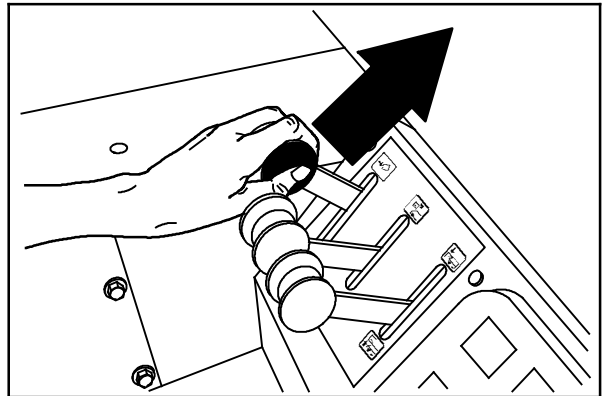

08476


11. Push and hold the hopper rollout lever into the **In** position.

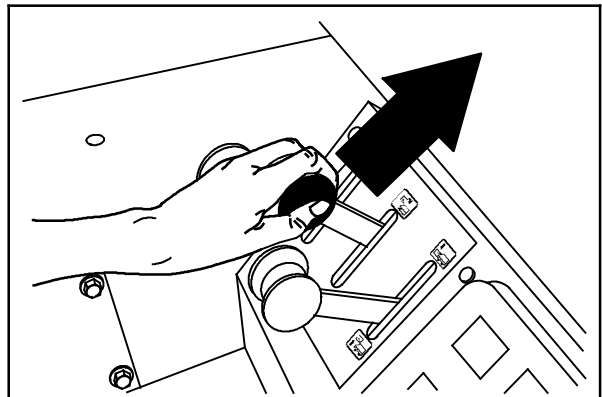

08475

12. Push and hold the hopper lift lever in the **Down** position.


*NOTE: The hopper lift lever, hopper rollout lever, and the hopper door lever can be use together to lift the hopper, rollout the hopper, and open the hopper door.*

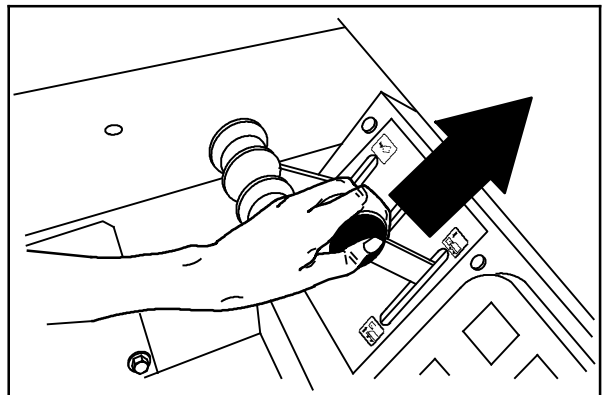

08482


## STOP THE MACHINE

1. Stop sweeping.
2. Take your foot off the directional pedal. Step on the brake pedal.

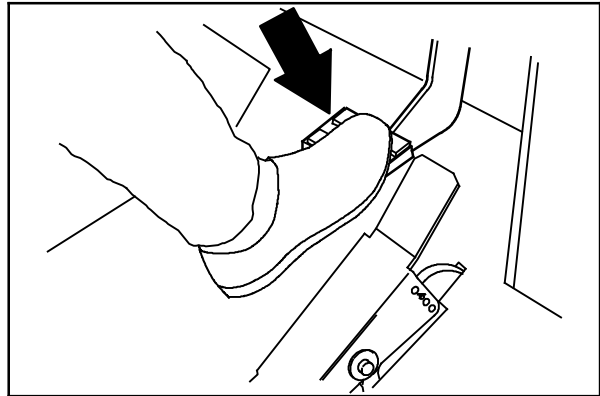

08471

3. Select the **Idle** position with the engine speed switch.

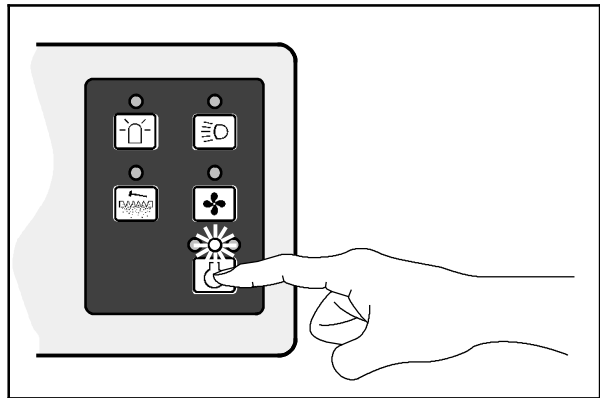

07771

4. Set the machine parking brake.




*NOTE: To protect the engine's emission components on the LPG powered machines serial number 006000 and above, the engine will continue to operate for up to five seconds after the ignition is turned off.*

## OPERATION


5. Turn the ignition switch key counter-clockwise to stop the engine. Remove the switch key.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

*NOTE: To protect the GM engine's emission components on the LPG powered machines serial number 006000 and above, the engine will continue to operate for a few seconds after the ignition switch is turned off.*

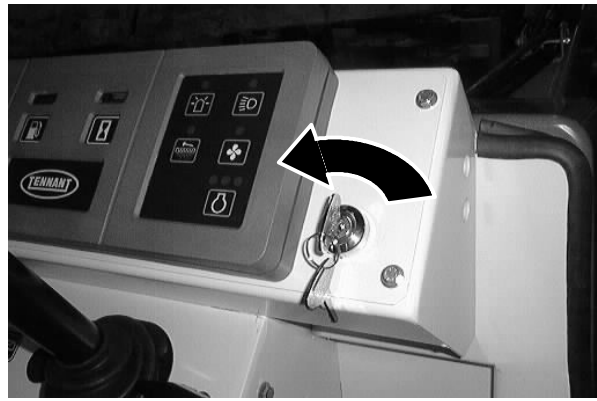

6. LPG powered machines: Close the LPG tank's liquid service valve.

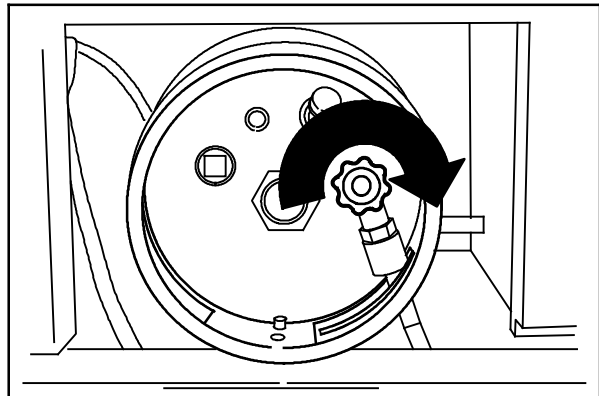

0781C

---

**POST-OPERATION CHECKLIST**

---

- ☐ Check the engine oil level.
- ☐ Check the engine coolant level.
- ☐ Check the windshield washer fluid level (when applicable).
- ☐ Check the radiator and hydraulic cooler fins for debris.
- ☐ Check the hydraulic fluid level
- ☐ Check the air filter indicator.
- ☐ Check the skirts and seals for damage and wear.
- ☐ Check the condition of the sweeping brushes. Remove any string, banding, plastic wrap, or other debris wrapped around them.
- ☐ Check the sweeping brush patterns for adjustment.
- ☐ Check the condition of the hopper dust filter and seals. Clean as required.
- ☐ Check the brakes and steering for proper operation.
- ☐ Check the fuel level
- ☐ Empty the debris hopper.
- ☐ Check the service records to determine maintenance requirements.

### ENGAGING HOPPER SUPPORT BAR


1. Set the machine parking brake.



2. Start the engine.



3. Raise the hopper all the way up.

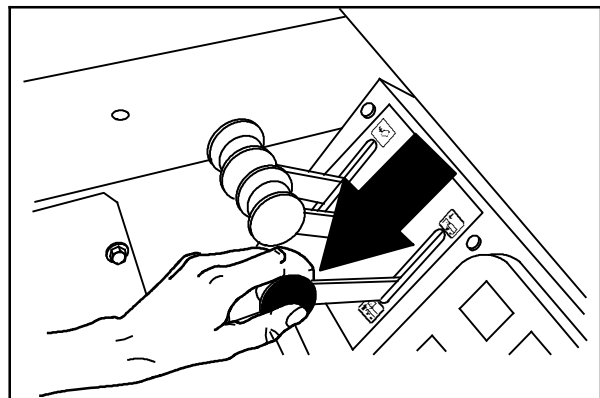


0848C

4. Remove the support bar from the storage clip.



**WARNING: Raised hopper may fall. Engage hopper support bar.**

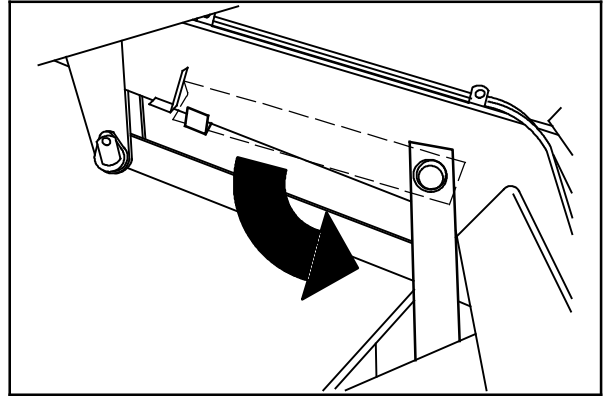


08586

5. Slowly lower the hopper so the support bar rests on the bar stop on the machine frame.



**WARNING: Lift arm pinch point. Stay clear of hopper lift arms.**

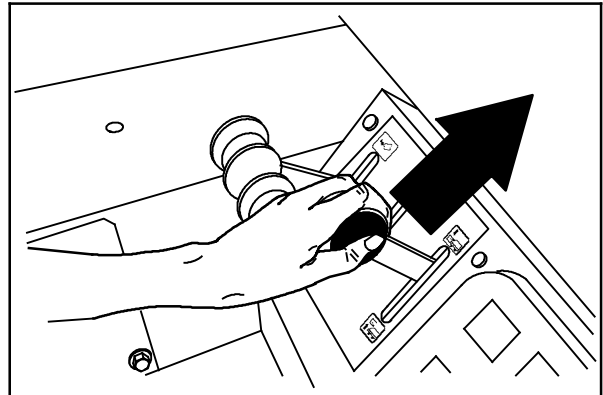

08482

6. Shut the engine off.




### DISENGAGING HOPPER SUPPORT BAR

1. Start the engine.



2. Raise the hopper slightly to release the hopper support bar.

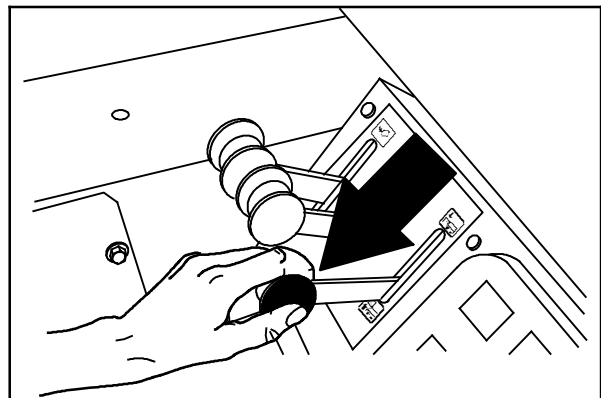


0848C

3. Put the hopper support bar in the storage clip.




**WARNING:** Lift arm pinch point. Stay clear of hopper lift arms.

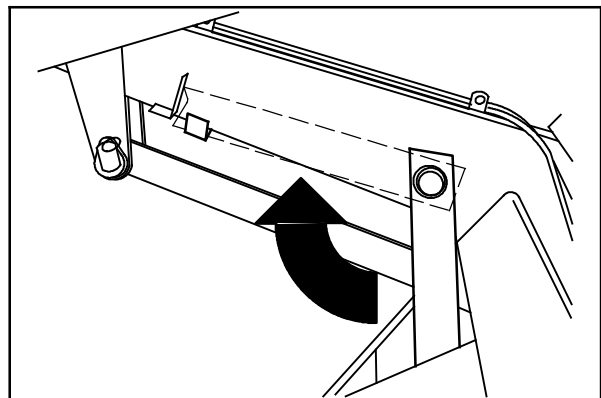

0859C

4. Lower the hopper.

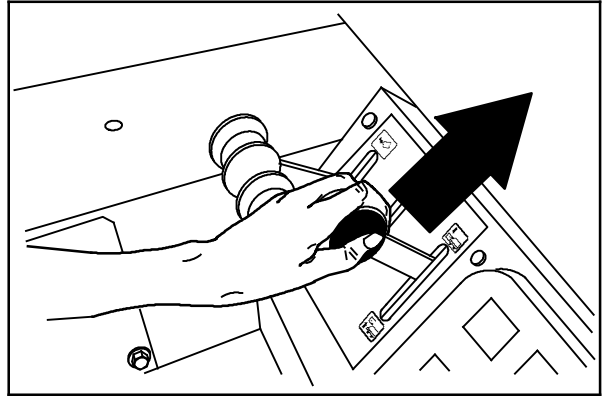

08482

5. Shut the engine off.



## OPTIONS

### VACUUM WAND


The vacuum wand uses the machine's vacuum system. The vacuum hose and wand allow pick-up of debris that is out of reach of the machine.

1. Stop the machine within reach of the area to be vacuumed and set the machine parking brake.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**




2. Turn off the vacuum fan by pressing the vacuum fan switch. The indicator light above the switch will go off.

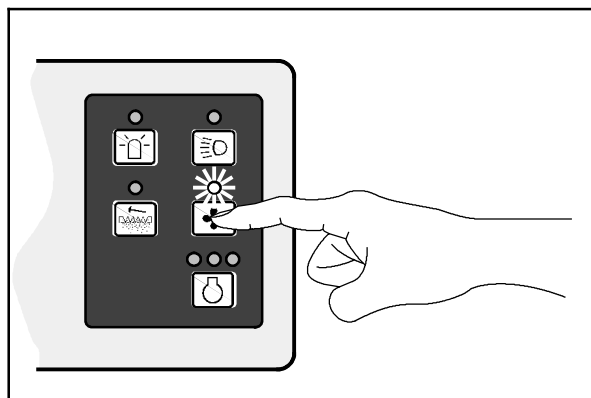


07765


3. Turn off and lift the main brush by placing the switch in the middle **Off** position.

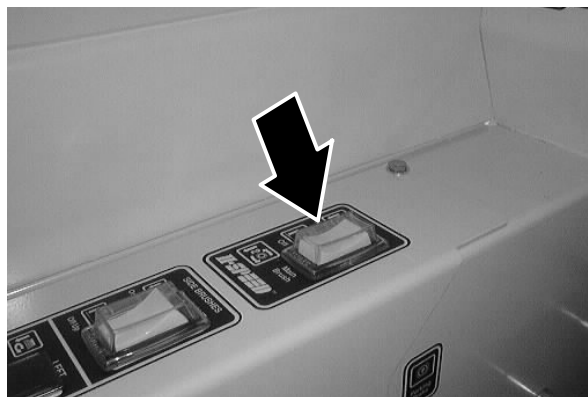


4. Turn off and lift the side brush(es) by placing the bottom of the switch(es) into the **Off/Up** position.

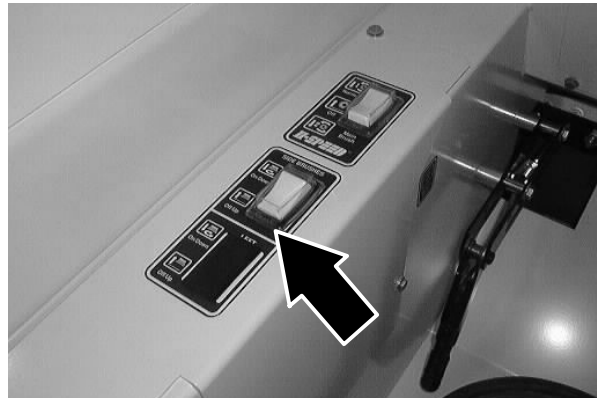

5. Open the forward hopper access door and engage the lift arm.

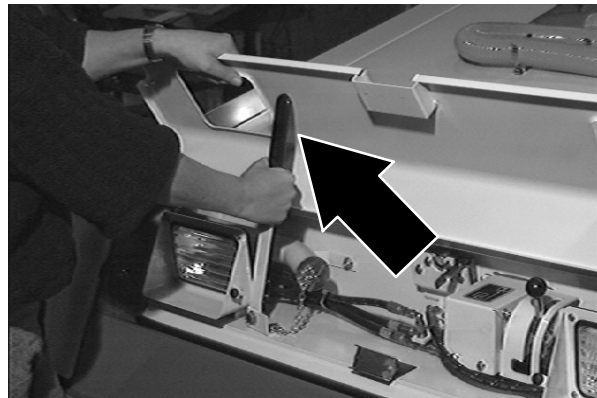


6. Remove the vacuum plug from the vacuum adaptor tube in front of the hopper.

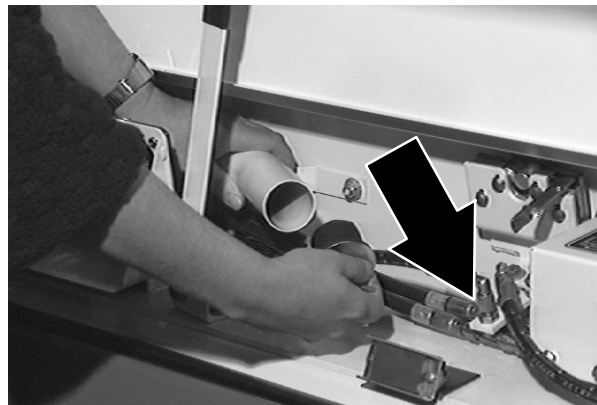


7. Remove the vacuum wand and hose from the mounting clips and assemble them together.

8. Connect the vacuum hose to the vacuum adaptor tube in front of the hopper.

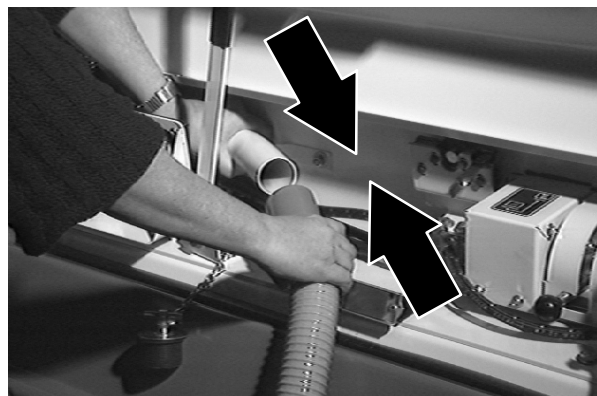


## OPERATION

9. Close the vacuum door by sliding the vacuum door lever down and to the left into the locked position.

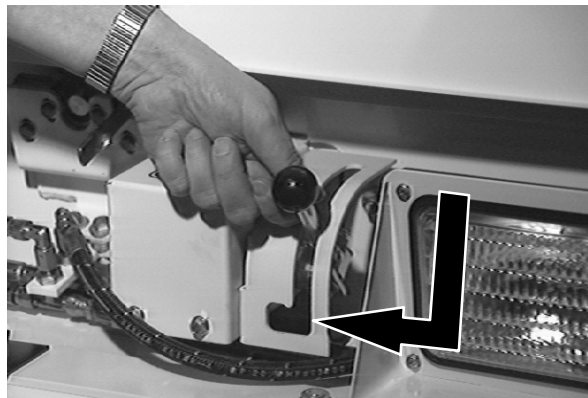


10. Turn on the vacuum fan by pressing the vacuum fan switch. The indicator light above the switch will go on.

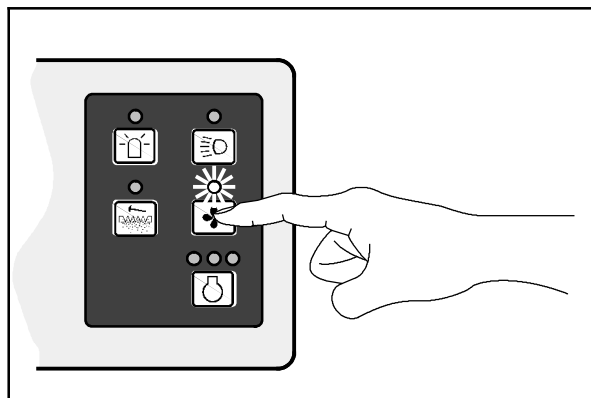


07765

11. Vacuum the area as needed.

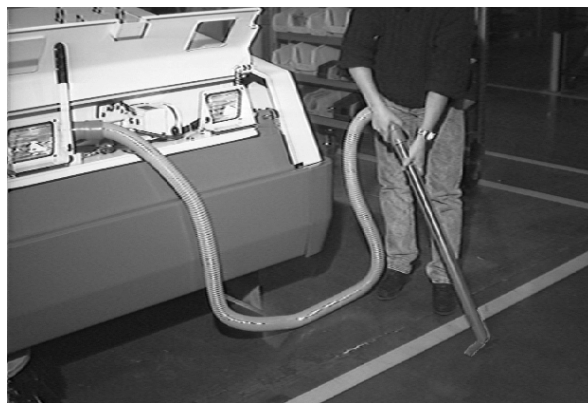


12. When done vacuuming, turn off the vacuum fan by pressing the vacuum fan switch. The indicator light above the switch will go off.

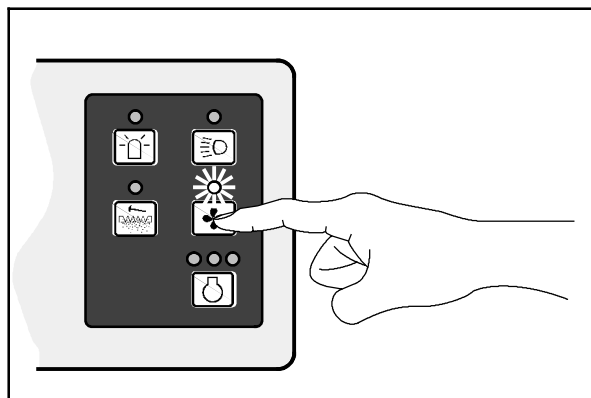


07765


13. Open the vacuum door by sliding the vacuum door lever to the right and up from the locked position.

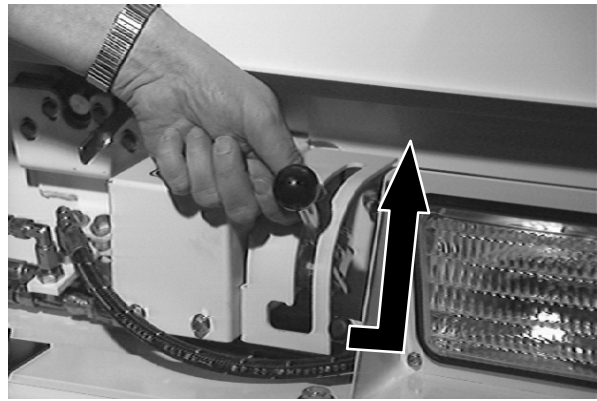


14. Disconnect the vacuum hose from the vacuum adaptor tube in front of the hopper.

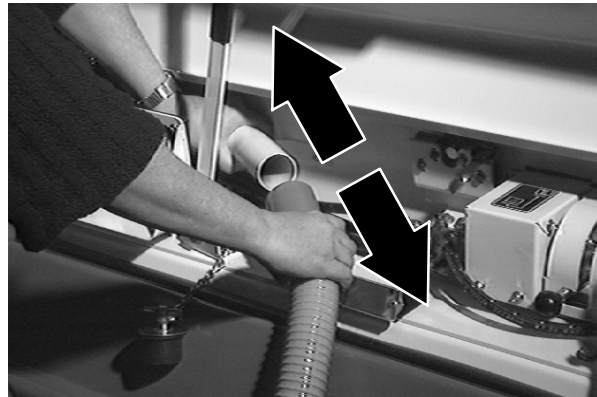

15. Disassemble the vacuum hose assembly and place back onto the hopper in the mounting clips.

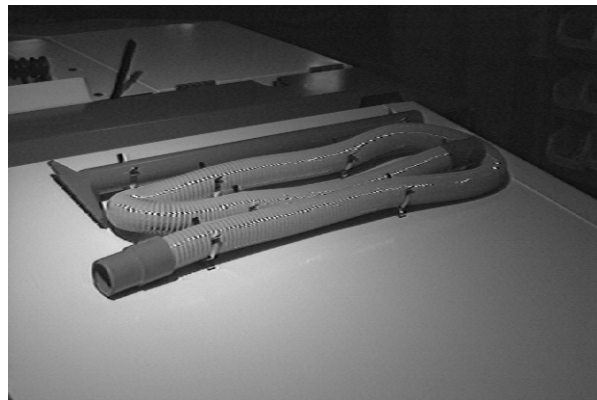

16. Replace the vacuum plug into the vacuum adaptor tube in front of the hopper, disengage the lift arm and close the forward hopper access door.

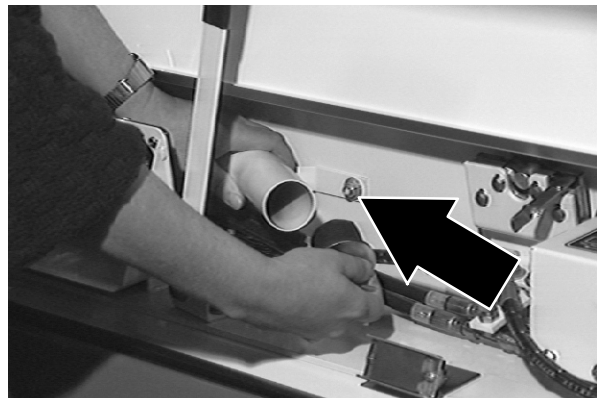

### REGENERATIVE FILTER SYSTEM (RFS)

The Regenerative Filter System (RFS) is an option that alternately turns on the filter shaker motors when the filters need cleaning because of a build-up of dust or debris.

Normally the RFS does not require the operator to stop the machine to shake the filters during sweeping operation (except in extreme and severe dust environments). However, it is recommended that the filters are shaken at the operator's initiative each time the hopper is dumped. This can be accomplished during transit to a dump sight. *AVOID* shaking the filters while hopper is in a rolled out position. To initiate a shaking cycle, press the filter button on the instrument panel. See *FILTER SHAKER SWITCH*.

In very severe dust environments, the plugged filter indicator on the instrument panel may remain lit. When this occurs, it is recommended that the operator stop the machine and initiate one or two shake cycles to clear a possible plugged filter condition. After shaking, roll the hopper out to evacuate the dust tray. Resume sweeping operation.

If the hopper is over full, the light may come on. Check the hopper load and dump if necessary.

If the filter light remains on after all the above conditions are corrected, the filters may be plugged or the RFS may be inoperative. Filters may be shaken by the operator initiative by pressing the filter button on the instrument panel if there is a failure in the RFS control system.


Successful operation of the RFS option requires clean, undamaged filters. Plugged filters may cause the RFS to cycle continuously even at start up. The option also requires good sealing of the upper lid to the hopper, as well as a good seal between the two upper filter chambers.

It is recommended that the machine be driven for some test sweeping with the RFS option at initial start up. This next step assumes the hopper cover and upper filter chamber of the hopper was cleaned thoroughly prior to installation of the RFS option. Sweep for 30 minutes and open the hopper cover to check the integrity of the seals. Look at the top of the shaker panels and the underside of the hopper cover. Check for any signs of *dust tracking* that may be caused by a bad seal or filter. Repair as necessary. Perform this check periodically while using the sweeper with the RFS option.

MACHINE TROUBLESHOOTING

| Problem                   | Cause                                                        | Remedy                                             |
|---------------------------|--------------------------------------------------------------|----------------------------------------------------|
| Excessive dusting         | Brush skirts and dust seals worn, damaged, out of adjustment | Replace or adjust brush skirts or dust seals       |
|                           | Hopper dust filter clogged                                   | Shake and/or clean or replace dust filter          |
|                           | Main brush operating in <b>II Speed</b>                      | Operate main brush in <b>Normal</b> speed          |
|                           | Vacuum hose damaged                                          | Replace vacuum hose                                |
|                           | Vacuum fan seal (vacuum fan inlet bracket) damaged           | Replace seal                                       |
|                           | Vacuum fan failure                                           | Contact TENNANT service personnel                  |
|                           | Hopper door partially or completely closed                   | Open the hopper door                               |
|                           | Thermo Sentry tripped                                        | Reset Thermo Sentry                                |
|                           | Fabric prescreen missing on dust filters                     | Clean filter elements and install fabric prescreen |
| Poor sweeping performance | Brush bristles worn                                          | Replace brushes                                    |
|                           | Main and side brushes not adjusted properly                  | Adjust main and side brushes                       |
|                           | Debris caught in main brush drive mechanism                  | Free drive mechanism of debris                     |
|                           | Main brush drive failure                                     | Contact TENNANT service personnel                  |
|                           | Side brush drive failure                                     | Contact TENNANT service personnel                  |
|                           | Hopper full                                                  | Empty hopper                                       |
|                           | Hopper floor skirts worn or damaged                          | Replace floor skirts                               |
|                           | Hopper door partially or completely open                     | Close the hopper door                              |
|                           | Wrong sweeping brush                                         | Contact TENNANT representative for recommendations |

**MAINTENANCE**

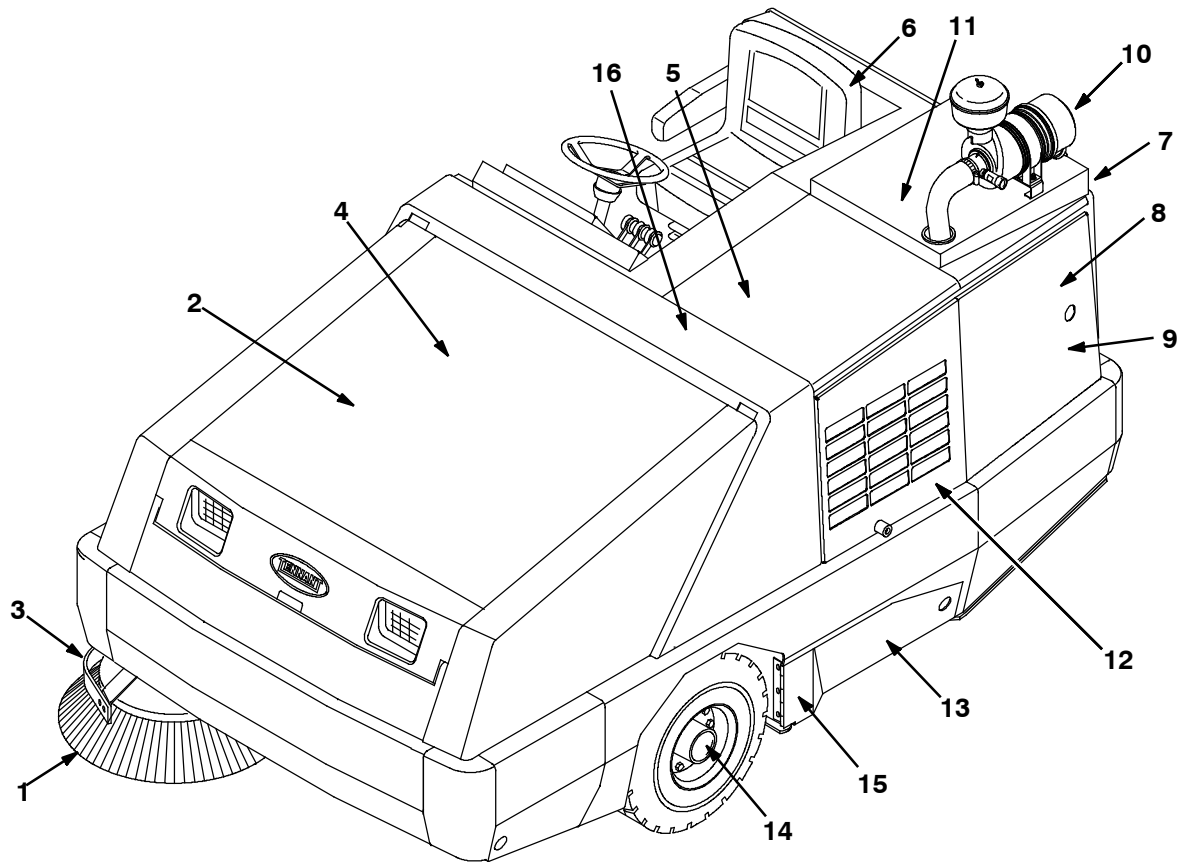

07623

**MAINTENANCE CHART**

NOTE: Check procedures indicated (■) after the first 50-hours of operation.

| Interval  | Key | Description               | Procedure                                            | Lubricant/<br>Fluid | No. of<br>Service<br>Points |
|-----------|-----|---------------------------|------------------------------------------------------|---------------------|-----------------------------|
| Daily     | 10  | Engine air filter         | Check indicator                                      | -                   | 1                           |
|           |     |                           | Empty dust cap                                       | -                   | 1                           |
|           | 12  | Engine crankcase          | Check oil level                                      | EO                  | 1                           |
|           |     |                           | Check coolant level in reservoir                     | WG                  | 1                           |
|           | 13  | Brush compartment skirts  | Check for damage, wear, and adjustment               | -                   | 6                           |
|           | 15  | Hopper lip skirts         | Check for damage, wear, and adjustment               | -                   | 3                           |
|           | 13  | Main brush                | Check for damage, wear, and adjustment               | -                   | 1                           |
|           |     |                           | Check brush pattern                                  | -                   | 1                           |
|           | 1   | Side brush                | Check for damage, wear, and adjustment               | -                   | 1                           |
|           |     |                           | Check brush pattern                                  | -                   | 1                           |
|           | 2   | Hopper dust filter        | Shake                                                | -                   | 2                           |
| 50 Hours  | 13  | Main brush                | Rotate end-for-end                                   | -                   | 1                           |
|           | 2   | Hopper dust filter        | Check or clean                                       | -                   | 2                           |
|           | 16  | Main brush adjustment     | Lubricate                                            | SPL                 | 1                           |
| 100 Hours | 6   | Hydraulic fluid reservoir | Check fluid level                                    | HYDO                | 1                           |
|           | 7   | Hydraulic fluid cooler    | Clean cooler fins                                    |                     | 1                           |
|           | 8   | Radiator                  | Clean core exterior                                  |                     | 1                           |
|           |     |                           | Clean screen                                         | -                   | 1                           |
| 100 Hours | -   | Tires                     | Check pressure                                       | -                   | 3                           |
|           | 13  | Main brush & hopper seals | Check for damage or wear                             | -                   | 12                          |
|           | 12  | Engine crankcase          | ■ Change oil and filter element                      | EO                  | 1                           |
|           |     |                           | ■ Drain oil from electronic pressure regulator (LPG) | -                   | 1                           |
|           | 12  | Engine fan belt           | ■ Check tension                                      | -                   | 1                           |
|           | 12  | Air cond. belt (option)   | Check tension                                        | -                   | 1                           |
|           | -   | Air cond. filter (option) | Clean or replace if necessary                        | -                   | 1                           |
| 200 Hours | 12  | Engine                    | Steam clean exterior                                 | -                   | 1                           |
|           |     |                           | Replace fuel filters, gas (GM) <sup>1</sup>          | -                   | 1                           |
|           | 8   | Radiator hoses and clamps | Check for tightness and wear                         | -                   | 2                           |
|           | 11  | Rear wheel suppt bearings | Lubricate                                            | SPL                 | 2                           |
|           | 5   | Parking brake             | Check adjustment                                     | -                   | 1                           |
|           | 3   | Side brush pivot pins     | Lubricate                                            | SPL                 | 1                           |

**CONTINUED**

## CONTINUED

| Interval   | Key | Description               | Procedure                                     | Lubricant/<br>Fluid | No. of<br>Service<br>Points |
|------------|-----|---------------------------|-----------------------------------------------|---------------------|-----------------------------|
| 400 Hours  | 12  | Engine                    | Clean or replace and adjust spark plugs       | -                   | 1                           |
|            |     |                           | Replace PCV valve                             | -                   |                             |
|            |     |                           | Replace fuel filters, gas (FORD)              | -                   |                             |
|            |     |                           | Replace fuel filters, LPG (GM) [2]            | -                   |                             |
|            | 8   | Cooling system            | Flush                                         | WG                  | 1                           |
|            | 4   | Brake master cylinder     | Check fluid level                             | BF                  | 1                           |
| 800 Hours  | 6   | Hydraulic reservoir       | Replace filler cap                            | GL                  |                             |
|            | 12  | Engine                    | Clean PCV hoses, tubes, & fittings            | -                   | 1                           |
|            |     |                           | Torque intake manifold bolts (FORD)           | -                   | 8                           |
|            |     |                           | Replace fuel filter, gas (GM) [2]             | -                   | 1                           |
|            |     |                           | Check timing belt                             | -                   | 1                           |
|            | 9   | Hydraulic hoses           | Check for wear and damage                     | -                   | 45                          |
|            | 9   | Hydraulic hoses           | Check for wear and damage                     | -                   | 49                          |
|            | 11  | Propelling motor          | ■ Torque shaft nut                            | -                   | 1                           |
|            | -   | Rear wheel                | ■ Torque wheel nuts                           | -                   | 1                           |
|            | 16  | Battery                   | ■ Clean and tighten battery cable connections | -                   | 1                           |
| 1200 Hours | 9   | Hydraulic fluid filter    | * Change filter element                       | -                   | All                         |
| 1600 Hours | 14  | Front wheel bearings      | Check, lubricate, and adjust                  | SPL                 | 2                           |
|            | 12  | Engine                    | Replace timing belt [3]                       | -                   | 1                           |
| 2400 Hours | 6   | Hydraulic fluid reservoir | * Replace suction strainer                    | -                   | 1                           |
|            |     |                           | * Change hydraulic fluid                      | HYDO                | 1                           |

**NOTE:** Change the hydraulic fluid, filter, and suction strainer, indicated (\*), after every 800 hours for machines NOT originally equipped with **TennantTrue** premium hydraulic fluid. (See Hydraulics section).

- [1] For machines serial number 004937- 005999  
 [2] For machines serial number 006000 and above  
 [3] For machines serial number 004000 004936


### LUBRICANT/FLUID

BF . . . . Brake fluid  
 EO . . . . Engine oil, SAE- SG/SH rated  
 HYDO . **TennantTrue** premium hydraulic fluid or equivalent  
 SPL . . . Special lubricant, Lubriplate EMB grease (TENNANT part no. 01433- 1)  
 WG . . . Water and permanent-type ethylene glycol anti-freeze, - 34° C (- 30° F)

## LUBRICATION

### ENGINE

Check the engine oil level daily. Change the engine oil and oil filter after the first 50 hours of machine operation, and then every 100 hours of operation. Use 10W30 SAE- SG/SH rated engine oil.

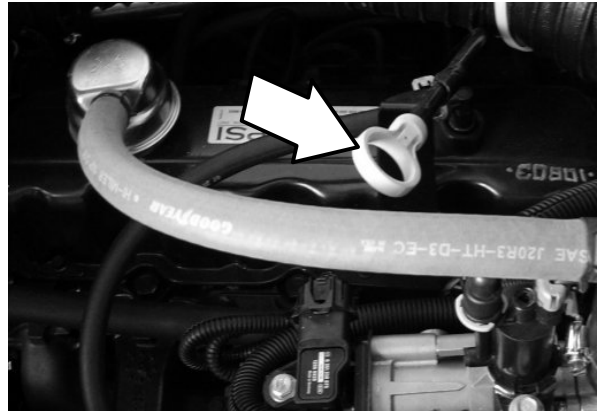


The engine oil drain is located on the engine oil pan. Drain the engine oil when it is warm.

Fill the engine with oil to the level indicated on the oil dipstick. The oil capacity for the FORD LRG 2.5 engine is 4.26 L (4 qt.) including the oil filter. The oil capacity for the FORD LRG 2.3 engine and the GM engines are 4.7 L (5 qt) including the oil filter.

### REAR WHEEL SUPPORT

The rear wheel support pivots the rear wheel. The support has one grease fitting for the bearings. The rear wheel support bearings must be lubricated every 200 hours of operation. Use Lubriplate EMB grease (TENNANT part no. 01433- 1).

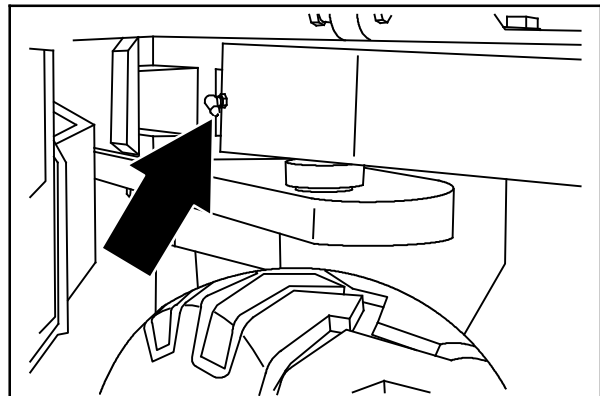


08451

## MAINTENANCE


### FRONT WHEEL BEARINGS

Inspect the front wheel bearings for seal damage, and repack and adjust every 1600 hours of operation. Use Lubriplate EMB grease (TENNANT part no. 01433- 1).

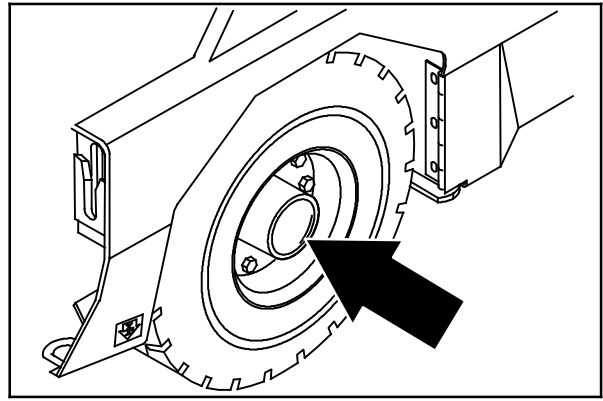

08576


Inspect the front wheel bearings for seal damage, and repack and adjust every 1600 hours of operation. Use Lubriplate EMB grease (TENNANT part no. 01433- 1).

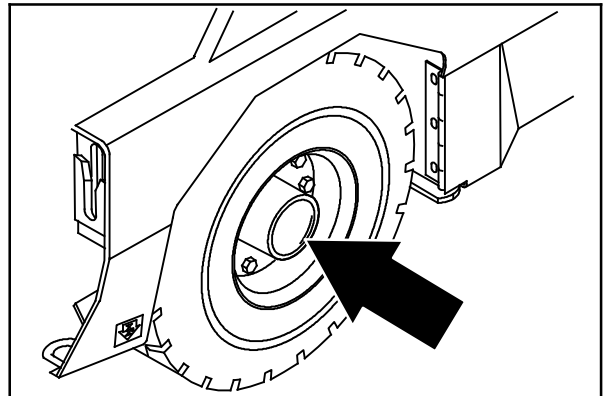

08576

### SIDE BRUSH PIVOT PINS


The side brush pivot pins should be lubricated with Lubriplate EMB grease (TENNANT part no. 01433- 1) every 200 hours of operation.

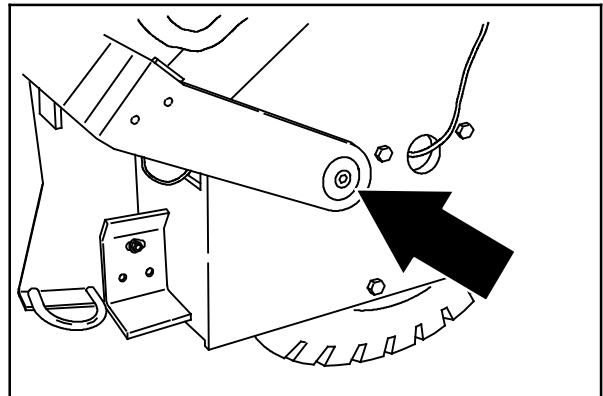

08581

### MAIN BRUSH ADJUSTMENT

The main brush adjustment, located on the right side of the main brush, has one grease fitting for lubrication. Lubricate the main brush adjustment every 50 hours of operation with Lubriplate EMB grease (TENNANT part no. 01433- 1).

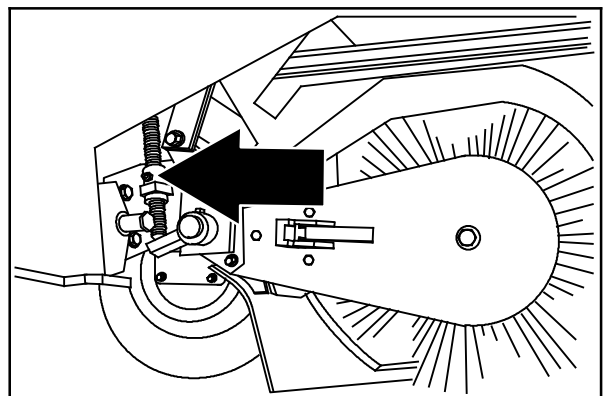


08934

## HYDRAULICS

### HYDRAULIC FLUID RESERVOIR

The reservoir is located behind the operator seat.

Mounted on top of the reservoir is a filler cap with a built-in breather. Replace the cap every 800 hours of operation.

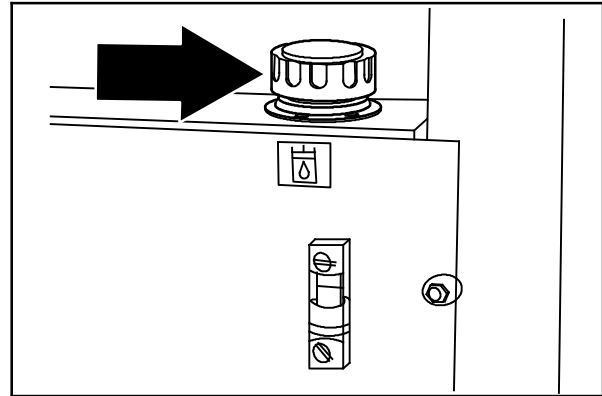


08452

Check the hydraulic fluid level at operating temperature every 100 hours of operation. Make sure the hopper is down when checking hydraulic fluid level. The sight gauge is marked with FULL (black line) and ADD (red line) levels to indicate the level of hydraulic fluid in the reservoir.


Lubricate the filler cap gasket with a film of hydraulic fluid before putting the cap back on the reservoir.

**ATTENTION! Do not overfill the hydraulic fluid reservoir or operate the machine with a low level of hydraulic fluid in the reservoir. Damage to the machine hydraulic system may result.**

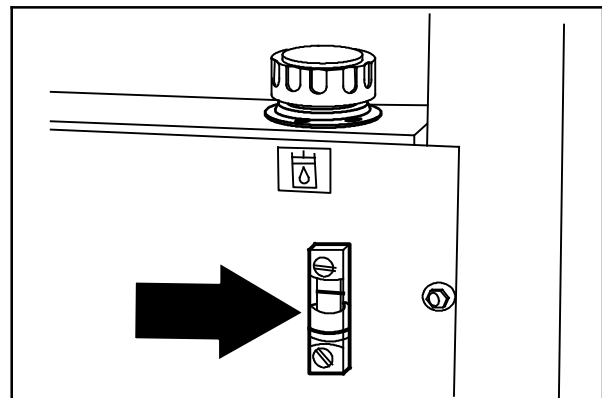


0843C

Drain and refill the hydraulic fluid reservoir with new **TennantTrue** premium hydraulic fluid after every 2400 hours of operation. Machines have a blue colored drop (left photo) on the hydraulic fluid label if originally equipped with **TennantTrue** premium hydraulic fluid.

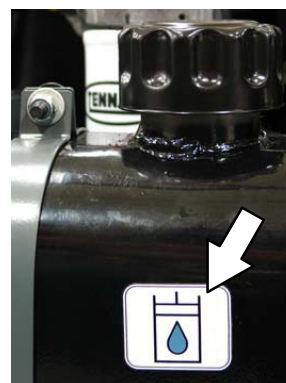

TennantTrue Fluid

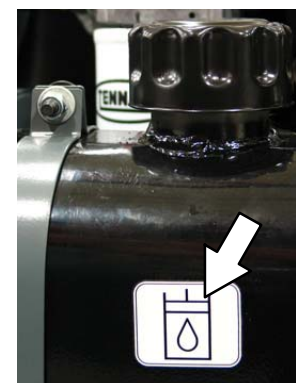

Previous Fluid

**NOTE:** Change the hydraulic fluid, filter, and suction strainer after every 800 hours for ALL machines that have NOT consistently used **TennantTrue** premium hydraulic fluid or equivalent.

## MAINTENANCE

The reservoir has a built-in strainer outlet that filters hydraulic fluid before it enters the system. Replace the strainer every 2400 hours of operation.


The hydraulic fluid filter is located in the engine compartment.

Replace the filter element every 1200 hours of operation.

### HYDRAULIC FLUID

The quality and condition of the hydraulic fluid play a very important role in how well the machine operates. TENNANT's hydraulic fluid is specially selected to meet the needs of TENNANT machines.

TENNANT's hydraulic fluids provide a longer life for the hydraulic components. There are three fluids available for different temperature ranges:

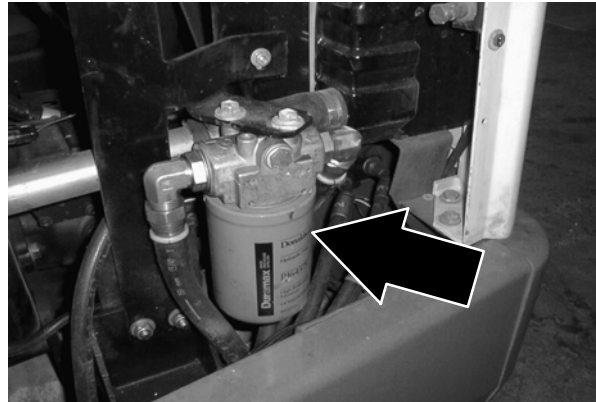

| TennantTrue premium<br>hydraulic fluid (Extended Life) |                  |                                   |                                |
|--------------------------------------------------------|------------------|-----------------------------------|--------------------------------|
| Part Number                                            | Capacity         | ISO Grade<br>Viscosity Index (VI) | Ambient Air Temperature Ranges |
| 1057710                                                | 3.8 L<br>(1 gal) | ISO 100<br>VI 126 or higher       | 19° C<br>(65° F) or higher     |
| 1057711                                                | 19 L<br>(5 gal)  |                                   |                                |
| 1057707                                                | 3.8 L<br>(1 gal) | ISO 32<br>VI 163 or higher        | 16° C<br>(60° F) or lower      |
| 1057708                                                | 19 L<br>(5 gal)  |                                   |                                |

The higher temperature fluid has a higher viscosity and should not be used at the lower temperatures. Damage to the hydraulic pumps may occur because of improper lubrication.

The lower temperature fluid is a thinner fluid for colder temperatures.

If another hydraulic fluid is used, make sure the specifications match TENNANT's hydraulic fluid specifications. Using substitute fluids can cause premature failure of hydraulic components.

European marketed machines are filled with locally available hydraulic fluids. Check the label on the hydraulic fluid reservoir.

**ATTENTION! Hydraulic components depend on system hydraulic fluid for internal lubrication. Malfunctions, accelerated wear, and damage will result if dirt or other contaminants enter the hydraulic system.**

## HYDRAULIC HOSES


Check the hydraulic hoses every 800 hours of operation for wear or damage.

Fluid escaping at high pressure from a very small hole can be almost invisible, and can cause serious injuries.

See a doctor at once if injury results from escaping hydraulic fluid. Serious infection or reaction can develop if proper medical treatment is not given immediately.

**FOR SAFETY: When servicing machine, use cardboard to locate leaking hydraulic fluid under pressure.**

If you discover a fluid leak, contact your mechanic/supervisor.

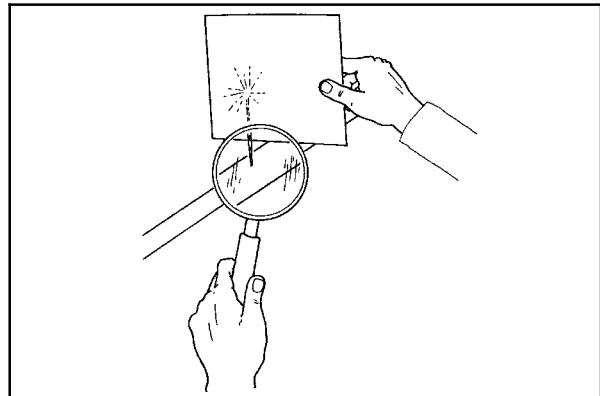

00002

## PROPELLING MOTOR

Torque the shaft nut to 237 Nm (175 ft lb) plus enough torque to align the slotted nut and the shaft hole after the first 50-hours of operation, and every 800 hours there after.


## ENGINE

### COOLING SYSTEM

Check the coolant level in the reservoir daily. The coolant level must be between the two indicator marks when the engine is cold.

Use clean water mixed with a permanent-type, ethylene glycol antifreeze to a -34° C (-30° F) rating. The coolant level should be 25 to 50 mm (1 to 2 in) below the filler opening.

**FOR SAFETY: When servicing machine, avoid contact with hot engine coolant.**

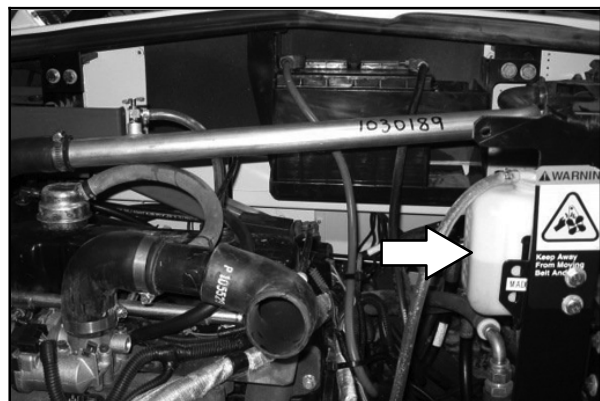


## MAINTENANCE

Check the radiator hoses and clamps every 200 hours of operation. Tighten the clamps if they are loose. Replace clamps if they no longer tighten properly. Replace hoses if they become hard, cracked, or swollen.


Check the radiator core exterior and hydraulic cooler fins for debris every 100 hours of operation. Blow or rinse all dust, which may have collected on the radiator, in through the grille and radiator fins, opposite the direction of normal air flow. The grille and hydraulic cooler open for easier cleaning. Be careful not to bend the cooling fins when cleaning. Clean thoroughly to prevent the fins becoming encrusted with dust. Clean the radiator and cooler only after the radiator has cooled to avoid cracking.

**FOR SAFETY: When servicing machine, wear eye and ear protection when using pressurized air or water.**

Flush the radiator and the cooling system every 400 hours of operation, using a dependable cleaning compound.

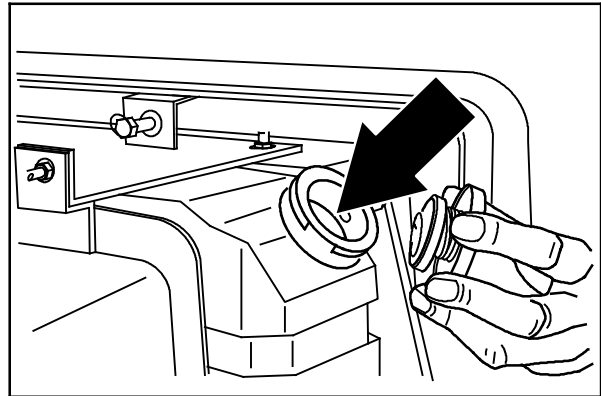

08432

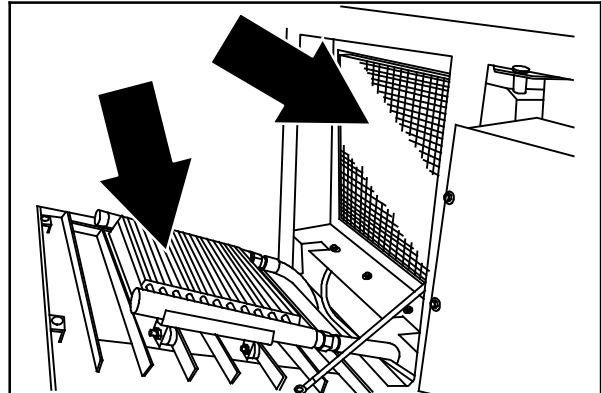


08454

### AIR FILTER INDICATOR

The air filter indicator shows when to replace the air filter element. Check the indicator daily. The indicator's red line will move as the air filter element fills with dirt. Do not replace the air filter element until the red line reaches 5 kPa (20 in H<sub>2</sub>O) and the "SERVICE WHEN RED" window is filled with red. The indicator's red line may return to a lower reading on the scale when the engine shuts off. The red line will return to a correct reading after the engine runs for a while.


Reset the air filter indicator by pushing the reset button on the end of the indicator after replacing the air filter element.

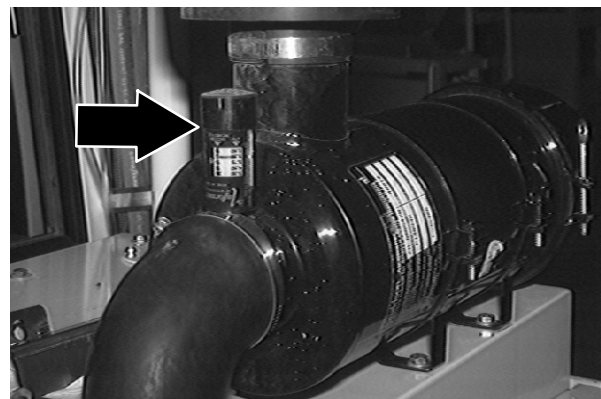

### AIR FILTER

The engine air filter housing has a dust cap and a dry cartridge-type air filter element. Empty the dust cap daily. The air filter must be replaced whenever the filter element is damaged or when the optional air filter indicator shows a restriction. The air filters cannot be cleaned.

All machines have a heavy duty safety element inside the standard element. Replace this element, do not clean it, after the regular element has been damaged or changed three times.

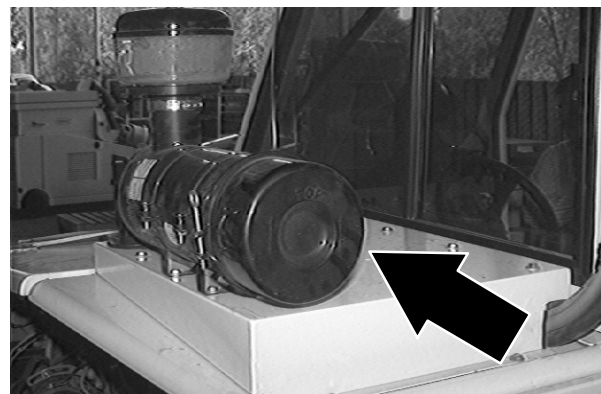

Install the dust cap on the air filter housing with the arrows pointing up.

Replace the air filter element only when the air filter indicator shows restriction in the air intake system. Do not remove the air filter element from the housing unless it is restricting air flow.

## FUEL FILTER (GASOLINE)

The fuel filter traps fuel contaminants. On FORD engines the filter is located on the fuel line going into the carburetor. On GM engines the filter is located on the fuel tank.

Replace the filter element on the FORD engine after every 400 hours of operation.

Replace the filter element on the GM engine serial number 004937- 005999 after every 200 hours of operation.

Replace the filter element on the GM engine serial number 006000 and above after every 800 hours of operation.

## FUEL FILTER (LPG)

The fuel filter traps fuel contaminants. The fuel filter element is located inside the fuel lockoff valve on the LPG convertor going into the electrical fuel injection system.

## ELECTRONIC PRESSURE REGULATOR (LPG) (For machines serial number 007000 and above)




Remove the sensor and drain the oil from the LPG electronic pressure regulator after every 100 hours of operation.

**FOR SAFETY: When servicing machine, keep flames and sparks away from fuel system service area. Keep area well ventilated.**

Replace the fuel filter element on the GM engines serial number 006000 and above after every 400 hours of operation.

## ELECTRONIC FUEL INJECTION (GM)

The electronic fuel injection system requires no adjustment.

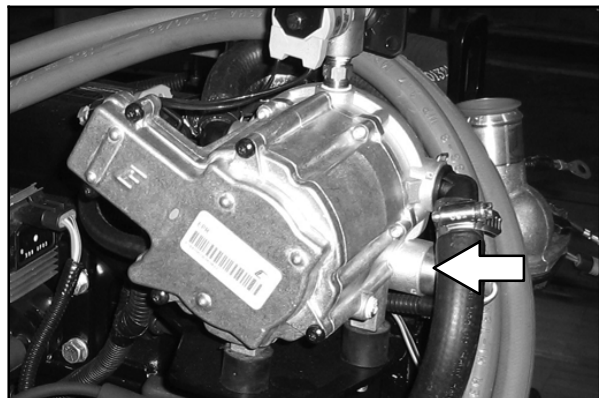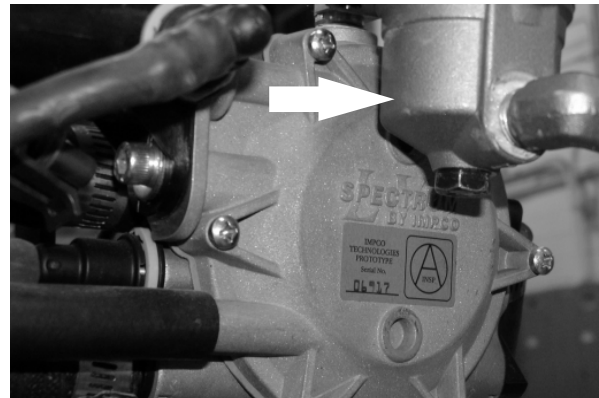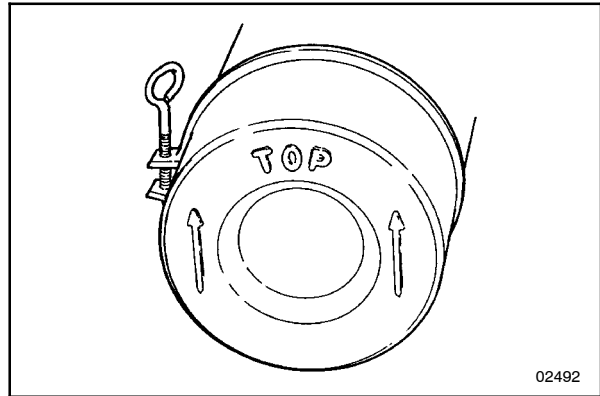

## MAINTENANCE

The fuel injection system is equipped with a “manifold absolute pressure sensor” (MAP Sensor). The MAP sensor senses barometric pressure and automatically corrects the fuel system calibration for changes in altitude. This means the air/fuel mixture will always be optimized, regardless of elevation (or barometric pressure), however, the engine will still lose 3.5% power for every 1000 ft increase in elevation.

The Idle speed on machines serial number 024999 and below is set at  $1350 \pm 50$  rpm

The Idle speed on machines serial number 025000 and above is set at  $950 \pm 50$  rpm

### SPARK PLUGS

Clean or replace, and set the gap of the spark plugs every 400 hours of operation.



The proper spark plug gap for the FORD and GM engines are 1 mm (0.042 in).

### CRANKCASE VENTILATION SYSTEM

Replace the PCV valve every 400 hours of operation. Clean the crankcase ventilation hoses, tubes, and fittings every 800 hours of operation.

### INTAKE MANIFOLD (FORD)

Tighten the intake manifold bolts or nuts, every 800 hours of operation, in a two step sequence. Replace the filter element on the GM engine serial number 006000 and above after every 800 hours of operation. Torque the M8 bolts or nuts to 7 to 9.5 Nm (5 to 7 ft lb) in the first step, and 19 to 28.5 Nm (14 to 21 ft lb) in the second step of torquing.

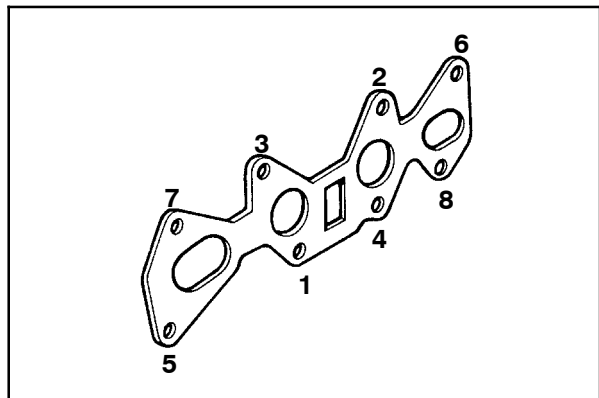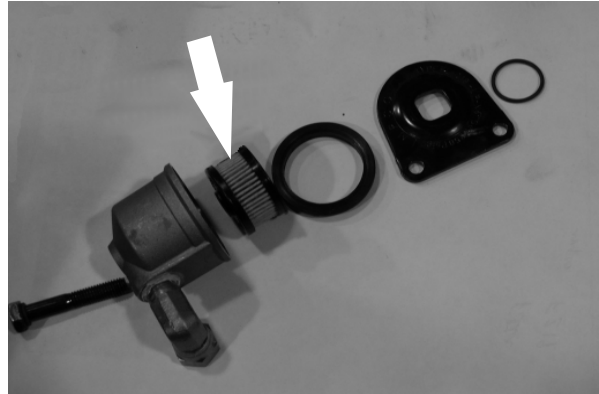

06805

### TIMING BELT


Check the engine timing belt every 800 hours of operation, and replace the engine timing belt every 1600 hours of operation.

## BATTERY

The battery for the machine is a low maintenance battery. Do not add water to the battery, or remove the battery vent plugs.

The battery is located in the left - front of the engine compartment.

After the first 50 hours of operation, and every 800 hours after that, clean and tighten the battery connections.

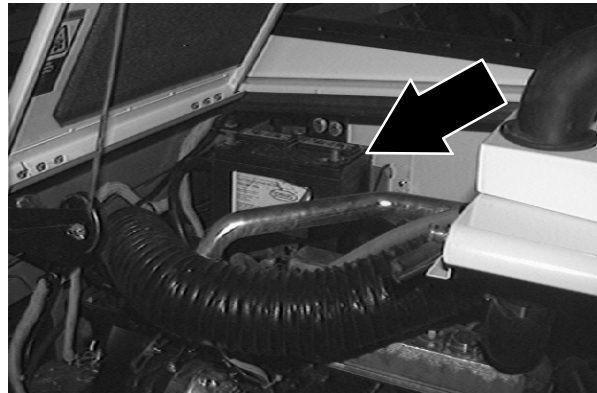

## BELTS AND CHAINS


### ENGINE BELT

The engine fan belt is driven by the engine crankshaft pulley and drives the alternator pulley. Proper belt tension is 13 mm (0.50 in) from a force of 4 to 5 kg (8 to 10 lb) applied at the mid-point of the longest span.

Check and adjust the belt tension every 100 hours of operation.



**WARNING: Moving belt and fan. Keep away.**

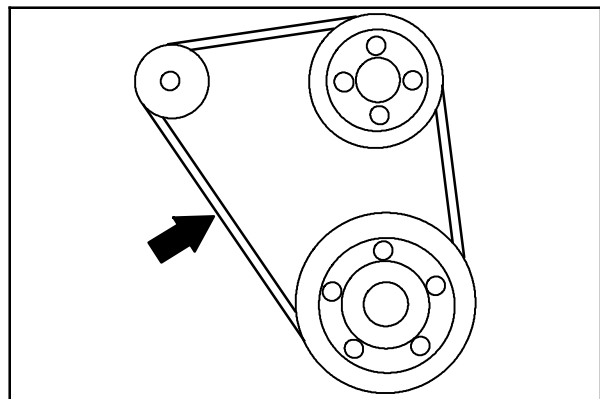


08935

### STATIC DRAG CHAIN

A static drag chain prevents the buildup of static electricity in the machine. The chain is attached to the machine by a rear main brush skirt retaining bolt.

Make sure the chain is touching the floor at all times.

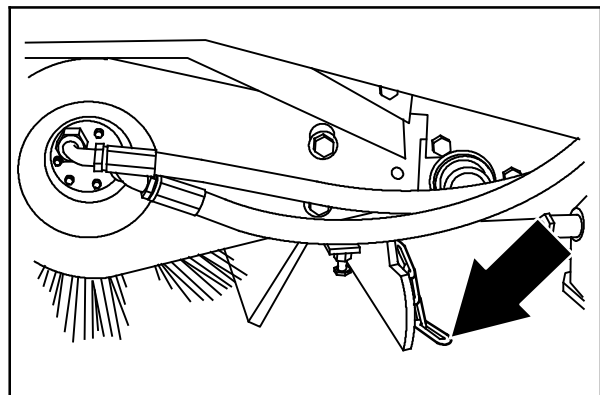

08445

## MAINTENANCE


### AIR CONDITIONING BELT (OPTION)

The air conditioning belt drives the compressor. The belt deflection should be 4 to 7 mm (0.025 to 0.25 in) when a force of (5 lbs) is applied at belt midpoint.

Check and adjust the belt tension every 100 hours of operation.



**WARNING: Moving belt. Keep away.**

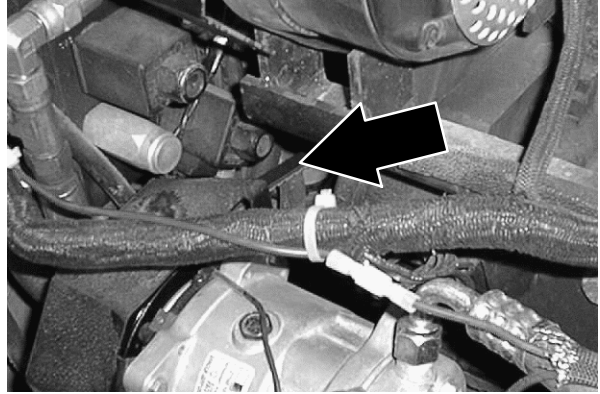


---

### AIR CONDITIONING FILTER (OPTION)

---

The air conditioning filter should be inspected and cleaned per the cleaning instructions on the side of the filter every 100 hours of operation.

*NOTE: In extremely dusty sweeping environments, clean or replace the filter as often as necessary.*

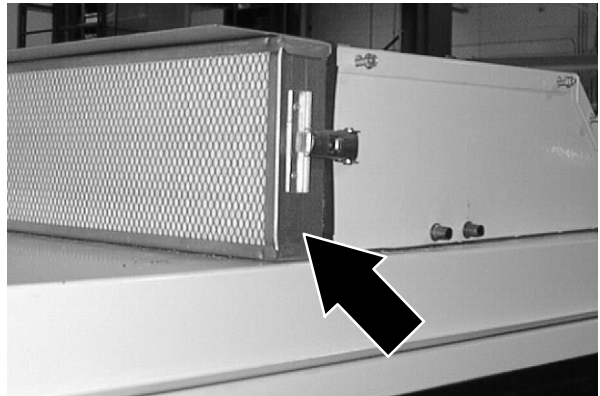

## DEBRIS HOPPER

### HOPPER DUST FILTER

The dust filters filter the air pulled up from the hopper. The dust filters are equipped with a shaker to remove the accumulated dust particles. The dust filters shaker is operated by the filter shaker switch.


Shake the dust filters before dumping the hopper and at the end of every work shift. Avoid shaking the filters while the hopper is in a rolled out position. Check and clean the dust filters every 50 hours of operation. Extremely dusty conditions may require more frequent cleaning of dust filters.

To clean the dust filters, use one of the following methods:

- **SHAKING** - Press the filter shaker switch.
- **AIR** - Blow compressed air through the dust filter from the inside. This may be done with the dust filter in the machine, or for more efficient cleaning remove the dust filter from the machine and the prescreen wrap from the filter element. Always wear eye protection when using compressed air.

**FOR SAFETY: When servicing machine, wear eye and ear protection when using pressurized air or water.**

- **WATER** - Remove the fabric prescreen wrap from the filter element. Wash the prescreen wrap in a water and mild detergent solution. Rinse the prescreen wrap until it is clean. Air dry the wet prescreen wrap; do not use compressed air. **NEVER** wash the filter element with water.

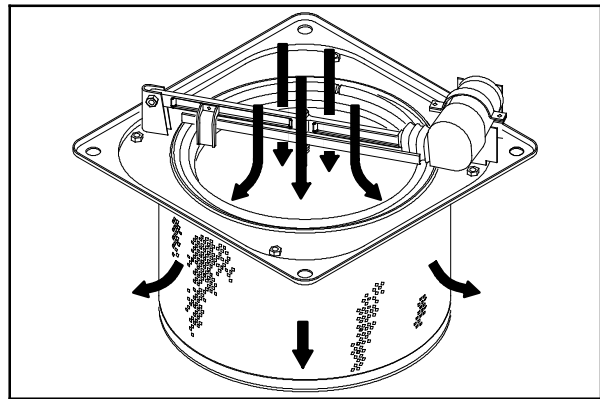

08594

### TO REMOVE OR REPLACE HOPPER DUST FILTER


1. Stop the engine and set the machine parking brake.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

2. Open the hopper cover.
3. Disconnect the shaker motor wire connectors.


## MAINTENANCE

4. Remove the four retaining screws from the filter shaker frame.
5. Pull the filter shaker frame out of the hopper.

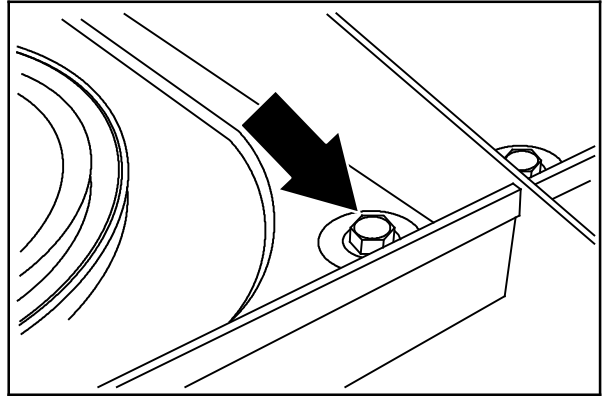


08591

6. Carefully turn over the shaker frame and element.
7. Loosen the four filter retaining screws from the shaker frame.
8. Remove the retainer ring from the shaker frame. Remove the filter.
9. Make sure the prescreen wrap is tightly wrapped around and securely fastened on the new filter element. Put the new filter on the filter shaker frame.

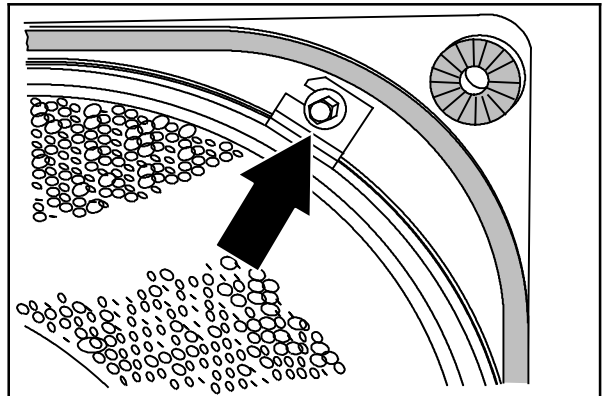

08592

10. Place the retainer ring over the filter. Make sure the retaining ring fits inside the lip of the filter element all the way around. Line up the slots on the retainer ring with the retaining screws holes.
11. Mount using the retaining screws.
12. Check the seal on the shaker frame for damage. Make sure the vibration isolators are mounted in all four corners of the filter shaker frame.
13. Put the filter and shaker frame in the hopper.
14. Install the four retaining screws and tighten.
15. Connect the shaker motor wire connectors.

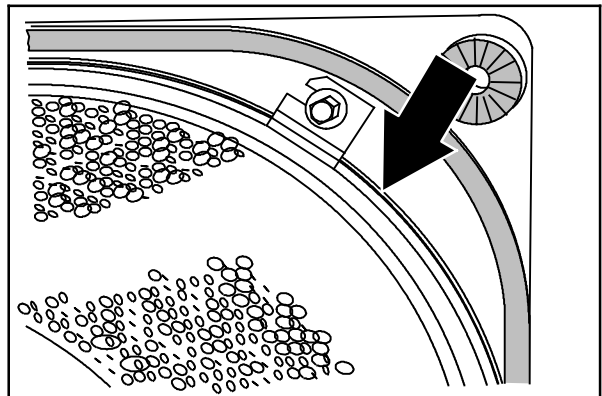


08593

## THERMO SENTRY

The Thermo Sentry senses the temperature of the air pulled up from the hopper. If there is a fire in the hopper, the Thermo Sentry stops the vacuum fan and cuts off the air flow. The Thermo Sentry is located on the vacuum fan housing.

Reset the Thermo Sentry by pushing in its reset button.

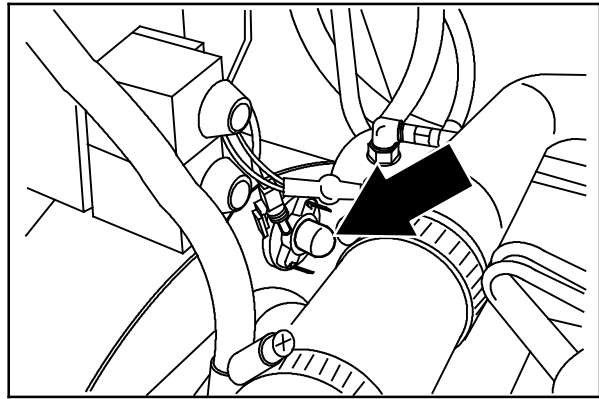

0892E

## BRUSHES

### MAIN BRUSH

The main brush is cylindrical and spans the width of the machine, sweeping debris into the hopper.

Check the brush daily for wear or damage.

Remove any string or wire tangled on the main brush, main brush drive hub, or main brush idler hub.

Check the main brush pattern daily. The pattern should be 50 to 65 mm (2 to 2.5 in) wide. Adjust the main brush pattern by turning the main brush pressure knob located next to the operator seat.

Rotate the main brush end-for-end every 50 hours of operation for maximum brush life and best sweeping performance.

Replace the brush when it no longer cleans effectively.

### TO REPLACE MAIN BRUSH


1. Stop the engine and set the machine parking brake.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

2. Raise the main brush.
3. Open the right side main brush access door.


## MAINTENANCE

4. Unlatch and remove the brush idler plate.

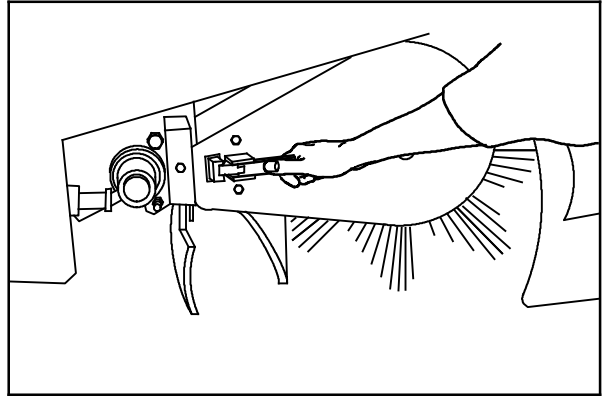


08487

5. Grasp the main brush; pull it off the brush drive plug and out of the main brush compartment.
6. Put the new or rotated end-for-end main brush on the floor next to the access door.
7. Slide the main brush onto the drive plug. Rotate the brush until it engages the drive plug, and push it all the way onto the plug.
8. Slide the main brush idler plate plug onto the main brush.
9. Latch the idler plate onto the machine frame.
10. Close the right side main brush access door.

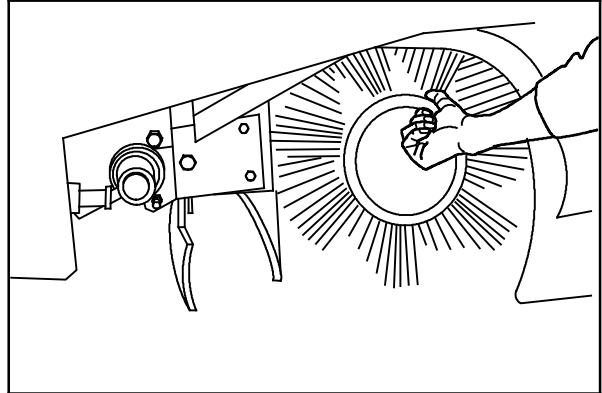

08488

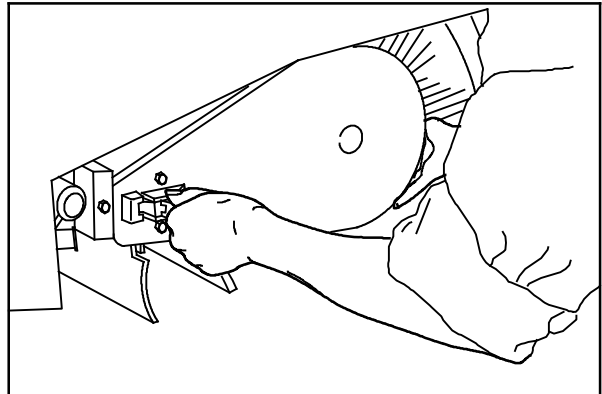

08489


### TO CHECK AND ADJUST MAIN BRUSH PATTERN

1. Apply chalk, or some other material that will not blow away easily, to a smooth, level floor.
2. Raise the side brush and main brush and position the main brush over the chalked area.

3. Start the main brush.
4. Lower the main brush for 15 to 20 seconds while keeping a foot on the brakes to keep the machine from moving. This will lower the rotating main brush.


*NOTE: If chalk or other material is not available, allow the brushes to spin on the floor for two minutes. A polish mark will remain on the floor.*

5. Raise the main brush.
6. Stop the main brush.
7. Drive the machine off the test area.
8. Observe the width of the brush pattern. The proper brush pattern width is 65 to 75 mm (2.5 to 3.5 in).

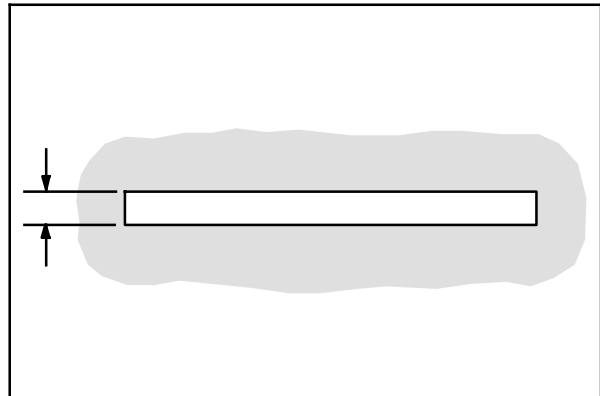

00582

9. To increase the width of the main brush pattern, turn the main brush down pressure knob counter-clockwise.

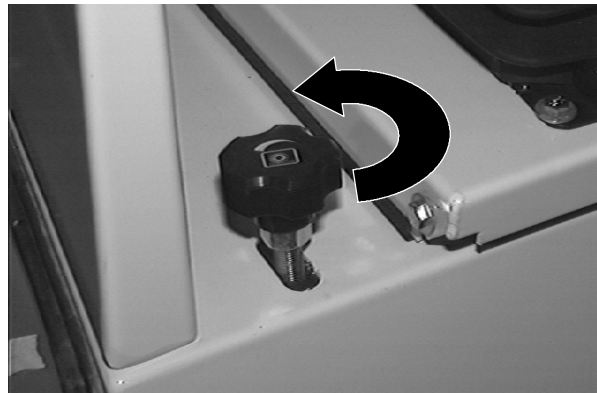


To decrease the width of the main brush pattern, turn the main brush down pressure knob clockwise.




## MAINTENANCE

If the main brush pattern is tapered, more than 15 mm (0.5 in) on one end than the other, adjust the taper at the drive end of the brush.

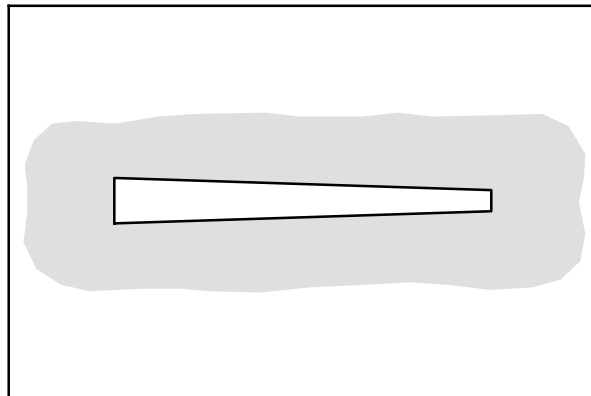


00601

- A. Loosen the brush drive end plate mounting bolts.

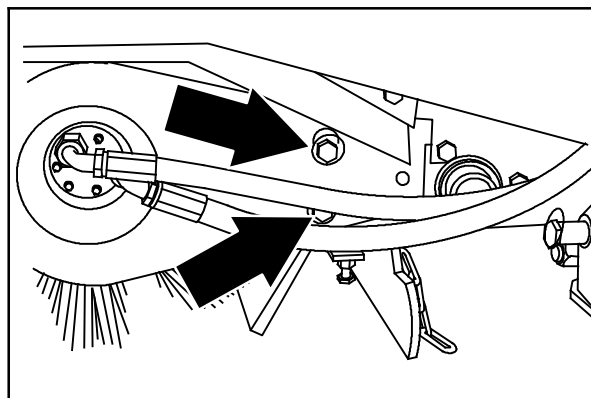

0845C

- B. Turn the taper adjustment nut counter-clockwise to increase the pattern width at the brush drive end, and clockwise to decrease the pattern width at the brush drive end. Tighten the drive end plate mounting bolts.
- C. Check the main brush pattern and readjust as necessary. Then adjust the width of the main brush pattern.

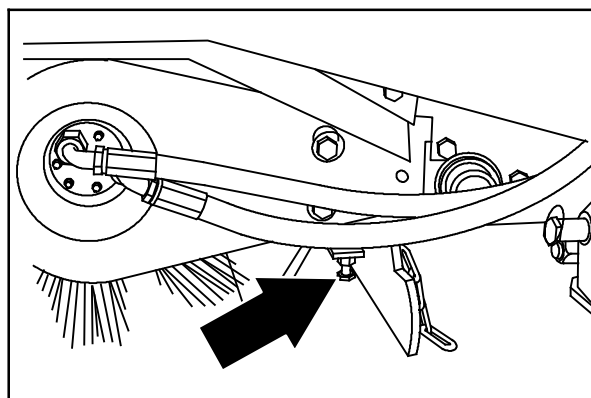


0849C

## SIDE BRUSH

The side brush sweeps debris along edges into the path of the main brush.

Check the brush daily for wear or damage. Remove any string or wire found tangled on the side brush or side brush drive hub.

Check the side brush pattern daily. The side brush bristles should contact the floor in a 10 o'clock to 3 o'clock pattern when the brush is in motion. Adjust the side brush pattern by the side brush down pressure knob. Turn the knob counter-clockwise to increase the brush contact with the sweeping surface, and clockwise to decrease the brush contact with the sweeping surface.

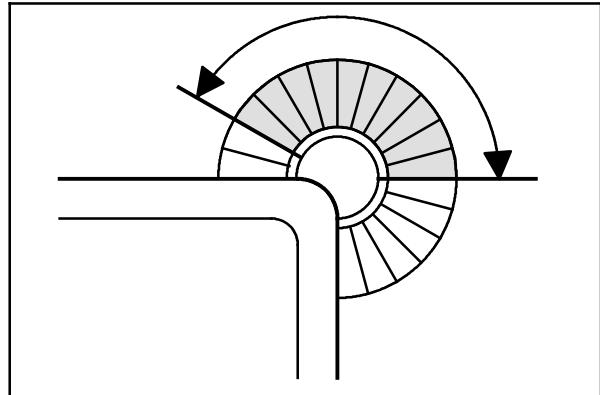


350327

Replace the brush when it no longer cleans effectively.

### TO REPLACE SIDE BRUSH

1. Empty the debris hopper.
2. Set the machine parking brake.
3. Raise the hopper.
4. Stop the engine.

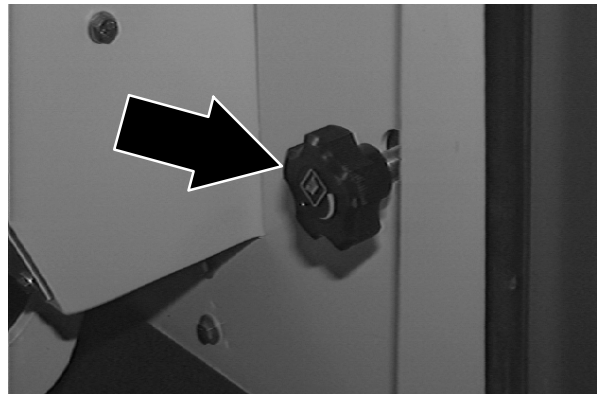


**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

5. Remove the side brush retaining pin from the side brush drive shaft.
6. Slide the side brush off the side brush drive shaft.

**NOTE:** Remove the drive hub and put it on the new brush if one is not installed.

7. Slide the new side brush onto the side brush drive shaft.
8. Insert the side brush retaining pin through the side brush hub and shaft and secure.

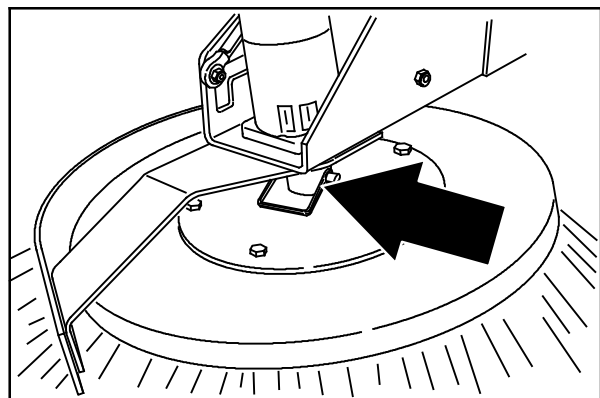

08466

## MAINTENANCE

9. Disengage the hopper support bar and lower the hopper.
10. Adjust the side brush pattern with the side brush down pressure knob.

---

### SKIRTS AND SEALS


---

#### HOPPER LIP SKIRTS

The hopper lip skirts are located on the bottom rear of the hopper. The skirts float over debris and help deflect that debris into the hopper. The top skirt is segmented.

Check the hopper lip skirts for wear or damage daily.

Replace the hopper lip skirts when they no longer touch the floor.

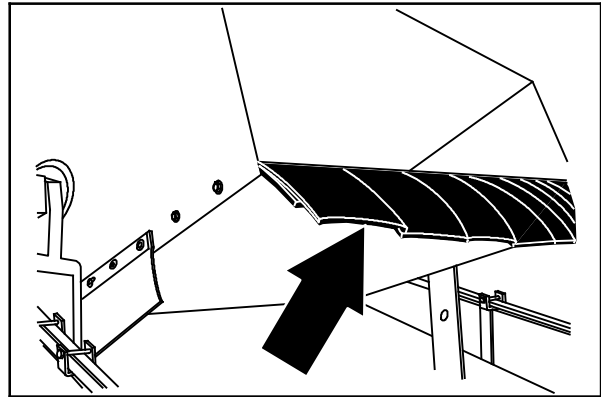

08491


#### BRUSH COMPARTMENT SKIRTS

The brush compartment skirts are located on the bottom of each of the two main brush doors and around the ends of the brush on the main frame. The inside brush door skirt should touch the floor, and the outside brush door skirt should clear the floor by 3 to 5 mm (0.12 to 0.25 in).

Check the skirts for wear or damage and adjustment daily.

*NOTE: The brush door skirts have slotted holes to allow for a ground clearance adjustment. The door must be closed for proper adjustment.*

*NOTE: Tire pressure will affect skirt clearances.*

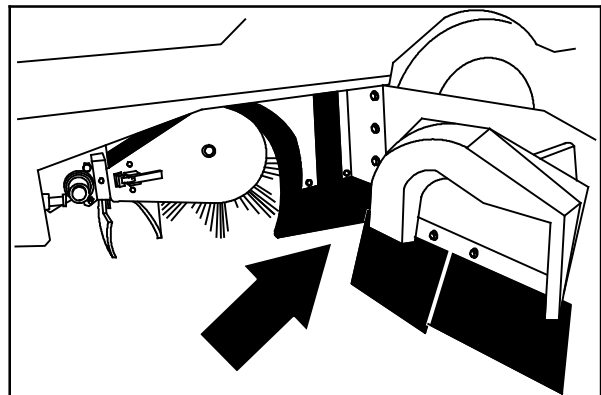


08493

## REAR SKIRTS

The two rear skirts are located on the bottom rear of the main brush compartment. The vertical skirt should clear the floor up to 20 mm (0.75 in) in dusty conditions, and touch the floor otherwise. The recirculation skirt is self-adjusting.

Check the skirts for wear or damage and adjustment daily.

*NOTE: Tire pressure will affect skirt clearances.*

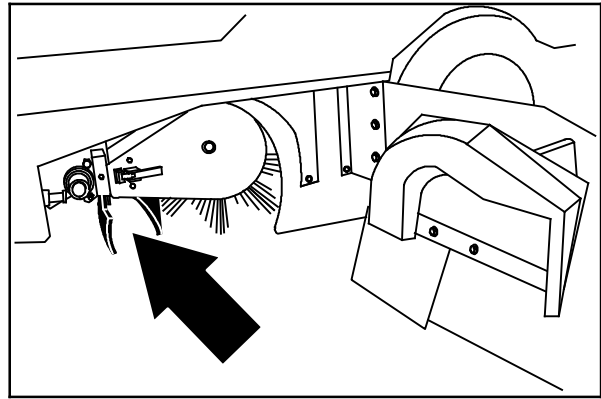


08494

## BRUSH DOOR SEALS

The brush door seals are located on both main brush doors and on corresponding portions of the main frame.

Check the seals for wear or damage every 100 hours of operation.

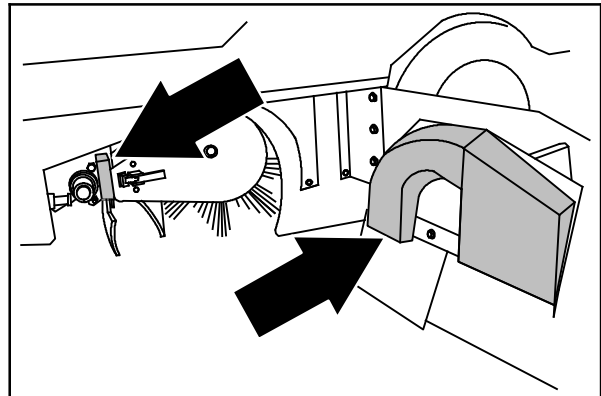


08495

## HOPPER SEALS

The hopper seals are located on the top and side portions of the machine frame that contact the hopper.

Check the seals for wear or damage every 100 hours of operation.

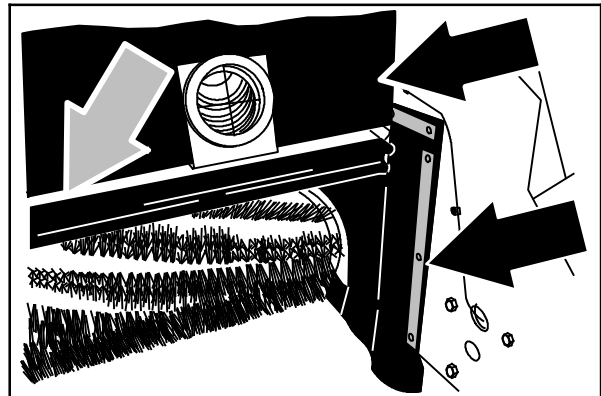


08496

## HOPPER DOOR SEALS

The hopper door seals are located on the hopper door. They seal the hopper when the hopper door is closed.

Check the seals for wear or damage every 100 hours of operation.

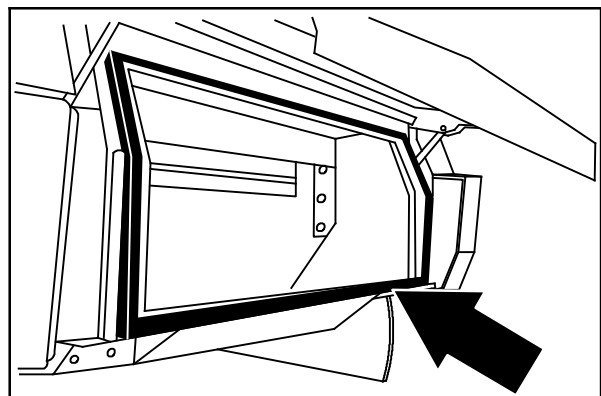


08497

## MAINTENANCE

### HOPPER SIDE SKIRT

The hopper side skirt is located on the left side of the hopper.

Check the hopper side skirt for wear or damage daily.

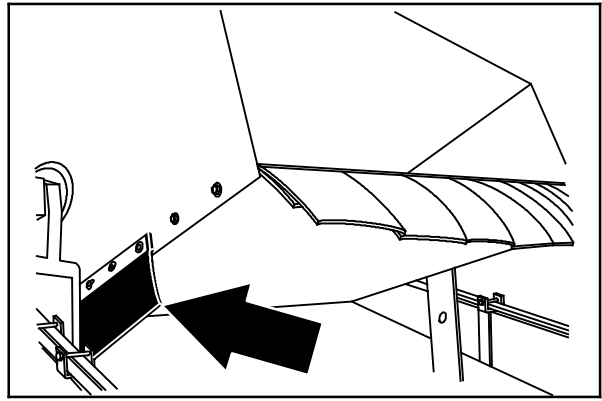


08492

### HOPPER DUST SEAL

The hopper dust seal is located inside the hopper. It seals the hopper filter compartment.

Check the seal for wear or damage every 100 hours of operation.

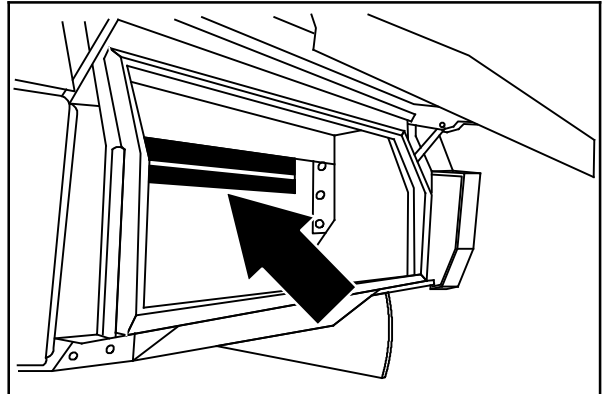


08496

### HOPPER COVER SEAL

The hopper cover seals are located on the inside of the hopper cover. They seal the hopper filter compartment.


Check the seal for wear or damage every 100 hours of operation.

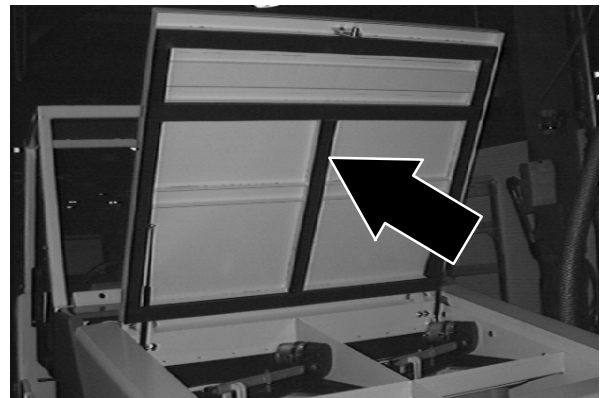

### HOPPER VACUUM FAN SEAL

The hopper vacuum fan seal is mounted on the vacuum fan inlet bracket.

Check the seal for wear or damage every 100 hours of operation.

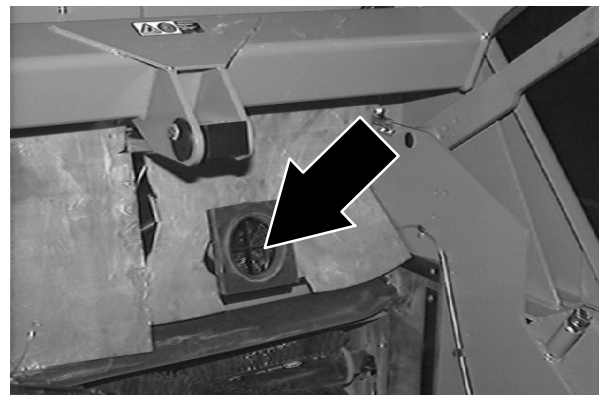


## BRAKES AND TIRES

### SERVICE BRAKES

The hydraulic service brakes are located on the front wheels.

The master brake cylinder is located on the fire wall.


Check the master brake cylinder fluid level every 400 hours of operation.

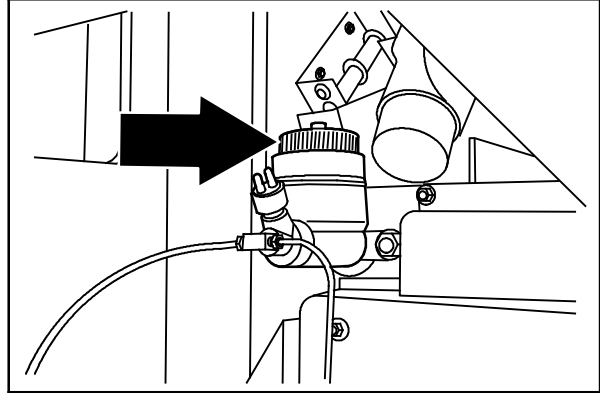

08501

### PARKING BRAKE


Adjust the parking brake whenever it becomes very easy to set, when the machine rolls after setting it, and after every 200 hours of operation.

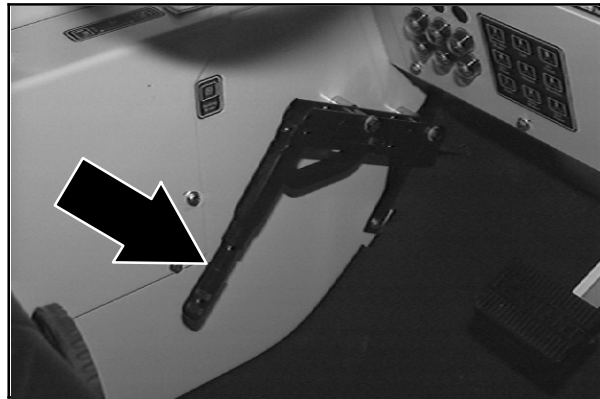

### TIRES

The standard machine tires are pneumatic.

Check the tire pressure every 100 hours of operation. The proper tire air pressure is 690 - 758 kPa (100 - 110 psi).

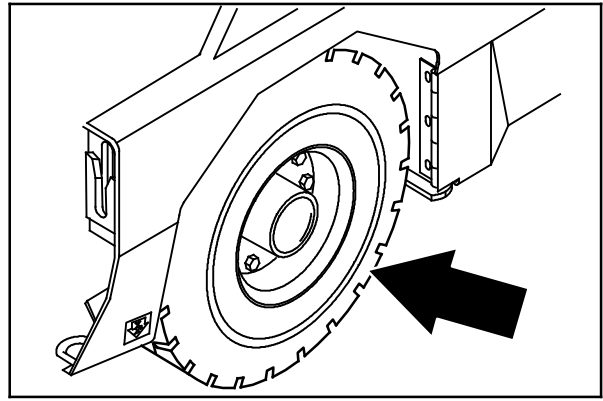


08575

### FRONT WHEEL

Torque the front wheel nuts twice in the pattern shown to 169 to 183 Nm (125 to 135 ft lb) after the first 50-hours of operation, and every 800 hours there after.

### REAR WHEEL

Torque the rear wheel nuts twice in the pattern shown to 163 to 176 Nm (120 to 130 ft lb) after the first 50-hours of operation, and every 800 hours there after.

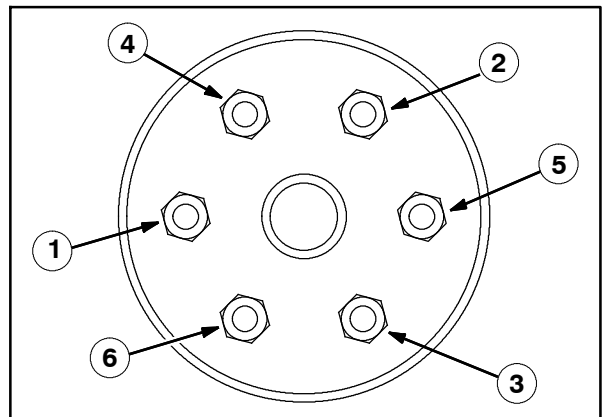

## PUSHING, TOWING, AND TRANSPORTING THE MACHINE


### PUSHING OR TOWING THE MACHINE

If the machine becomes disabled, it can be pushed from the front or rear, but towed only from the rear.


The propelling pump has a bypass valve to prevent damage to the hydraulic system when the machine is being pushed or towed. This valve allows a disabled machine to be moved for a *very short distance* and at a speed to not exceed 1.6 kp/h (1 mph). The machine is NOT intended to be pushed or towed a long distance or at a high speed.

**ATTENTION! Do not push or tow machine for a long distance and without using the bypass valve, or the machine hydraulic system may be damaged.**

Turn the bypass valve 90° from the normal position before pushing or towing the machine. **The illustration shows the bypass valve in the pushing or towing position.**

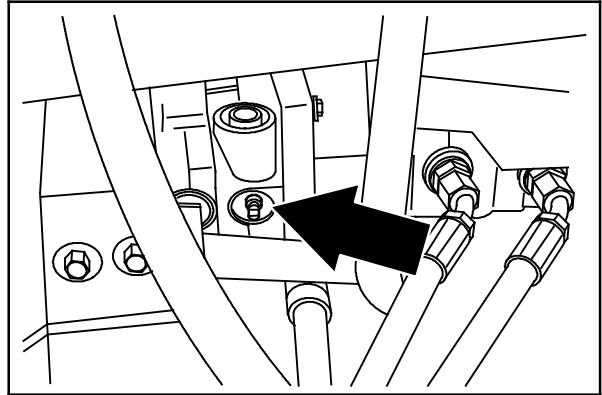

08576

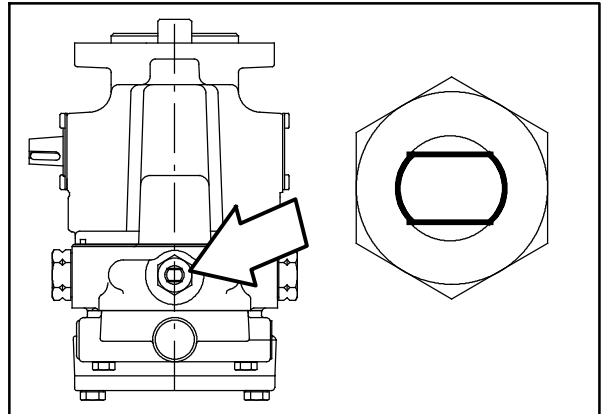

### TRANSPORTING THE MACHINE


1. Position the rear of the machine at the loading edge of the truck or trailer.

**FOR SAFETY: Use truck or trailer that will support the weight of the machine.**


*NOTE: Empty the hopper before transporting the machine.*

2. If the loading surface is not horizontal or is higher than 380 mm (15 in) from the ground, use a winch to load machine.

If the loading surface is horizontal AND is 380 mm (15 in) or less from the ground, the machine may be driven onto the truck or trailer.

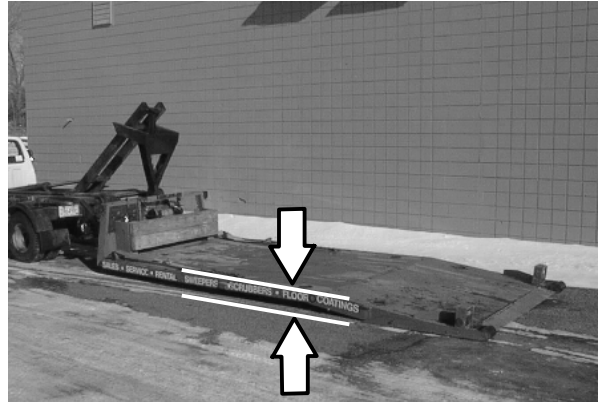

3. To winch the machine onto the truck or trailer, attach the winching chains to the rear tie down locations.

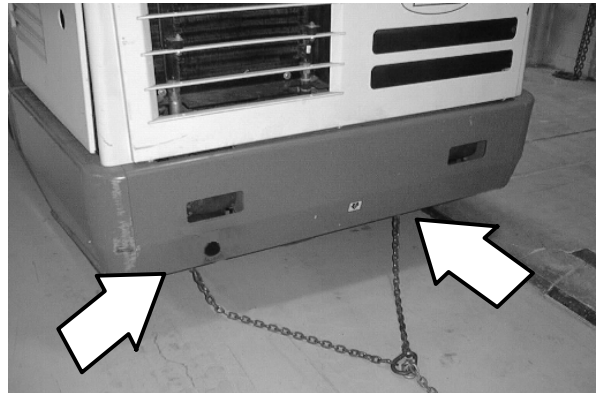


The rear tie-down locations are through the U-bolt section of the main frame under the side bumpers toward the rear.



4. Turn the bypass valve 90° from the normal position before winching the machine onto the truck or trailer. See *PUSHING OR TOWING THE MACHINE* section of this manual. Make sure the machine is centered.


**FOR SAFETY: When loading machine onto truck or trailer, use winch. Do not drive the machine onto the truck or trailer unless the loading surface is horizontal AND is 380 mm (15 in) or less from the ground.**

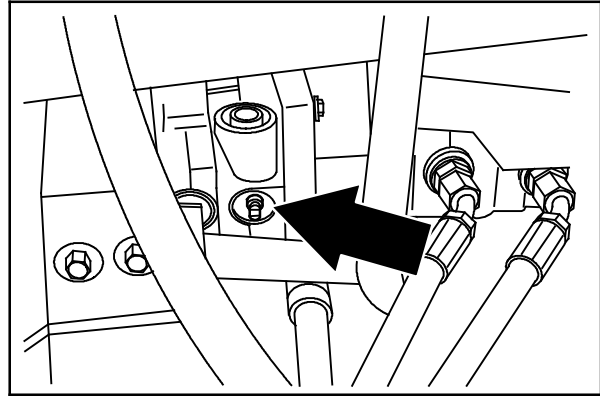


08576

5. Position the machine onto the truck or trailer as far as possible. If the machine starts to veer off the centerline of the truck or trailer, stop and turn the steering wheel to center the machine.
6. Set the parking brake and block the machine tires. Tie down the machine to the truck or trailer before transporting.

The two front tie-down locations are through the U-bolt section of the main frame in front of the wheels.

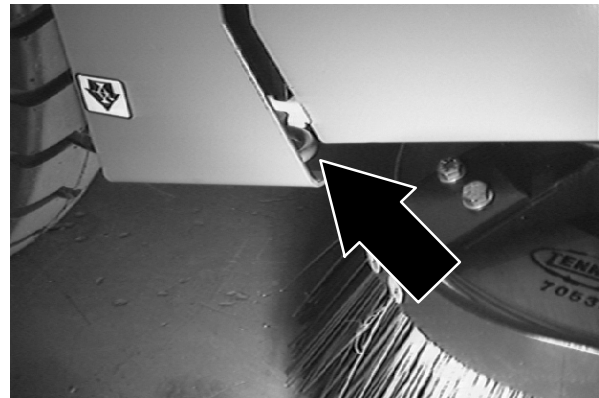

The two rear tie-down locations are through the U-bolt section of the main frame under the side bumpers toward the rear.

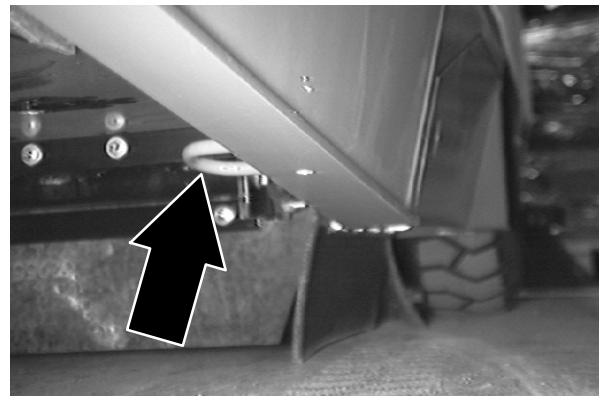

7. If the loading surface is not horizontal or is higher than 380 mm (15 in) from the ground, use a winch to unload machine.

If the loading surface is horizontal AND is 380 mm (15 in) or less from the ground, the machine may be driven off the truck or trailer.


**FOR SAFETY: When unloading machine off truck or trailer, use winch. Do not drive the machine off the truck or trailer unless the loading surface is horizontal AND 380 mm (15 in) or less from the ground.**

## MAINTENANCE

### MACHINE JACKING

Empty the hopper before jacking the machine. You can jack up the machine for service at the designated locations. Use a jack or hoist that will support the weight of the machine. Always stop the machine on a flat, level surface and block the tires before jacking the machine up.

The front jacking locations are the flat bottom edge of the machine frame next to the front tires.

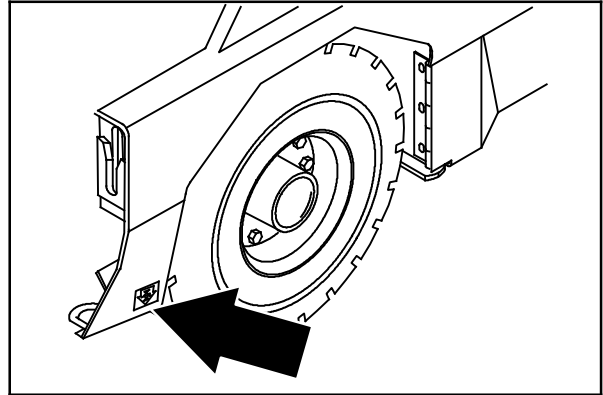


08485

The rear jacking location is the middle of the rear bumper.

**FOR SAFETY: When servicing machine, block machine tires before jacking machine up.**

**FOR SAFETY: When servicing machine, jack machine up at designated locations only. Block machine up with jack stands.**

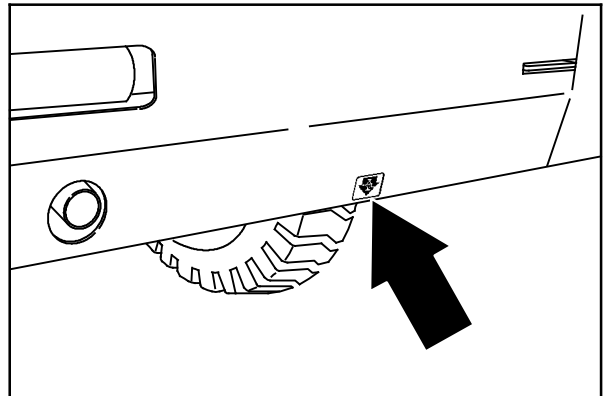

08586

### STORING MACHINE

Before storing the machine for an extended period of time, the machine needs to be prepped to lessen the chance of rust, sludge, and other undesirable deposits from forming. Contact TENNANT service personnel.

**SPECIFICATIONS**
**GENERAL MACHINE DIMENSIONS/CAPACITIES**

| Item                                                | Dimension/capacity              |
|-----------------------------------------------------|---------------------------------|
| Length                                              | 3050 mm (120 in)                |
| Width                                               | 1780 mm (70 in)                 |
| Height (top of air cleaner)                         | 1875 mm (73.8 in)               |
| Height with overhead guard                          | 2095 mm (82.5 in)               |
| Height with overhead guard and hazard light         | 2310 mm (91 in)                 |
| Height with cab                                     | 2095 mm (82.5 in)               |
| Height with cab & air conditioner                   | 2257 mm (89 in)                 |
| Height with cab and hazard light                    | 2310 mm (91 in)                 |
| Track                                               | 1560 mm (61.5 in)               |
| Wheelbase                                           | 1420 mm (56 in)                 |
| Main brush diameter                                 | 405 mm (16 in)                  |
| Main brush length                                   | 1270 mm (50 in)                 |
| Side brush diameter                                 | 65 mm (26 in)                   |
| Sweeping path width                                 | 1270 mm (50 in)                 |
| Sweeping path width with side brush                 | 1675 mm (66 in)                 |
| Sweeping path width with dual side brushes (Option) | 2100 mm (82 in)                 |
| Main brush pattern width                            | 50 to 65 mm (2.0 to 2.5 in)     |
| Hopper weight capacity                              | 907.2 kg (2000 lb)              |
| Hopper volume capacity                              | 849.5 L (30 cu ft)              |
| Dust filter area                                    | 17.7 m <sup>2</sup> (190 sq ft) |
| GVWR                                                | 4068 kg (8970 lb)               |
| Ceiling height minimum dumping clearance            | 3355 mm (11 ft)                 |

**GENERAL MACHINE PERFORMANCE**

| Item                                                    | Measure           |
|---------------------------------------------------------|-------------------|
| Maximum forward speed                                   | 16 kmh (10 mph)   |
| Maximum reverse speed                                   | 7.3 kmh (4.5 mph) |
| Minimum aisle turn width, left                          | 3450 mm (135 in)  |
| Minimum aisle turn width, right                         | 4675 mm (184 in)  |
| Maximum rated climb and descent angle (Sweeping)        | 15%               |
| Maximum rated climb and descent angle with empty hopper | 27%               |

## SPECIFICATIONS

### POWER TYPE

| Engine                   | Displacement                                                      |                            | Tennant governed power           |             |     |                 | Gross intermittent power per SAE J1995 |                 |  |
|--------------------------|-------------------------------------------------------------------|----------------------------|----------------------------------|-------------|-----|-----------------|----------------------------------------|-----------------|--|
| Ford LRG 2.3             | 2300 cc (140 cu in)                                               |                            | 37.3 kw (50 hp) @ 2400 rpm       |             |     |                 | 47 kw (63 hp) @ 2800 rpm               |                 |  |
| Ford LRG 2.5             | 2500 cc (152 cu in)                                               |                            | 40.3 kw (54 hp) @ 2400 rpm       |             |     |                 | 59 kw (79 hp) @ 3000 rpm               |                 |  |
| Ford LRG 2.3 and LRG 2.5 | Type                                                              | Ignition                   | Cycle                            | Aspirat-ion | Cyl | Bore            | LRG 2.3 Stroke                         | LRG 2.5 Stroke  |  |
|                          | Piston                                                            | Distributorless-type spark | 4                                | Natural     | 4   | 96 mm (3.78 in) | 80 mm (3.126 in)                       | 96 mm (3.78 in) |  |
|                          | Fuel                                                              |                            | Cooling system                   |             |     |                 | Electrical system                      |                 |  |
|                          | Gasoline, 87 octane minimum, unleaded. Fuel tank: 45.5 L (12 gal) |                            | Water/ethylene glycol antifreeze |             |     |                 | 12 V nominal                           |                 |  |
|                          | LPG, Fuel tank: 15 kg (33 lb)                                     |                            | Total: 16.7 L (4.4 gal)          |             |     |                 | 50 A alternator                        |                 |  |
|                          |                                                                   |                            | Radiator: 6.2 L (1.6 gal)        |             |     |                 |                                        |                 |  |
|                          | (Start) governed speed                                            |                            | (Low) governed speed             |             |     |                 | (High) governed speed                  |                 |  |
|                          | 1475 ± 50 rpm                                                     |                            | 2000 ± 50 rpm                    |             |     |                 | 2400 ± 50 rpm                          |                 |  |
|                          | Spark plug gap                                                    |                            |                                  |             |     |                 | Firing order                           |                 |  |
|                          | 1 mm (0.042 in)                                                   |                            |                                  |             |     |                 | 1-3-4-2                                |                 |  |
|                          | Engine lubricating oil with filter (10W30 SAE- SG/SH)             |                            |                                  |             |     |                 |                                        |                 |  |
|                          | Ford LRG 2.5 - 4.26 L (4.5 qt)                                    |                            |                                  |             |     |                 | Ford LRG 2.3 - 4.7 L (5 qt)            |                 |  |

| Engine           | Displacement                                                      |                         | Tennant governed power                                                   |             |     |                  | Gross intermittent power per SAE J1995 |
|------------------|-------------------------------------------------------------------|-------------------------|--------------------------------------------------------------------------|-------------|-----|------------------|----------------------------------------|
| GM 3L Powertrain | 3000 cc (181 cu in)                                               |                         | (LPG) 49.1 kw (65.8 hp) @ 2400 rpm<br>(GAS) 50.6 kw (67.9 hp) @ 2400 rpm |             |     |                  | 61.9 kw (83 hp) @ 3000 rpm             |
|                  | Type                                                              | Ignition                | Cycle                                                                    | Aspirat-ion | Cyl | Bore             | Stroke                                 |
|                  | Piston                                                            | Solid state distributor | 4                                                                        | Natural     | 4   | 102 mm (4.00 in) | 92 mm (3.6 in)                         |
|                  | Fuel                                                              |                         | Cooling system                                                           |             |     |                  | Electrical system                      |
|                  | Gasoline, 87 octane minimum, unleaded. Fuel tank: 45.5 L (12 gal) |                         | Water/ethylene glycol antifreeze                                         |             |     |                  | 12 V nominal                           |
|                  | LPG, Fuel tank: 15 kg (33 lb)                                     |                         | Total: 10 L (2.7 gal)                                                    |             |     |                  | 70 A alternator                        |
|                  |                                                                   |                         | Radiator: 6.2 L (1.6 gal)                                                |             |     |                  |                                        |
|                  | (Start) Idle Speed, no load                                       |                         |                                                                          |             |     |                  | (High) governed speed                  |
|                  | 1350 $\pm$ 50 rpm<br>(machines serial number 004937- 005999)      |                         |                                                                          |             |     |                  | 2400 $\pm$ 50 rpm                      |
|                  | 950 $\pm$ 50 rpm<br>(machines serial number 006000 and above)     |                         |                                                                          |             |     |                  |                                        |
|                  | Spark plug gap                                                    |                         |                                                                          |             |     | Firing order     |                                        |
|                  | 1 mm (0.042 in)                                                   |                         |                                                                          |             |     | 1-3-4-2          |                                        |
|                  | Engine lubricating oil with filter (10W30 SAE- SG/SH)             |                         |                                                                          |             |     |                  |                                        |
|                  | 4.7 L (5 qt)                                                      |                         |                                                                          |             |     |                  |                                        |

**STEERING**

| Type                                                       | Power source             | Emergency steering |
|------------------------------------------------------------|--------------------------|--------------------|
| Rear wheel, hydraulic cylinder and rotary valve controlled | Hydraulic accessory pump | Manual             |

**HYDRAULIC SYSTEM**


| System              | Capacity          | Fluid Type                         |
|---------------------|-------------------|------------------------------------|
| Hydraulic reservoir | 47.3 L (12.5 gal) | ISO Grade 100 - above 7° C (45° F) |
| Hydraulic total     | 56.8 L (15 gal)   | ISO Grade 32 - below 7° C (45° F)  |

**BRAKING SYSTEM**


| Type           | Operation                                                                            |
|----------------|--------------------------------------------------------------------------------------|
| Service brakes | Hydraulic drum brakes (2), one per front wheel, foot brake master cylinder activated |
| Parking brake  | Utilize service brakes, cable actuated                                               |

**TIRES**


| Location  | Type      | Size          | Pressure                      |
|-----------|-----------|---------------|-------------------------------|
| Front (2) | Pneumatic | 6.5 x 23.5 in | 690 - 758 kPa (100 - 110 psi) |
| Rear (1)  | Pneumatic | 6.5 x 23.5 in | 690 - 758 kPa (100 - 110 psi) |

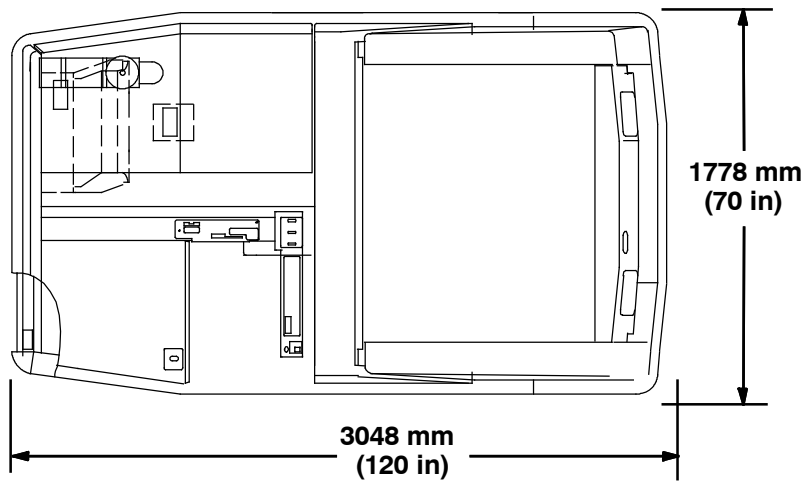

TOP VIEW

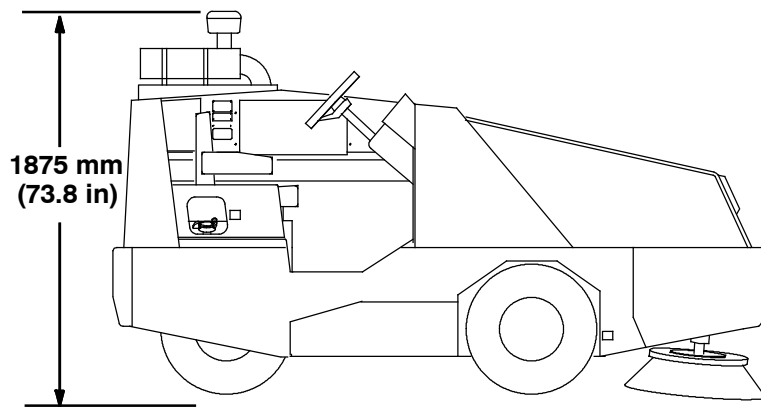

SIDE VIEW

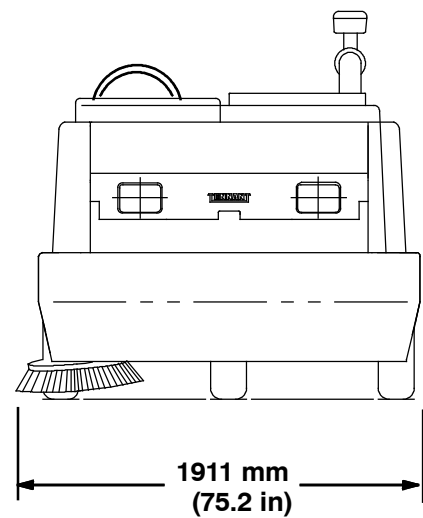

FRONT VIEW

## MACHINE DIMENSIONS

08774

**A**

Air conditioning system (option)  
 belt, 72  
 filter, 72–73  
 switch, 34

Air control vents (option), 34

Air filter  
 dust cap, 68  
 element, 68

Air filter indicator, 68

Air filter system, 68  
 heavy duty SE filter, 68

Aisle turn, 89

**B**

Battery, 71  
 charging system light, 20

Belts, 71  
 air conditioning (option), 72  
 engine fan belt, 71

Brake pedal, 15

Brake, parking, 83

Brakes, 35, 49, 83  
 service, 83  
 system specifications, 91

Brush & sweeping information, 40

Brush door skirts, 80

Brush doors, latch, 31

Brushes, 75  
 adjusting main brush taper, 78–80  
 checking main brush pattern, 76–78  
 checking side brush pattern, 79  
 door seals, 81  
 main brush, 75  
 main brush minimum bristle length, 75  
 Maintenance, 35, 49  
 Pattern adjustment, 35, 49  
 replacing main brush, 75–77  
 replacing side brush, 79  
 side brush, 79  
 side brush minimum bristle length, 79

Bypass valve, 85

**C**

Capacities, 89

Chain, static drag, 71

Chains, 71

Check engine light, 25

Choke, engine (FORD), 30

Circuit breakers, 28

Control panel  
 charging system light, 20  
 clogged filter light, 21  
 engine oil pressure light, 20  
 engine water temperature light, 20  
 fuel level gauge, 21  
 hopper door light (option), 21  
 hopper temperature light, 20  
 hourmeter, 22  
 main brush shut down light, 21

Control panel symbols, 10

Controls, 12  
 air conditioning switch (option), 34  
 air control vents (option), 34  
 brake pedal, 15  
 Check engine light, 25  
 directional pedal, 14  
 dome light switch, 33  
 engine choke knob (FORD), 30  
 engine speed switch, 24  
 fan speed switch (option), 34  
 filter shaker switch, 23

Fuses, 29  
 hazard light switch (option), 22  
 heater knob, 33  
 hopper door lever, 17  
 hopper lift lever, 19  
 hopper rollout lever, 18  
 horn button, 19  
 ignition switch, 25  
 main brush down pressure knob, 31  
 main brush switch, 26  
 operating lights switch, 22  
 operation, 14  
 parking brake, 15  
 side brush down pressure knob, 16  
 side brush switch, 16  
 steering wheel, 27  
 steering wheel tilt lever, 27  
 vacuum fan switch, 23  
 windshield wiper switch (option), 33

Crankcase ventilation system, 70

**D**

Debris hopper, 73–74  
Dimensions, 89  
Directional pedal, 14  
    toe adjustment, 15  
Dome light switch, 33  
Dust filter, 73  
    cleaning, 73  
    replacement, 73–74

**E**

Electrical system  
    circuit breakers, 28  
    Fuses, 29  
    ignition switch, 25  
    spark plugs, 70  
Electronic Fuel Injection (GM), 69  
Electronic Pressure Regulator, 69  
Engine, 67  
    Air filter, 35, 49  
    air filter, 68  
    air filter indicator, 68  
    choke knob, 30  
    Coolant level, 35, 49  
    cooling system, 67  
    crankcase ventilation system, 70  
    Electronic fuel injection (GM), 69  
    Electronic Pressure Regulator, 69  
    fan belt, 71  
    fuel filter (gasoline), 69  
    fuel filter (lpg), 69  
    Fuel level, 35, 49  
    intake manifold, 70  
    lubrication, 63  
    oil capacity, 63  
    Oil level, 35, 49  
    oil level, 7  
    oil pressure light, 20  
    spark plugs, 70  
    specifications, 90  
    speed switch, 24  
    timing belt, 70  
    water temperature light, 20  
Engine cover, latch, 31  
Engine side door, latch, 31

**F**

Fan speed switch (option), 34  
Filter, air conditioning (option), 72–73  
Filter shaker switch, 23

**Filters**

    hopper dust, 73  
    hopper dust filter replacement, 73–74  
    hopper filter cleaning, 73  
    Regenerative Filter System (RFS) (option), 58–59

Front wheel, 84

Fuel filter (GASOLINE), 69

Fuel filter (LPG), 69

Fuel level gauge, 21

Fuel tank, changing LPG tank, 36–37

Fuses, 29

**H**

Hazard light switch, 22

Heater knob, 33

Hopper, 73–74  
    changing dust filter, 73–74  
    clogged filter light, 21  
    cover seal, 82  
    door lever, 17  
    door light (option), 21  
    door seals, 81  
    dust filter, 73  
    dust seal, 82  
    emptying, 45–46  
    filter cleaning, 73  
    filter shaker, 23  
    lift lever, 19  
    lip skirts, 80  
    rollout lever, 18  
    seals, 81  
    side skirt, 82  
    support bar, 32  
    support bar disengagement, 52–53  
    support bar engagement, 50–51  
    Thermo Sentry, 20, 75  
    vacuum fan seal, 82

Hopper cover, latch, 31

Hopper door, operation, 17

Hopper door lever, 17

Hopper lift lever, 19

Hopper rollout lever, 18

Hopper support bar, 32

Horn button, 19

Hourmeter, 22

Hydraulic cooler, Fins, 35, 49

Hydraulic fluid, 66

Hydraulic fluid reservoir, 65

Hydraulic hoses, 67

Hydraulic system  
 fluid, 66  
 fluid filter, 66  
 fluid level, 65  
 fluid reservoir, 65  
 propelling motor, 67

Hydraulics  
 Fluid level, 35, 49  
 fluid level, 7  
 hoses, 67  
 system specifications, 91

## I

Ignition switch, 25

Intake manifold (FORD), 70

## J

Jack points, 88

## K

Knobs  
 choke, engine (FORD), 30  
 heater, 33  
 main brush down pressure, 31  
 side brush down pressure, 16

## L

Latches, 31  
 engine cover, 31  
 engine side door, 31  
 hopper cover, 31  
 main brush doors, 31  
 rear bumper door, 31  
 rear door, 31

Levers  
 hopper door, 17  
 hopper lift, 19  
 hopper rollout, 18  
 parking brake release, 15  
 steering wheel tilt, 27

Lights  
 battery charging system, 20  
 Check engine, 25  
 clogged filter, 21  
 engine oil pressure, 20  
 engine water temperature, 20  
 hopper door (option), 21  
 hopper temperature, 20  
 main brush shut down, 21

LPG, changing fuel tank, 36–37

LPG fuel tank, changing, 36–37

Lubrication  
 engine, 63  
 front wheel bearings, 64  
 main brush adjustment, 64  
 rear wheel support, 63  
 side brush pivot pins, 64

## M

Machine components, 9

Machine dimensions, 92

Machine jacking, 88

Machine storage, 88

Machine tie down location, 87

Machine troubleshooting, 59

Main brush, 75–78  
 adjusting taper, 78–80  
 checking brush pattern, 76–78  
 door seals, 81  
 door skirts, 80  
 down pressure knob, 31  
 information, 40–41  
 maintenance, 75  
 replacement, 75–77  
 shut down light, 21  
 switch, 26

Main brush adjustment, lubrication, 64

Main brush down pressure knob, 31

Main brush switch, 26

Maintenance chart, 61–62

Motors, propelling, 67

## O

Oil capacity, engine, 63

Operating lights switch, 22

Operation  
 hopper emptying, 45–46  
 how the machine works, 35  
 post-operation checklist, 49  
 pre-operation checklist, 35–36  
 starting the machine, 37–38  
 stop sweeping, 44  
 stopping the machine, 47–48  
 sweeping, 42–43

Operation of controls, 14

Operator responsibility, 7

Operator seat, 32

## Options, 54–61

- air conditioning switch, 34
- air control vents, 34
- dome light switch, 33
- fan speed switch, 34
- hazard light switch, 22
- heater knob, 33
- hopper door light, 21
- Regenerative Filter System (RFS), 58–59
- vacuum wand, 54–59
- windshield wiper switch, 33

## P

### Parking brake, 15

- adjustment, 83

### Pedals

- brake, 15
- directional, 14

### Pushing machine, 85

### Pushing or towing the machine, 85

### Pushing, towing, and transporting machine, 85

## R

### Radiator, 68

- coolant level, 8, 67
- coolant type, 67
- Fins, 35, 49
- flushing the system, 68
- hoses, 68

### Rear bumper door latch, 31

### Rear door latch, 31

### Rear wheel, 84

### Rear wheel support, lubrication, 63

### Regenerative Filter System (RFS) (option), 58–59

## S

### Safety

- hopper support bar disengagement, 52–53
- hopper support bar engagement, 50–51
- labels, 5
- precautions, 3

### Seals, 80–82

- brush door, 81
- hopper, 81
- hopper cover, 82
- hopper door, 81
- hopper vacuum fan, 82
- hopper, dust, 82

### Seat, operator, adjustment, 32

### Service records, 35, 49

### Side brush, 79

- checking brush pattern, 79
- down pressure knob, 16
- information, 41
- minimum bristle length, 79
- replacement, 79
- switch, 16

### Side brush pivot pins, lubrication, 64

### Skirts, 80–81

- brush door, 80
- hopper Lip, 80
- hopper, side, 82
- rear, 81

### Skirts and seals, 35, 49

### Spark plugs, 70

### Specifications

- braking system, 91
- climb & descent angle, 89
- dumping clearance height, 89
- hydraulic system, 91
- machine capacities, 89
- machine dimensions, 89
- machine performance, 89
- power type, 90
- steering, 91
- tires, 91

### Speed switch, engine, 24

### Static drag chain, 71

### Steering, 35, 49

- specifications, 91

### Steering wheel, 27

### Steering wheel tilt lever, 27

### Storing machine, 88

### Sweeping, 42–43

### Sweeping & brush information, 40

### Switches

- air conditioning (option), 34
- dome light (options), 33
- engine speed, 24
- fan speed (option), 34
- filter shaker, 23
- hazard light (option), 22
- ignition, 25
- main brush, 26
- operating lights, 22
- side brush, 16
- vacuum fan, 23
- windshield wiper (option), 33

**T**

Thermo Sentry, 75

Tie down location, 87

Timing belt (FORD), 70

Tires, 83–85

- Front wheel, 84

- pressure, 84

- rear wheel, 84

- specifications, 91

Towing machine, 85

Transporting machine, 85

Transporting the machine, 86

Travel speed, 89

Troubleshooting, 59

**V**

Vacuum fan switch, 23

Vacuum wand (option), 54–59

Vents, air control, 34

**W**

Wheel bearings, front, lubrication, 64

Windshield wiper switch, 33

